





Step 3

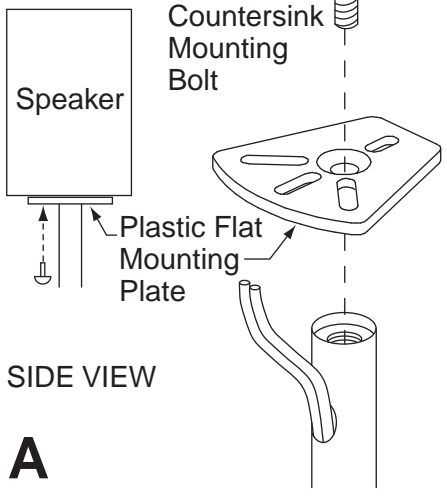

OR

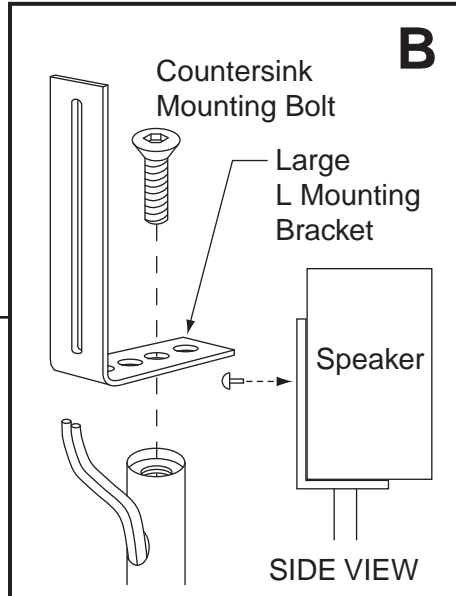


OR

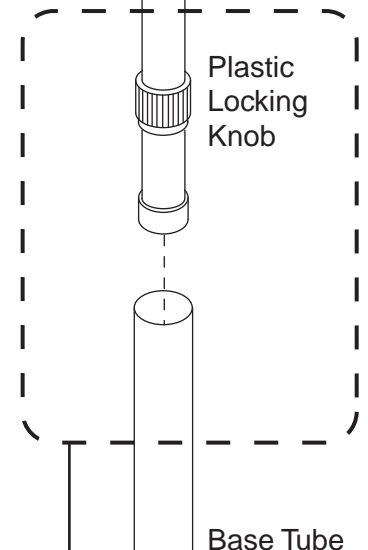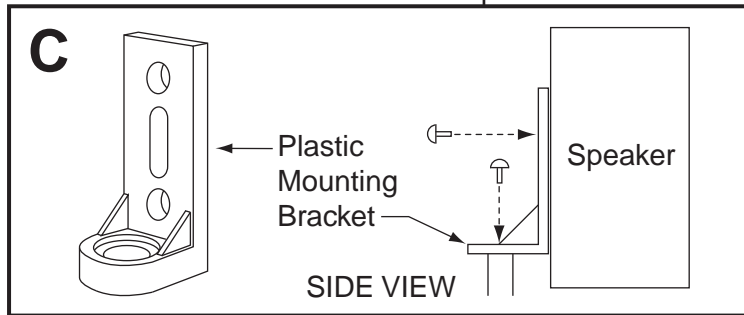


PART LIST

- 2 Wood bases
- 2 Base tubes
- 2 Top tubes
- 2 Plastic locking knobs
- 8 Carpet spikes with locking nuts and protective caps
- 2 Plastic flat mounting plates
- 2 Plastic mounting brackets
- 2 Adhesive pads
- 2 Black bolts with washers
- 2 Large L mounting brackets
- 2 Countersink mounting bolts for plastic brackets/plates
- 2 Countersink mounting bolts for Large metal L brackets

Step 2

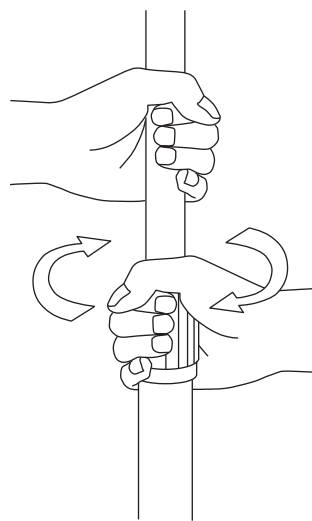

Step 1

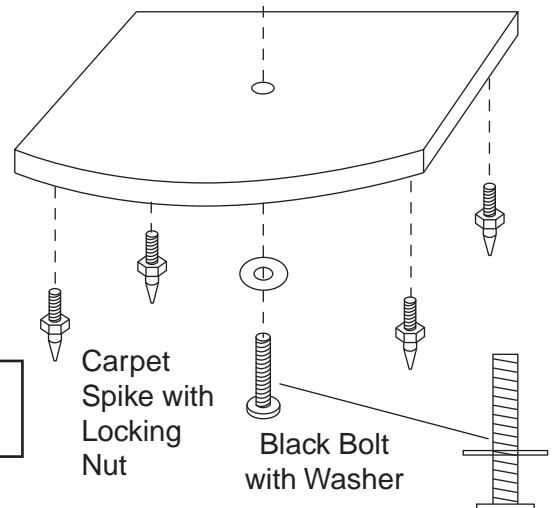

G-5 Speaker Stand Assembly Instructions

Step #1

Turn the base of the speaker stand upside down and insert the brass carpet spikes by threading them into the threaded inserts in the wood base as shown here. There are locking nuts on the carpet spikes. Once you get the spikes at the position you want, thread the nut down against the base plate to lock the spike in place. Note that there are plastic protective caps included should you choose to use the carpet spikes on hardwood or tile floors. These caps go under the carpet spikes to cover the sharp point of the carpet spikes on these types of surfaces.

Next attach the upright tube to the base with one bolt and washer as shown here. Then turn the partially assembled stand right side up and proceed to step 3.

Step #2

Now insert the smaller upright tube into the larger base tube and lock in place by gently rotating the plastic locking knob down and clockwise until the tubing is securely held at the height you desire. To release the fitting simply rotate it with a twisting upward motion. Note that this fitting is pressure sensitive fitting. It does not thread onto the tubing. It simply press fits between the two tubes. The more pressure you apply the stronger the fitting will hold the tubing.

Step #3

At this time you have a choice of using the flat mounting plate or the mounting bracket. For the mounting plate simply attach with one bolt as shown here. The mounting plate has holes in it for using bolts/screws that may have come with your speakers. You may also use the double faced adhesive pad (provided). To use this pad, remove the paper liner on one side of the tape pad and attach it to the plastic plate with firm pressure. The pad will attach more securely as time passes. We recommend that you wait 12 hours before putting your speaker on the pad. After such time as passed, remove the top liner on the pad and then place your speaker on the stand so it is equally balanced on the stand and gently but firmly press it in contact with the pad. Should you need to remove your speaker gently rock the speaker side to side until it releases from the pad. Never use tools to accomplish this task as this may damage your speaker or the mounting plate.

If you choose the plastic mounting brackets or the large metal L brackets, simply attach the brackets to the stands with bolts provided and then place your speakers on the brackets and secure in place with bolts provided with your speakers (see illustration Step 3B and 3C). Should you need further assistance, please call us at 800-887-8834, 8am to 5pm PST M-F.

The final step is to attach your speaker wire or cable to the speaker and thread the wire through the stand starting in the hole in the upright tubing just under the flat mounting plate or bracket. The wiring should exit the bottom of the base tube just above the wood base on the top.

For safety do not place the stands in areas with excessive foot traffic, pets or small children. Dispose of all packing materials immediately after assembly.

Limited Lifetime Warranty

Congratulations for choosing StudioTech product.

StudioTech is a premier Audio/Video Furniture manufacturer and we offer a full line of Audio/Video Furniture. The product you have just purchased has been designed and manufactured with great care and attention to detail. We are pleased to offer you a Limited Lifetime Warranty on this product as outlined below.

Lifetime Warranty

StudioTech Inc., warrants to the original retail purchaser, that this product is to be free from defective materials and workmanship, when used in normal applications, for the life of the product. StudioTech warrants that it will repair or replace, at its option, any such defective product at no charge for parts or labor provided the product is delivered intact by the owner, postage prepaid to StudioTech. Inspection must disclose that all defects are as specified. If you are not registered in our Customer Care Program, Proof of Purchase is required.

Limitations:

This warranty is limited to this StudioTech product and specifically excludes consequential damages to other components or premises which may result for any reason from the failure of the product. This warranty is null and void for products not used in accordance with StudioTech's instructions and shall also be null and void for products misused, neglected, abused, modified, altered or damaged by accident or otherwise not in accordance with StudioTech's instructions. This warranty does not cover cosmetic damage including paint damage by accidental or normal wear during use.

StudioTech assumes no liability for any costs or fees incurred for any services performed where nothing is wrong with the product, nor does StudioTech cover the cost of set up, installation, or adjustment. This warranty does not cover time, transportation or compensate for inconvenience or loss of the product.

Some states do not allow limitations on how long a warranty applies and/or exclusions or limitations of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights which vary from state to state. THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR OTHERWISE. STUDIOTECH, INC. SHALL IN NO CASE BE RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OTHER THAN SET FORTH ABOVE.

Returns:

In the event you should suspect this StudioTech product may be defective in the course of the warranty period, you must contact StudioTech to receive Return Authorization. We will either ship you a replacement part for your product or we will issue an RA for you to return the product to us. Once you have received Return Authorization, you are responsible for delivery of product with a copy of the completed return authorization form and the original Bill of Sale, postage prepaid to StudioTech for repair or replacement. Remember to pack all parts carefully and in the original carton if possible and mark the RA # clearly on the outside of the carton near the address label. We suggest you insure the package as StudioTech is not responsible for damage caused in shipment while product is in transit to StudioTech or by improper packaging. Additional charges may be added to product which requires new packaging materials for return shipment. No returns will be accepted without proper Return Authorization from StudioTech. This authorization may not be given by any other party. Unauthorized returns will be refused and the purchaser will be liable for shipping charges in both directions. Repaired product will be shipped back to you postage prepaid within the continental U.S.A. StudioTech reserves the right to make changes in product design and specifications at any time.

Thank you again for purchasing StudioTech products.