

WOOD TECHNOLOGY

METAL TECHNOLOGY

TV-RISER ASSEMBLY INSTRUCTIONS

Thank you for purchasing Wood Technology's TV RISER. This product is constructed of solid hardwood and manufactured in our USA factory.

A word of precaution: Do not exceed the weight capacity of your TV stand.
If you are setting this product on glass, make certain it is tempered.
This product is recommended for TV's weighing up to 100 pounds.

The following are instructions for assembly.


1. Insert three cam-locks into large holes (until flush) on each of the two (SP) side panels. Make certain the arrows are pointing up towards pre-drilled cam-bolt holes.
2. Screw six cam-bolts (CB) into pilot holes on the underside of the (TP) top. Make certain the cam-bolts are straight. You may need to tap them with a hammer to straighten the out, once you've inserted them.
3. Line up three cam-bolts into the pilot holes of either (SP) side panel and push in place. Make certain to cam-locks are facing inside. Repeat this procedure with the other side panel.
4. Turn each cam-lock a half turn clockwise to tighten.
5. Install rubber pads on the bottom of each side panel.

Parts list:

Quantity	Description
1	Top (TP)
2	Side panels (SP)
6	Cam-bolts (CB)
6	Cam-locks
4	Rubber pads



Cam-lock

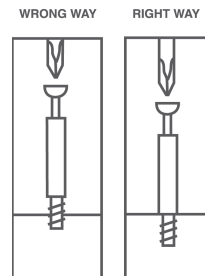

Cam-bolts

