 


COLDHEAT™ FREESTYLE™ Quick Start Guide


1. Charge the battery (fully charge before first use)

- Insert battery into charger and plug charger into outlet
- Green LED will turn solid when charging is complete
- NOTE: Capacity will continue to increase for the first 3-4 charge cycles.*

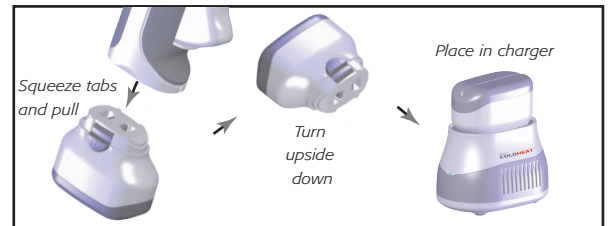


2. Insert Glue

- Insert .28-.30 inch (7.2 - 7.5 mm) all-purpose or low temperature glue stick into the back of the gun.
- For best results and maximization of battery life, use ColdHeat™ brand glue sticks.
- Add a glue stick when previous stick is advanced beyond the trigger mechanism as seen through the clear window.

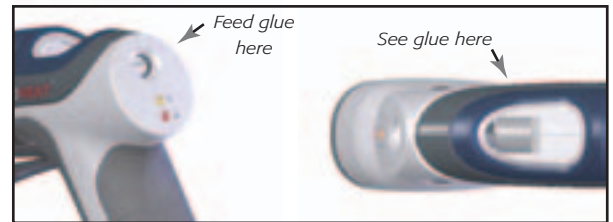

3. Glue Gun Technique & Features

- Allow gun to heat up for 1-2 minutes (depending on battery charge).
- Apply glue to work surfaces by pulling trigger.
- Hold Surfaces together until glue has hardened: 20-30 seconds.
- Continue operation until low battery condition is signaled by illumination of Low Battery Light.

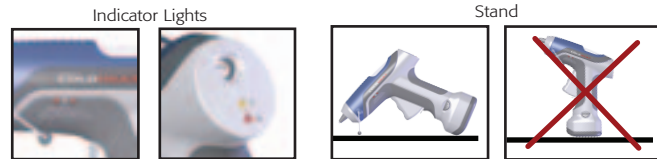

- ☹ Power on, Project Light-High
- ☹ Power on, Project Light-Low
- ☹ Powersave Light
- ☹ Low Battery Light

NOTE: Glue flow is the same in both settings

Please use the stand when setting the gun down for any period of time.

4. Powersave Mode

This feature prolongs useful battery life. If gun is left unused for more than 8 minutes, the heating element will automatically shut down and the amber Powersave Light will illuminate. The white Project Light will also remain on, but glue will not be heated. To bring unit out of Powersave Mode, simply pick up or move the gun and it will begin to heat up. When there is less than 15% battery life left, gun will not go into Powersave Mode (when battery power is low, effective usage time will be longer if glue remains heated).

Project Light (front of tool)	Powersave Light	Low Battery Light	Meaning
Off	Off	Off	Gun is off.
On	Off	Off	Gun is on and heating.
On	On	Off	Gun is in Powersave Mode (see below)
On	Off	Solid	Gun is on and heating, battery is nearly discharged.
On	Off	Flashing	Battery is fully discharged. Gun should be turned off.