

American Standard


Installation Instructions

3808.101 SERIES

JASMINE

AMARILIS

LAVATORY FAUCET

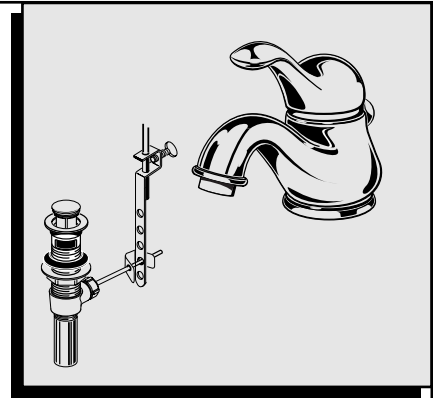


Certified to comply with ANSI A112.18.1

Thank you for selecting American-Standard...the benchmark of fine quality for over 100 years.

To ensure that your installation proceeds smoothly--please read these instructions carefully before you begin.

51314A

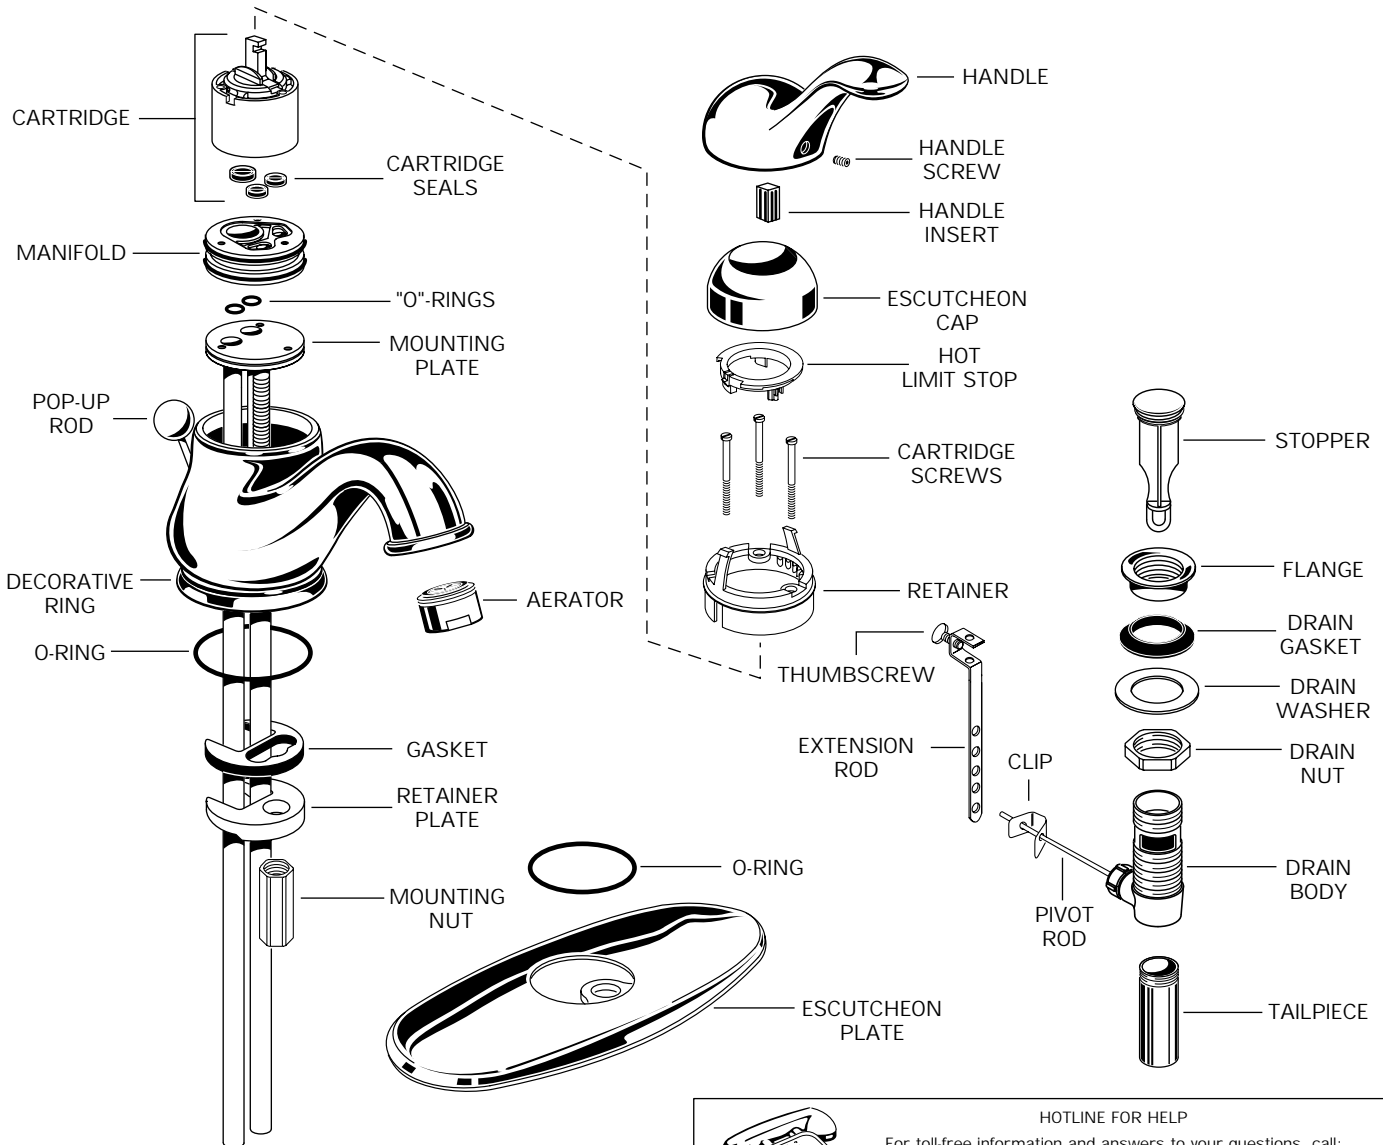

HOTLINE FOR HELP

For toll-free information and answers to your questions, call:

1 (800) 223-0068

Weekdays 8:00 a.m. to 7:00 p.m. Eastern Time


Saturdays 8:00 a.m. to 4:00 p.m. Eastern Time

Product names listed herein are trademarks of American Standard Inc.
©American Standard Inc. 1996

1 FAUCET INSTALLATION


CAUTION Turn off hot and cold water supplies before beginning.

- For installation with DECORATIVE RING (single hole installation) feed faucet through O-RING and through DECK.
- For installation with ESCUTCHEON PLATE (for 3 hole, 4" centers installation) use the following steps:
 - Remove O-RING and unscrew DECORATIVE RING.
 - Apply putty to underside of ESCUTCHEON PLATE and place over holes in SINK DECK with tab towards front.
 - Feed faucet tubes through O-RING supplied with ESCUTCHEON PLATE and through the hole in the ESCUTCHEON and through DECK.
- From below, push GASKET and RETAINER PLATE over stud and secure with NUT, pushing faucet to front of sink, so STUD rests against sink hole. Before final tightening, adjust faucet so that it is centered over mounting hole.
- Carefully bend and/or cut supply tubes and connect left tube to HOT water and right tube to COLD water supply using appropriate connectors.

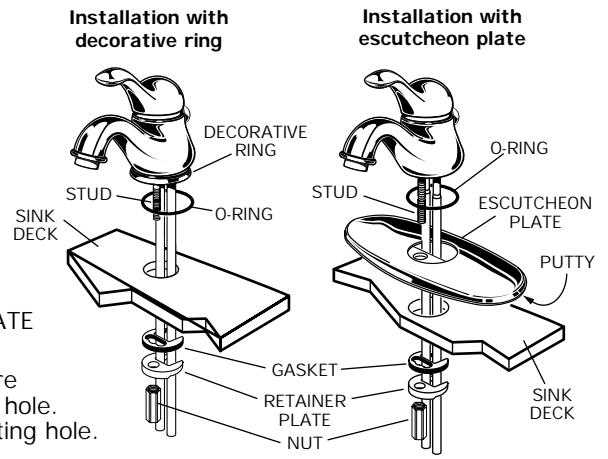


2 INSTALL POP-UP DRAIN

- Push TAILPIECE down into TRAP (threaded end up).
- Thread LOCKNUT, WASHER and GASKET onto DRAIN BODY.
- Apply a bead of PUTTY to underside of FLANGE.
- Feed DRAIN BODY up through SINK and thread FLANGE fully onto BODY.
- Tighten LOCKNUT firmly, keeping the PIVOT ROD pointed towards the back of the SINK.
- Drop STOPPER into DRAIN BODY.
- Pull TAILPIECE up and thread tightly into DRAIN BODY.

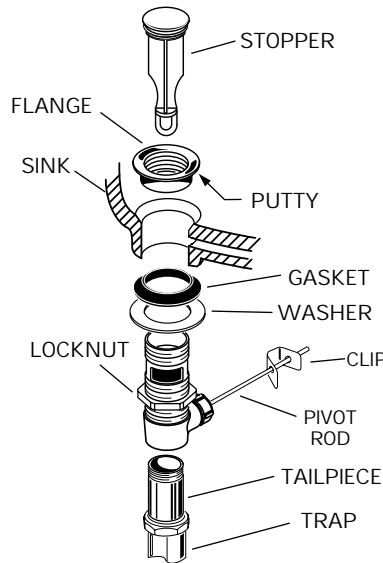

- Position EXTENSION ROD onto POP-UP ROD and tighten THUMBSCREW.
- Remove one end of CLIP from PIVOT ROD by squeezing ends together while sliding.
- Insert PIVOT ROD into second or third hole in EXTENSION and reassemble CLIP. (EXTENSION may need to be bent.)

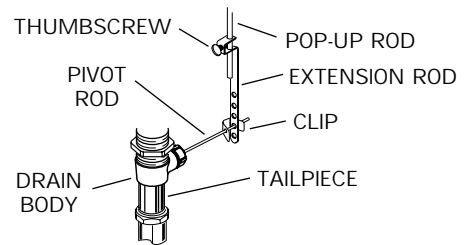

- Adjust STOPPER height by repositioning EXTENSION and tightening THUMBSCREW.

3 TEST FAUCET



- Remove AERATOR.
- Turn on water supplies and check for leaks.

- Operate HANDLE up and down, and left and right and check for proper operation.
- Flush lines and reinstall AERATOR.

4 ADJUST HOT LIMIT STOP

By restricting handle rotation and limiting the amount of hot water allowed to mix with the cold, the HOT LIMIT SAFETY STOP reduces risk of accidental scalding. To set the maximum hot water temperature of your faucet, all you need to do adjust the setting on the HOT LIMIT SAFETY STOP.

- Remove HANDLE, CAP and HOT LIMIT STOP. Follow "A" or "B" to adjust maximum discharge temperature.

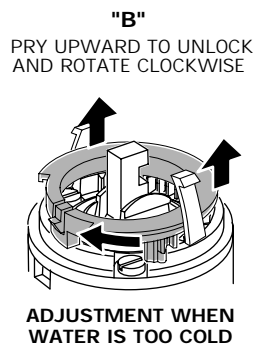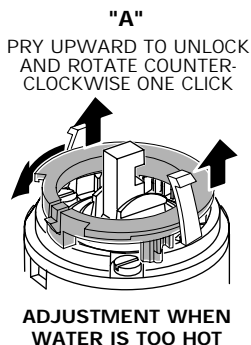

5 SERVICE

- If faucet drips, operate handle several times from "off" to "on". Do not apply excessive force.
- Clogged CARTRIDGE inlets may cause reduced flow in "full on" hot or cold. To clean inlets, first turn off water supply, then:
 - Remove HANDLE, CAP, HOT LIMIT STOP and CARTRIDGE. Clean inlets and MANIFOLD.
 - Reassemble CARTRIDGE, alternately tightening screws. Replace HOT LIMIT STOP, CAP and HANDLE. Check flow.

