


STORAGE AND CLEANING

Dismantling Your Mobile For Storage

1. Detach the mobile unit from the arm unit by pressing the push-button (5A) on the underside of the core unit, and turning in a clockwise direction. Remove the mobile from the arm unit.
2. Remove the arm unit (4) by pressing on the **release button** (1B) on the back of the music box.
3. Separate the two parts of the arm by gently pulling them apart, and folding in two.
4. Your baby can continue enjoying the music after the mobile is removed from the crib. Simply leave the music box attached.
5. If you wish to remove the music box, turn the nut in a counter clockwise direction to release from the crib.
6. Return all the pieces of the mobile to the original box for storage.

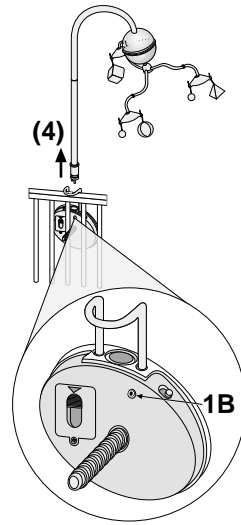

Cleaning And Caring For Your Mobile

- ✦ Use a damp cloth to wipe clean.
- ✦ Do not immerse in water.
- ✦ Remove the batteries for long-term storage.

And Don't Forget These SAFETY Rules:

- ✦ Always attach all provided fasteners tightly to the crib or playpen according to the instructions. Check frequently.
- ✦ Do not add additional strings or straps to attach to the crib or playpen.
- ✦ If attached to the crib or playpen, remove when baby begins to push up on hands and knees.
- ✦ This crib mobile is intended for visual stimulation and is not intended to be grasped by a child.
- ✦ Batteries should be replaced by adults only.
- ✦ Do not mix old and new batteries.
- ✦ Non-rechargeable batteries are not to be recharged.
- ✦ Rechargeable batteries are to be removed from the toy before being charged.
- ✦ Rechargeable batteries are only to be charged under adult supervision.
- ✦ Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- ✦ Exhausted batteries are to be removed from the toy.
- ✦ Do not burn batteries. Dispose of batteries in a safe and appropriate manner.
- ✦ Use only batteries of the same or equivalent type as recommended.
- ✦ Batteries are to be inserted with the correct polarity.
- ✦ The supply terminals are not to be short-circuited.

ENGLISH

Model No. 29020
Model No. 29010

TINY LOVE[®]
SOFT DEVELOPMENTAL TOYS

From Birth to 5 Month
CAUTION

Possible entanglement injury.
Keep out of baby's reach.
Remove mobile from crib or playpen when baby begins to push up on hands and knees.

SYMPHONY - IN - MOTION MOBILE


INSTRUCTION SHEET

(Save the packaging and the instruction sheet for future use and storage)

✦ This toy is to be unpacked and assembled by an adult.

PARTS


Before assembly, please check that you have the following parts:

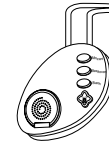


(1) Music box



(2) Large plastic nut

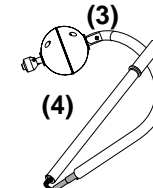


Folded Arm

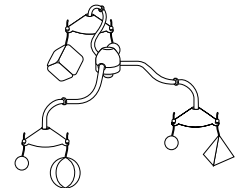

(5) Mobile unit


Inserting Batteries Into The Music Box

1. Loosen the battery compartment screw using a cross-headed (Phillips) screwdriver.
2. Remove the cover and insert three new "AA" (1.5 v) batteries. (Batteries not included).
3. Replace the cover and tighten the screw firmly.

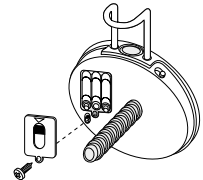

Attaching The Music Box To The Crib


1. Place the music box, facing towards the crib, between two rails on the inside of the crib.
2. Make sure the upper hook of the music box fits over the upper rail of the crib.
3. Thread the large nut (2) onto the screw and turn in the direction of the arrow for a tight fit.

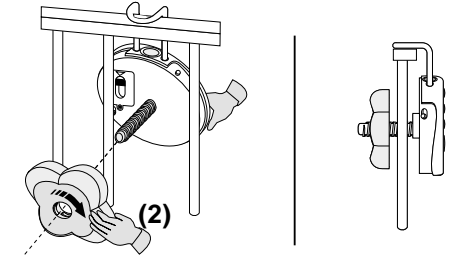

Assembling The Arm (3, 4)



Important: Before proceeding, remove and discard protective covers from part 4.

1. Join both parts of the arm (3) and (4) making sure that the guiding pin (3A) fits into the slot.
2. **Make sure the product is OFF.** Insert the arm into the hole in the upper part of the music box. Gently push down until you hear a click to lock the arm in place. Make sure the arm is facing towards the inside of the crib.

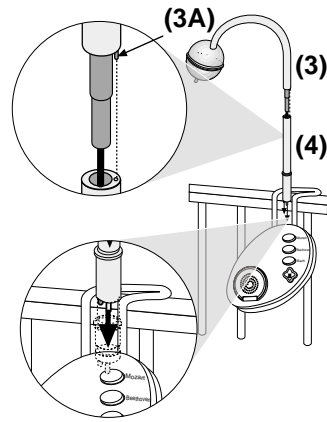


Attaching The Mobile Unit (5) To The Arm (3, 4)

1. Attach the mobile unit to the assembled arm by fitting the plastic core of the mobile unit (5A) onto the slotted peg (3C) on the ball at the end of the arm unit.
2. Push and turn the push button (5A) until the bold mark is aligned with the bold mark on the peg.

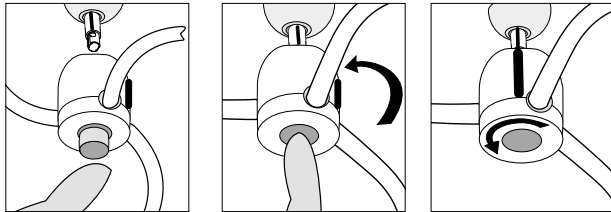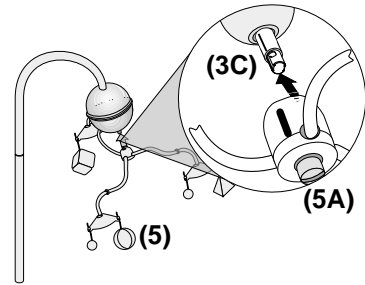

1 2 3

3. Test to make sure the mobile unit and the arm unit are securely locked by **gently pulling** on the mobile and arm units (to try and separate them).

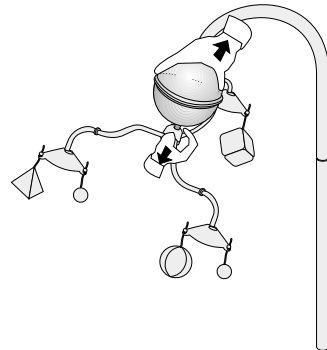

OPERATING THE MOBILE

1. Press the ON/OFF button.
2. Select one of the three musical pieces by pressing the corresponding button.

The piece you have selected will play repeatedly for 15 minutes, after which the mobile will turn itself off.

Note: If you do not press one of the three buttons, the mobile will play all three tunes consecutively and will turn itself off after a total of 15 minutes of play. This is the default mode. To reactivate the mobile, press the ON/OFF button.



You may change the piece being played (including the default mode) at any time. Simply press the button of the new tune you wish to hear and that piece will play repeatedly for 15 minutes before turning itself off.

3. You may turn the mobile off at any time by pressing the ON/OFF button.

Volume Control

Select the desired volume by moving the volume lever (1A) to one of the two positions.

From 5 months onwards: your baby can continue enjoying the music after the mobile is removed from the crib. See dismantling instructions below.

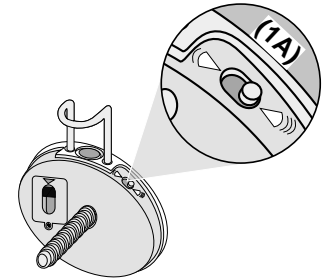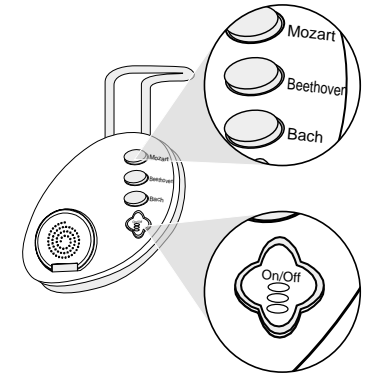

CHANGING THE BATTERIES

1. Loosen the battery compartment screw using a cross-headed (Phillips) screwdriver.
2. Remove the cover and remove the old batteries.
3. Insert three new "AA" (1.5 v) batteries.
4. Replace the cover and tighten the screw firmly.

