

Examine all packaging material for small parts that may have come loose during shipment. Periodical checks are recommended to insure that all components are in proper position, tight and free from damage. Unless otherwise stated, do not tighten bolts and/or screws until unit is completely assembled. Keep this assembly instruction for future reference. Online Parts Request Form: [www.hillsdalehouse.com/parts\\_request.html](http://www.hillsdalehouse.com/parts_request.html)


 
**HARDWARE LIST**

- A (4) Allen Bolts
- B (4) Spring Washers
- C (4) Metal Washers
- D (1) Allen Wrench

**PARTS LIST**

- E (1) Top Section
- F (1) Bottom Section
- G (5) Casters

**TOOLS REQUIRED FOR ASSEMBLY:**  
ALLEN WRENCH (INCLUDED)

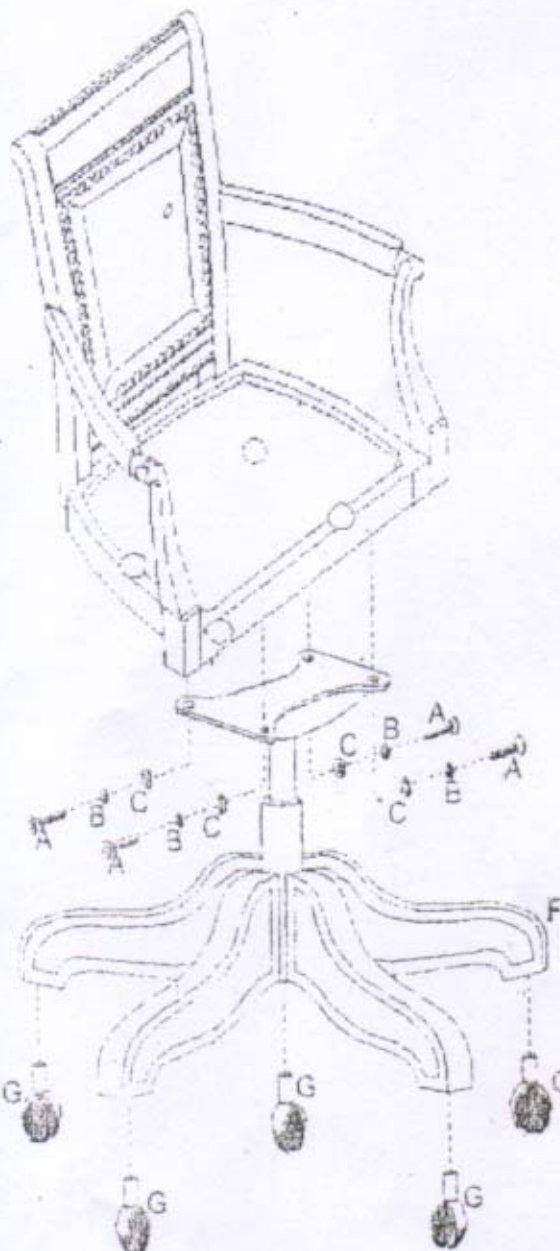

**\*\*\* ASSEMBLY \*\*\***

**STEP 1**

Attach Top Section (E) to Bottom Section (F), using 4 Allen Bolts (A), 4 Spring Washers (B) & 4 Metal Washers (C) to hold tight in place. Please tighten all bolts using Allen Wrench (D) provided to prevent stripping of wood.

**STEP 2**

Insert each Caster (G) into bottom of each foot on Bottom Section (F). Make sure each caster is properly inserted and tightly fit before use. Assembly of your new game chair is now complete.