

MODEL: 50505

ASSEMBLY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

UNPACK THE FOUNTAIN

YOU SHOULD HAVE RECEIVED THE FOLLOWING PARTS IN THE PACKAGE: FOUNTAIN BODY, BASIN LID, BASIN, SIEVE, SUBMERSIBLE PUMP, PUMP HOSE AND TRANSFORMER.

TOOLS NEEDED (NOT SUPPLIED):

LEVEL AND SCREWDRILLER.

 
FOUNTAIN ASSEMBLY

1. DETERMINE IF FOUNTAIN WILL BE INSTALLED IN GROUND OR ABOVE GROUND.

IF INSTALLING IN GROUND:

2A. DIG A HOLE LARGE ENOUGH FOR FOUNTAIN BASIN. A THIN LAYER OF GRAVEL CAN BE PLACED UNDER BASIN TO HELP LEVEL, MAKING SURE BASIN IS LEVEL IN BOTH DIRECTIONS.

3A. PLACE THE BASIN INTO HOLE.

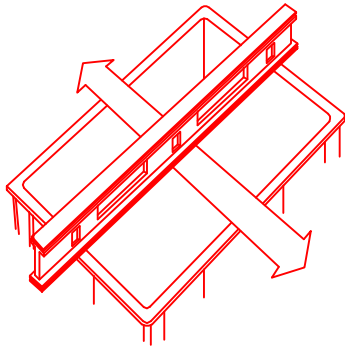


IF INSTALLING ABOVE GROUND:


2B. CHOOSE A LEVEL, FLAT AREA OF APPROPRIATE SIZE IN WHICH TO PLACE THE FOUNTAIN. APPROPRIATE LOCATIONS WOULD INCLUDE DECKS, PATIOS, GARDENS, SCREENED PORCHES, OR INTERIOR ROOMS.

3B. DISGUISE THE BASIN WITH MATERIAL OF YOUR CHOICE. SOME IDEAS: RAILROAD TIES, LARGE STONES, WOODEN FENCING, BRICK FACING, CONCRETE PAVERS, OR POTTED PLANTS.

 
4. PLACE SIEVE ONTO BASIN LID, SECURE THE FOUNTAIN BODY TO BASIN LID WITH (3) WASHERS AND (3) SCREWS.

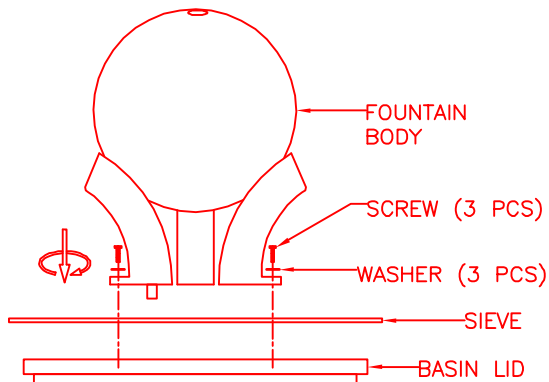

 5. PLACE PUMP FLAT IN BASIN AND ATTACH THE RUBBER HOSE TO PUMP.

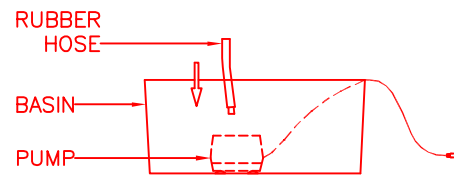


6. ATTACH THE RUBBER HOSE TO ROD ON BOTTOM OF FOUNTAIN BODY AND PLACE THE FOUNTAIN BODY ONTO BASIN.

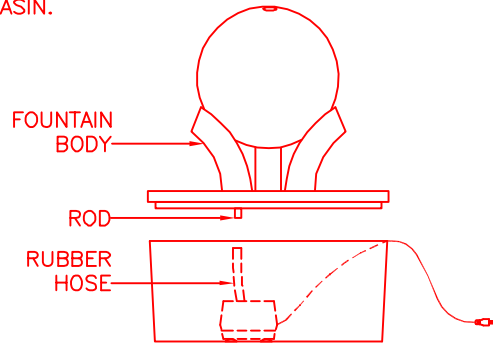 

7. FILL BASIN 3/4 FULL WITH FRESH WATER, APPLY DECORATIVE ELEMENTS TO TOP OF BASIN LID.

 8. PLUG THE PUMP POWER CORD INTO TRANSFORMER AND PLUG POWER CORD INTO A SOCKET, YOUR FOUNTAIN IS READY TO USE.

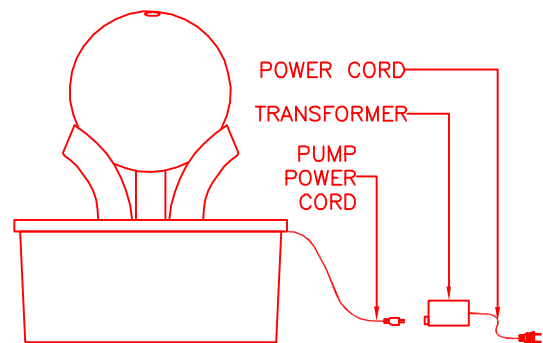

TROUBLE SHOOTING:

1. IF YOUR FOUNTAIN DOES NOT WORK, CHECK PLUG AT THE SOCKET. MAKE SURE THE PLUG IS FULLY AND PROPERLY INSERTED INTO THE WALL OUTLET.

2. NEXT CHECK TO MAKE SURE THE OUTLET IS POWERED.

3. IF THE FOUNTAIN STILL DOES NOT WORK, PLEASE CONTACT YOUR DISTRIBUTOR OR PLACE OF PURCHASE.

SPLASHING DISCLAIMER:

SPLASHING MAY OCCUR WHEN FOUNTAIN IS INITIALLY TURNED ON. PROTECT SURROUNDING SURFACES AS NEEDED.

IMPORTANT PUMP INFORMATION: PUMP MUST BE FULLY SUBMERSED IN WATER WHILE OPERATING.

IMPORTANT SAFETY INSTRUCTIONS

THIS FOUNTAIN HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF THE PLUG DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

WARNING

* THIS FOUNTAIN IS RATED FOR OUTDOOR USE ONLY.

** THIS UNIT MUST BE CONNECTED TO A SUPPLY CIRCUIT THAT IS PROTECTED BY A GROUND FAULT CIRCUIT INTERRUPTER (GFCI). THE GFCI SHOULD BE TESTED ON A ROUTINE BASIS. TO TEST THE GFCI, PUSH THE TEST BUTTON. THE GFCI SHOULD INTERRUPT POWER. PUSH THE RESET BUTTON. POWER SHOULD BE RESTORED. IF THE GFCI FAILS TO OPERATE IN THIS MANNER, THE GFCI IS DEFECTIVE.