

MODEL: 50745
ASSEMBLY INSTRUCTIONS
 READ AND SAVE THESE INSTRUCTIONS

UNPACK THE FOUNTAIN

YOU SHOULD HAVE RECEIVED THE FOLLOWING PARTS:
 ROOF, CERAMIC BOWL, LIGHT ASSEMBLY, (6) SUBMERSIBLE
 HALOGEN BULBS, PUMP, (2) CAPS, (4) LARGE SCREWS, (4)
 WASHERS, (3) POLES, BASE, (2) SMALL SCREWS, SPIKE AND
 TRANSFORMER.

FOUNTAIN ASSEMBLY


OPTION 1: MOUNTING TO A DECK OR FLOOR.

1A. IT IS RECOMMENDED TO CONTACT YOUR LOCAL HARDWARE PROFESSIONAL TO SELECT THE MOST APPROPRIATE TYPE OF SCREWS AND ANCHORS FOR YOUR PARTICULAR FLOOR.


1B. MOUNT BASE TO FLOOR. SEE STEP #2 FOR OTHER INSTRUCTIONS.

OPTION 2: INSTALLING GROUND WITH SPIKE.


1A. SCREW SPIKE TO BASE.

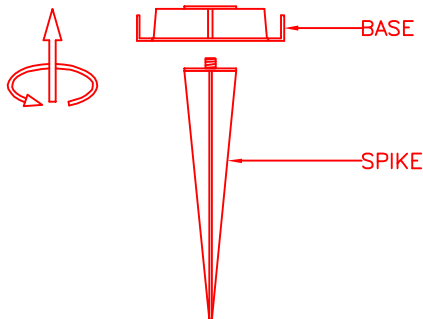


1B. INSERT SPIKE INTO GROUND. SEE STEP #2 FOR OTHER INSTRUCTIONS.

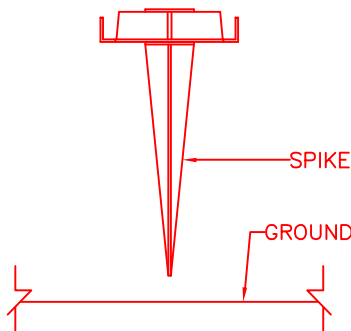


2. PLACE THE RIGHT POLE ON BASE AND SECURE WITH 2-SMALL SCREWS.

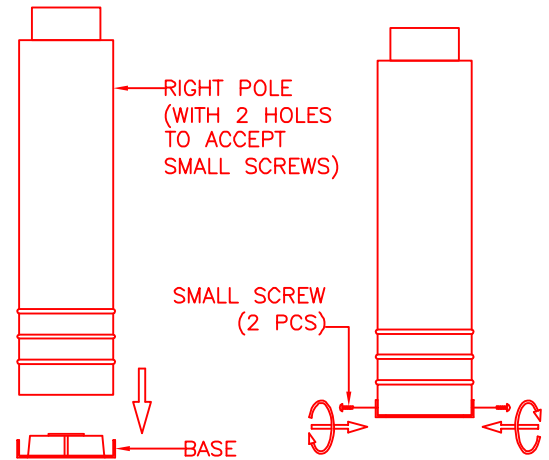

3. FEED THE CORD FROM CERAMIC BOWL THROUGH THE BOTTOM OF UPPER POLE AS SHOWN.

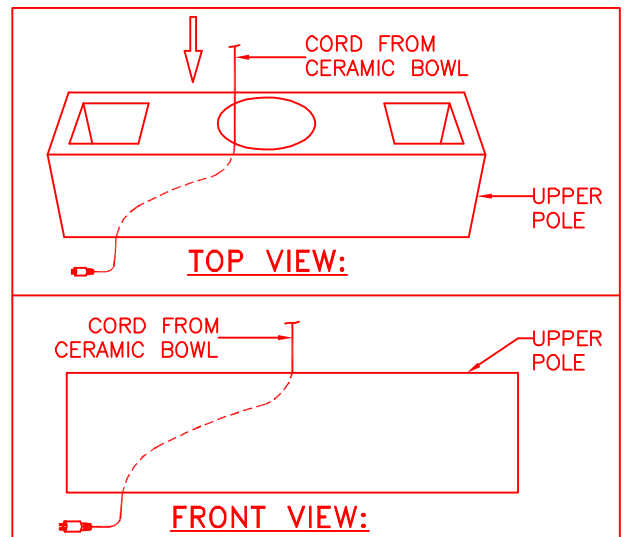

4. FEED THE CORD FROM CERAMIC BOWL THROUGH THE LEFT POLE AND OUT OF THE BOTTOM AS SHOWN.

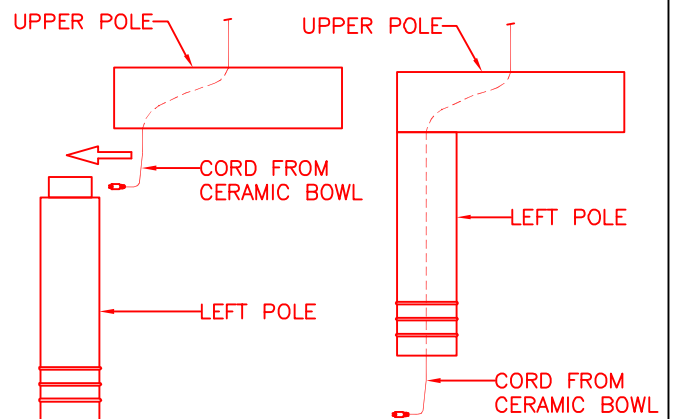


MODEL: 50745

ASSEMBLY INSTRUCTIONS


READ AND SAVE THESE INSTRUCTIONS

FOUNTAIN ASSEMBLY


5. SECURE THE UPPER POLE TO LEFT & RIGHT POLE WITH 4-WASHERS AND 4-LARGE SCREWS.

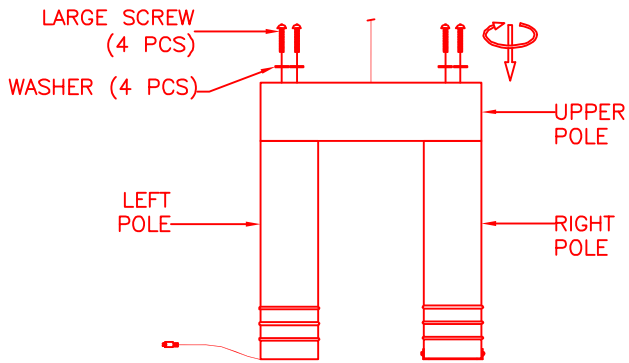


6. PLACE CAPS INTO HOLES IN UPPER POLE.
NOTE: CAPS CAN BE REMOVED AND HOLES USED AS A PLANTER.

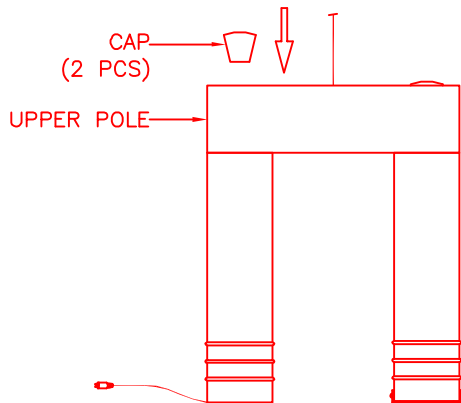


7. PLACE CERAMIC BOWL ON UPPER POLE.

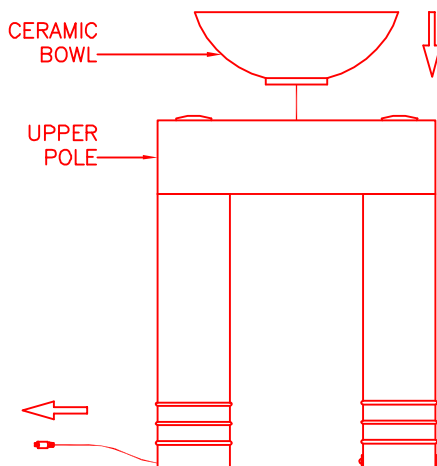


8. SLIDE 2 PIECE BULBS INTO BULB CLIPS.
(FREE REPLACEMENT BULBS INCLUDED)

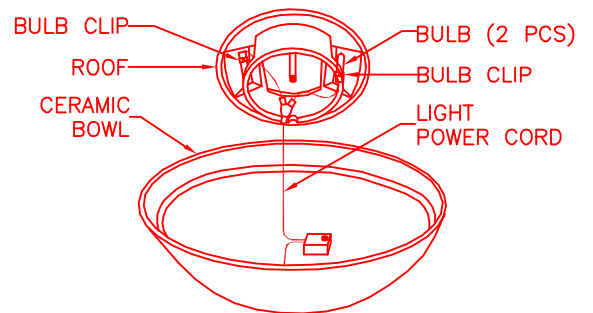

9. ATTACH RUBBER HOSE TO PUMP.

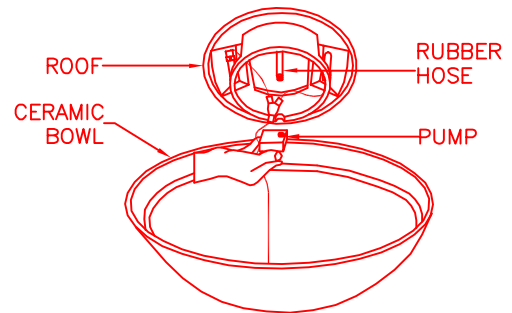


10. PLACE THE PUMP FLAT IN CERAMIC BOWL WITH THE ROOF ON TOP TO COVER.

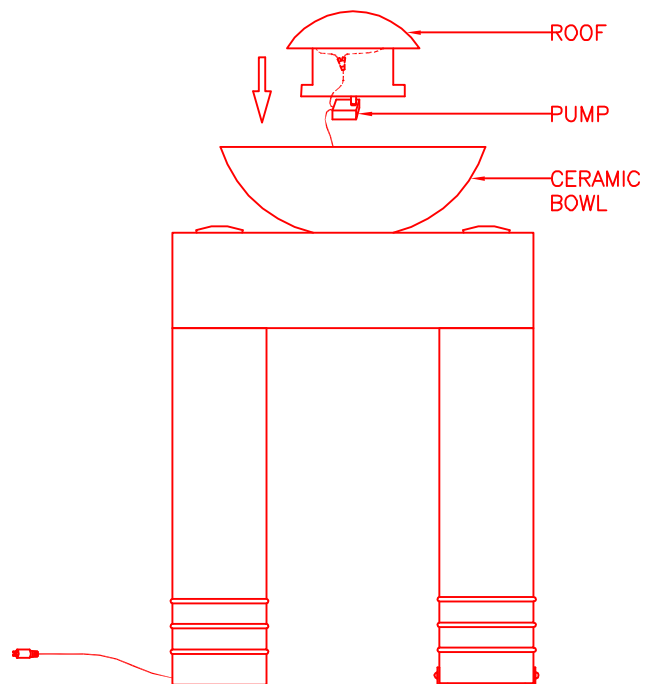

MODEL: 50745
ASSEMBLY INSTRUCTIONS
READ AND SAVE THESE INSTRUCTIONS

FOUNTAIN ASSEMBLY


11. PLUG THE CONNECTOR TO TRANSFORMER.

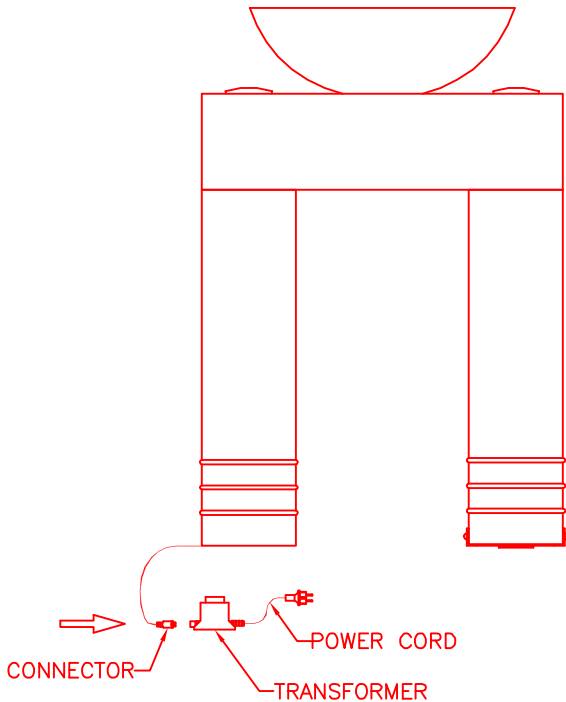

**12. FILL RESERVOIR WITH ENOUGH WATER TO COMPLETELY SUBMERSE PUMP.
(DISTILLED WATER IS RECOMMENDED TO REDUCE MINERAL DEPOSITS AND BACTERIA BUILD-UP.)**

13. PLUG POWER CORD INTO SOCKET. YOUR NEW FOUNTAIN IS READY TO USE.

PUMP REPLACEMENT:

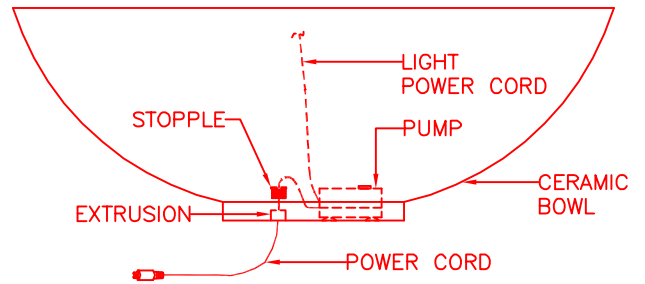

- A. UNPLUG THE FOUNTAIN.
- B. DISASSEMBLE THE FOUNTAIN AS NECESSARY TO EXPOSE CERAMIC BOWL.
- C. REMOVE ALL WATER FROM CERAMIC BOWL.
- D. PULL OUT THE STOPPLE FROM EXTRUSION.
- E. PULL OLD PUMP FROM FOUNTAIN.
- F. THREAD CORD FOR NEW PUMP THROUGH EXTRUSION.
- G. INSERT THE STOPPLE INTO EXTRUSION.
- H. REASSEMBLE THE FOUNTAIN WITH NEW PUMP.

TROUBLE-SHOOTING:

1. IF YOUR FOUNTAIN DOES NOT WORK, CHECK PLUG AT THE SOCKET. MAKE SURE THE PLUG IS FULLY AND PROPERLY INSERTED INTO THE WALL OUTLET.
2. NEXT CHECK TO MAKE SURE THE OUTLET IS POWERED.
3. IF THE FOUNTAIN STILL DOES NOT WORK, PLEASE CONTACT YOUR DISTRIBUTOR OR PLACE OF PURCHASE.

SPLASHING DISCLAIMER:

SPLASHING MAY OCCUR WHEN FOUNTAIN IS INITIALLY TURNED ON. PROTECT SURROUNDING SURFACES AS NEEDED.

IMPORTANT PUMP INFORMATION:

PUMP MUST BE FULLY SUBMERSED IN WATER WHILE OPERATING.

WATER:

TO REDUCE MINERAL DEPOSITS AND BACTERIA BUILD UP THE USE OF DISTILLED WATER IS RECOMMENDED.

WARNING:

* ONCE A WEEK INSPECT FOUNTAIN, FLOOR AND ADJACENT WALL FOR MOISTURE BUILD-UP AND CLEAN AS NECESSARY. THIS IS ESPECIALLY IMPORTANT FOR HUMID ENVIRONMENTS.

** THIS UNIT MUST BE CONNECTED TO A SUPPLY CIRCUIT THAT IS PROTECTED BY A GROUND FAULT CIRCUIT INTERRUPTER (GFCI). THE GFCI SHOULD BE TESTED ON A ROUTINE BASIS. TO TEST THE GFCI, PUSH THE TEST BUTTON. THE GFCI SHOULD INTERRUPT POWER. PUSH THE RESET BUTTON. POWER SHOULD BE RESTORED. IF THE GFCI FAILS TO OPERATE IN THIS MANNER, THE GFCI IS DEFECTIVE.