 


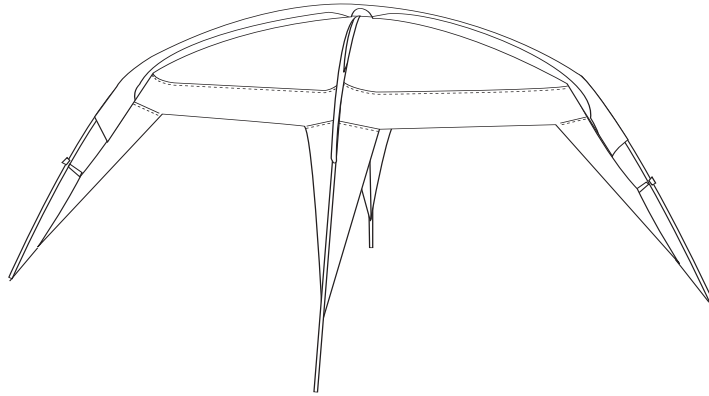

SHADEHOUSE

SHADEHOUSE INSTRUCTIONS



INSTRUCTION INDEX

Before you Start	2-4
Pitching your Shelter	4-5
Notes	6
Warranty	6

YOUR KELTY SHELTER SHOULD INCLUDE:

- 1 SHELTER BODY
- 1 SMALL STAKE SACK CONTAINING:
 - ALUMINUM TENT STAKES
 - GUYLINES
 - INSTRUCTIONS
- 2 LONG, DAC DA17 ALUMINUM POLES

SAFETY INFORMATION

-IMPORTANT-

Read, and follow, all instructions before assembling and using!

WARNINGS

DANGER

SEVERE WEATHER HAZARD

In some climactic conditions (for example, severe storms, high winds, or heavy snow cover), stakes and guy cords may not be sufficient to anchor a carport securely, which could result in the carport being picked up or blown away, causing death, serious injury, or permanent disability. Under such conditions:

- DO use supplemental means to securely anchor the shelter, for example, snow pegs, skis, and/or heavy rocks or other heavy objects.
- DO seek appropriate shelter, for example, in a house, cabin, building, or secure structure other than a shelter.

Your failure to follow this warning will cause death, serious injury, or permanent disability to you or others.

DANGER

PROTECT YOUR CHILDREN

Children will not understand and appreciate the FIRE, CARBON MONOXIDE POISONING, SUFFOCATION, AND SEVERE WEATHER hazards described above and will not know how to avoid or respond to these hazards if no adults are present. For this reason:

- DO NOT leave children unattended inside a shelter or in camp.
- DO NOT allow children to assemble a shelter.
- DO NOT allow children to enter or exit a shelter except through the door.
- DO NOT allow children to remain in a closed-up shelter on hot days.

Your failure to follow this warning will cause death, serious injury, or permanent disability to you or others.

BEFORE YOU START

SAFETY INFORMATION

-IMPORTANT-




Read, and follow, all instructions before assembling and using!

WARNINGS

SAFETY WARNING

DOs AND DO NOTs

Everyone who uses this shelter should read this manual and become familiar with all safety warnings and precautions for safe use, assembly, care, maintenance, and storage. Keep this manual so you can refer to it later.

-  **DANGER** indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
-  **WARNING** indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
-  **CAUTION** indicates a potentially hazardous situation which, if not avoided, could result in property damage.

DANGER

FLAMMABILITY WARNING

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent is made with flame resistant fabric which meets CPAI-84 specifications. IT IS NOT FIREPROOF. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective. For these reasons:

- DO NOT use matches, lighters, stoves, heaters, grills, lanterns, candles, cooking equipment, vehicles, or other fuel-burning devices inside or near a shelter.
- DO NOT build fires under or near a shelter.
- DO NOT leave campfires unattended.

Your failure to follow this warning will cause death, serious injury, or permanent disability to you or others.

SAFETY INFORMATION

-IMPORTANT-

Read, and follow, all instructions before assembling and using!

WARNINGS

WARNING

WIND HAZARD

In windy conditions, stakes, guy cords, and roof attachments may not be strong enough to hold the shelter securely to the ground or your vehicle, which could result in death, serious injury, or permanent disability to the user. If such conditions exist:

- DO use supplemental means to anchor the shelter such as rocks or sandbags.
- DO NOT use shelter in cases of strong winds.
- DO take the shelter down if hazardous conditions exist.

Your failure to follow this warning could cause death, serious injury, or permanent disability to you or others.

SETTING UP YOUR SHELTER

1. Assemble the poles (Fig. 1A, 1B and 1C).

DO NOT allow the shockcord to snap the pole sections together, this can damage the poles.

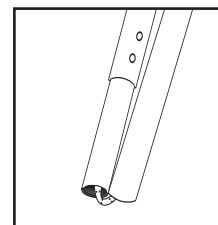 


Figure 1A

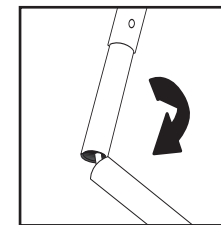 


Figure 1B

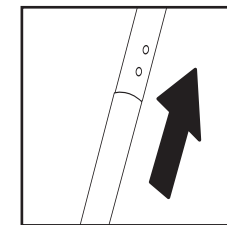 


Figure 1C

2. Spread the body on the ground & locate the pole sleeves.

3. Slide a pole, through a pole sleeve (Fig. 3A and 3B).

Repeat for the other long pole and other pole sleeve.

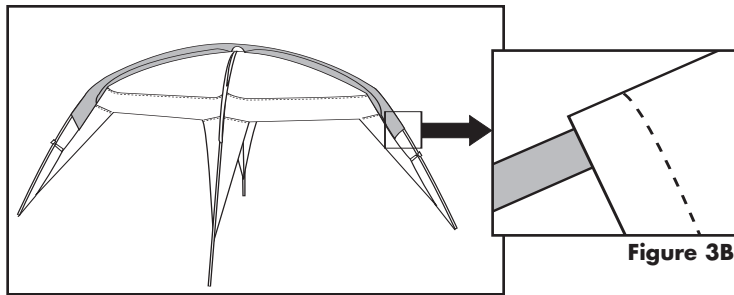 


Figure 3A

Figure 3B

4. Follow the seam directly under the pole sleeve to a corner and insert the spring pin (located on the webbing at the end of the shelter) into the end of a pole (Fig. 4A, 4B and 4C).

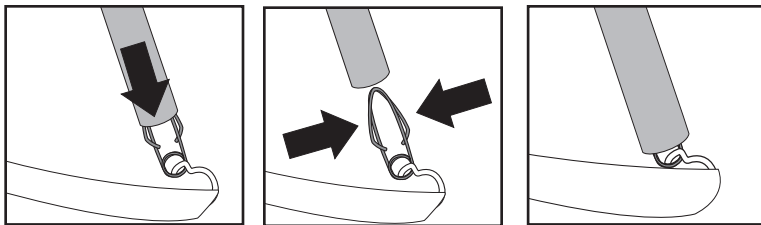 


Figure 4A

Figure 4B

Figure 4C

5. Go to opposite corner of the shelter, flex the pole to insert the corresponding spring pin into the other end of the pole.

6. Repeat steps 4 & 5 with the other pole.

7. Attach clips located at the seams of the tent to the corresponding poles above each (Fig. 7A and 7B).

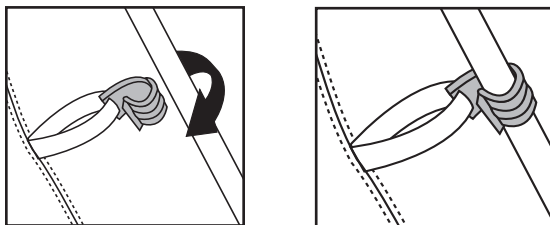 


Figure 7A

Figure 7B

8. Stake the shelter down!

PITCHING INSTRUCTIONS

 
5

NOTES & TIPS

- **DO** use supplemental means to anchor the shelter such as rocks or sandbags.
- To minimize UV damage from the sun, **DO NOT** keep the shelter set up for long periods of time or when not in use.
- **DO** use guylines to further secure the shelter.

STAKING TIPS

THE BEST WAY TO USE ROCKS FOR STAKING AND GUYING OUT IN ROCKY TERRAIN (OR ON PAVEMENT) IS TO FIND ONE LARGE AND ONE SMALL ROCK. TIE A PIECE OF CORD FROM YOUR STAKE OR GUY-OUT POINT AROUND THE SMALL ROCK, SET THE LARGE ROCK ON TOP OF THE CORD RIGHT NEXT TO THE SMALL ROCK, PULL BACK UNTIL IT'S TIGHT.

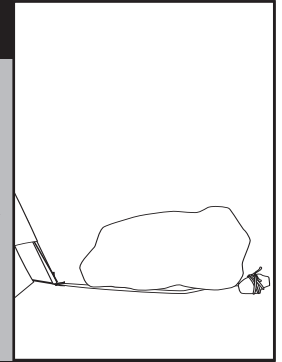

WARRANTY

Kelty takes pride in its workmanship and undertakes to manufacture the best possible products. Therefore, we warranty all Kelty products against defects in materials or workmanship during your lifetime. Since no Kelty product is indestructible, it does not cover defects attributable to or resulting from normal wear and tear, natural hazard damage (ie: weather, animals), abuse or alteration (ie: ultra violet (u.v.) damage on tents, exhausted zippers). Service under our warranty is available to the original purchaser by returning the product to any authorized Kelty dealer or by contacting our customer service department at 1-866-349-7225 (1-866-FIX-PACK) for return authorization. Charges for shipping and insuring your package to Kelty are your responsibility. Please be sure to insure any shipment as Kelty cannot be responsible for uninsured packages. We require that all products returned for warranty and repair be properly cleaned. If after inspection we determine that the product was defective, we will repair or replace it free of charge. If your Kelty product needs service or repair that is not covered under warranty we will provide the necessary service at a reasonable charge. This warranty gives you, the original purchaser, specific legal rights. You may also have other rights, which vary from state to state.

NOTES

6

6235 LOOKOUT ROAD, BOULDER CO 80301
800.423.2320 • FAX 800.504.2745 • WWW.KELTY.COM