

LEUCOS®

INSTRUCTIONS FOR INSTALLATION - LEUCOS USA

SARASAR

A1 Enclosed



One installer



Save instructions

Revised
18 - December 2003

WARNING:

- DISCONNECT POWER BEFORE INSTALLATION.
- FIXTURE TO BE INSTALLED BY A CERTIFIED ELECTRICIAN. INSTALL IN ACCORDANCE WITH THE NATIONAL AND LOCAL ELECTRICAL CODES.
- TAKE GREAT CARE TO AVOID SCRATCHING OR CHIPPING THE GLASS WHEN , CARRYING OUT THE OPERATIONS BELOW

ATTENTION IN CASE OF DAMAGE OF THE FLEXIBLE SUPPLY CABLE, SUBSTITUTION SHOULD BE CARRIED OUT BY THE CONSTRUCTOR, CLIENT SERVICE OR QUALIFIED





WALL model:

1. Fix plate "A" to the Junction-box utilizing the slots "D" which will allow for the adjustment of the backing.
2. Cover the wire cables with the protections sheathes in equipment. Connect the fixture's electrical wires to the supply wires.
3. Fix the structure "B" to the plate "A" with the two screws.

Fig. 1 Put the glass difuser into the support "E".

Fig. 2 . Insert the bulb. Restore power.

SARASAR T - SARASAR TR - SARASAR P :
max 1x100 W 120V E26 Type A 

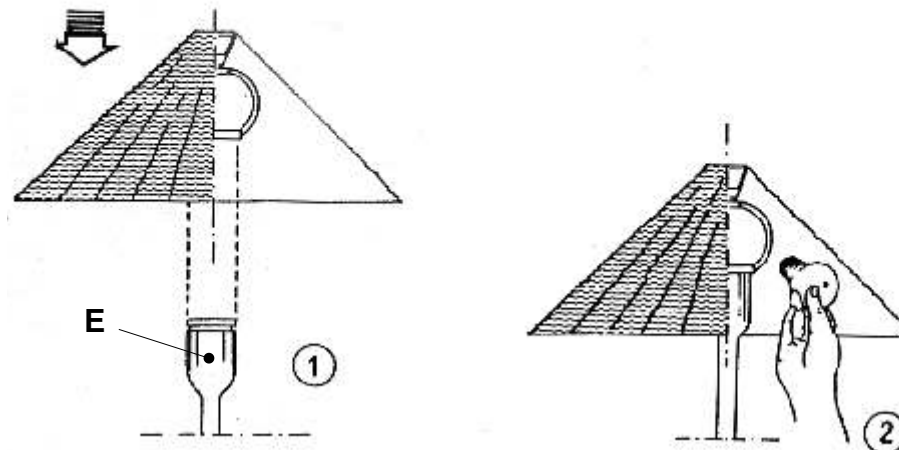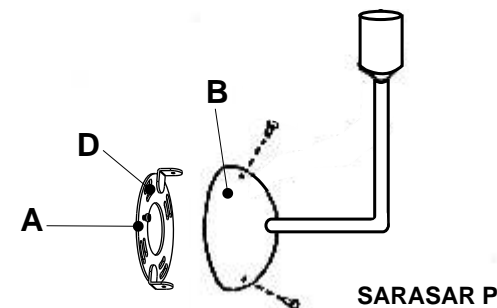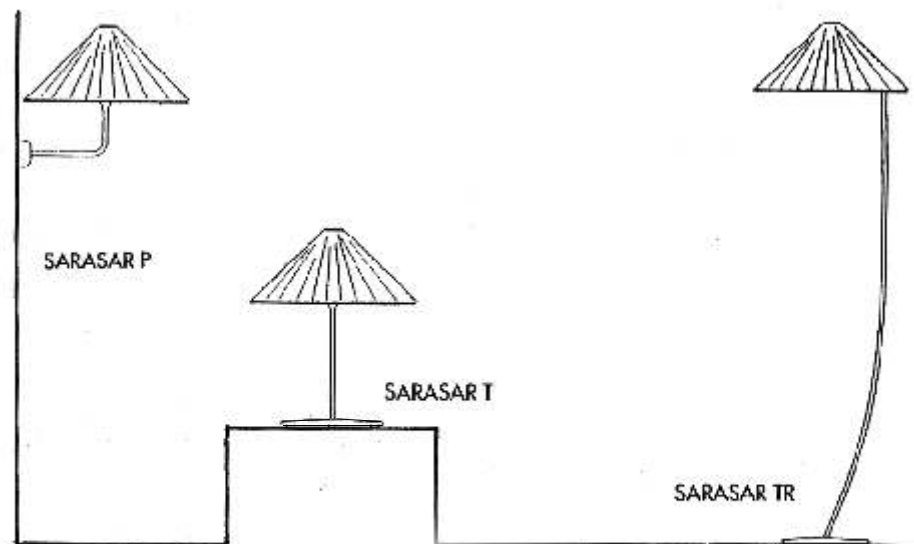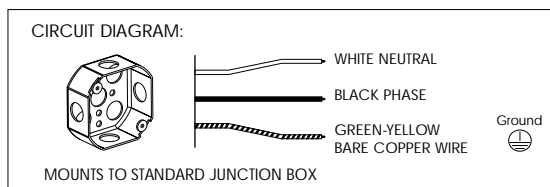

For additional information please contact your local dealer
or **LEUCOS U.S.A.** at: Tel. (732) 225-0010 Fax. (732) 225-0250