


ASSEMBLY/INSTALLATION INSTRUCTIONS

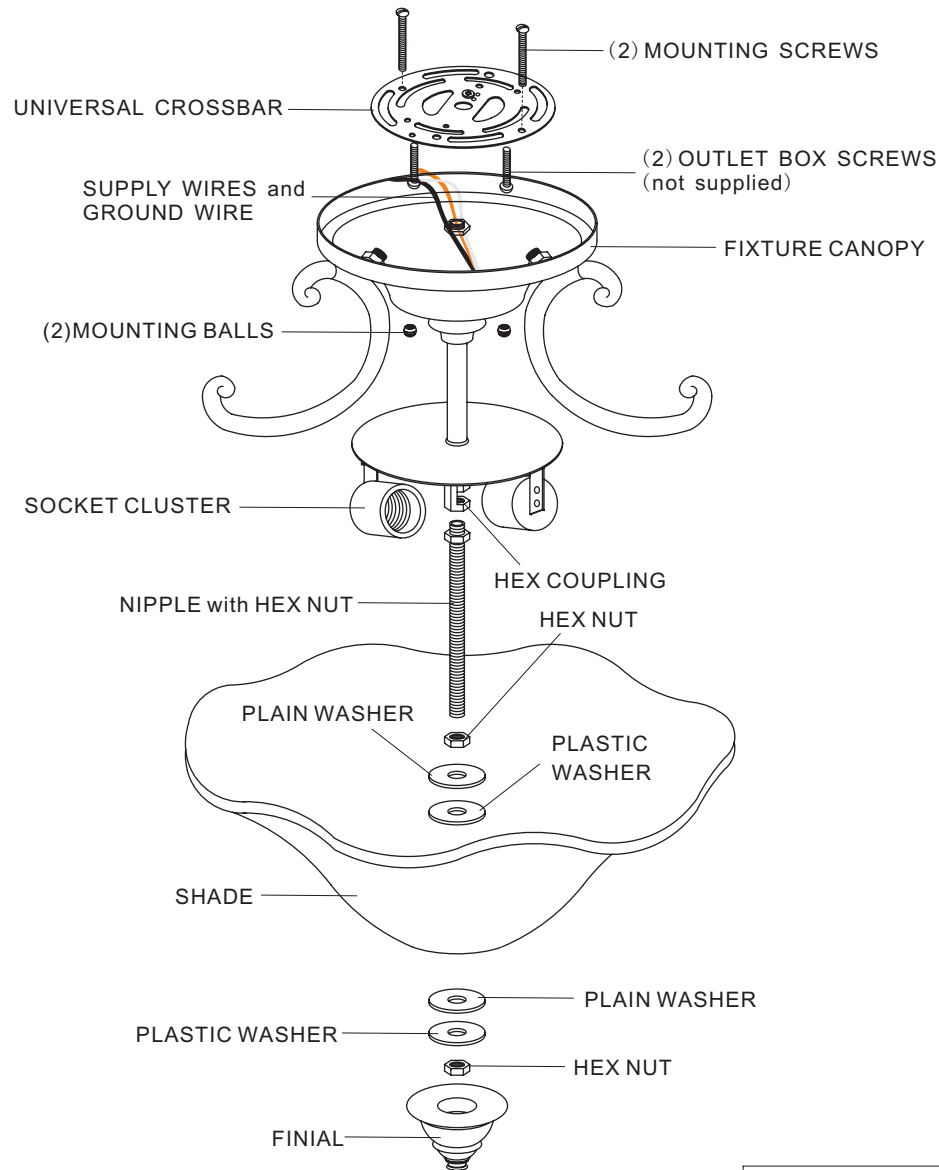

1. Before beginning the installation, carefully unpack and identify all parts, referring to the illustration.
2. Turn the electrical power to installation point OFF at the circuit breaker.
3. Thread top end of NIPPLE into HEX COUPLING underside of SOCKET CLUSTER. Use plier, thread HEX NUT against HEX COUPLING and hand tighten until snug. Thread HEX NUT onto end of NIPPLE and adjust to proper location for rest components.
4. Locate the following components over end of NIPPLE in turn: PLAIN WASHER, PLASTIC WASHER, SHADE, PLAIN WASHER and PLASTIC WASHER. Secure them together by threading HEX NUT onto end of NIPPLE. Hand tighten until snug. Proceed to thread FINIAL onto end of NIPPLE and hand tighten until snug.
5. Locate the (2) MOUNTING SCREWS and thread them into the back of the UNIVERSAL CROSSBAR, making sure that they match the holes in the FIXTURE CANOPY. Using (2) OUTLET BOX SCREWS (not supplied), fasten the UNIVERSAL CROSSBAR to the OUTLET BOX.
6. **MAKING THE WIRING CONNECTIONS:**
 Using wire connectors (not supplied) connect the HOUSE GROUND WIRE to the FIXTURE GROUND WIRE; connect the HOUSE WHITE WIRE to the FIXTURE SUPPLY WIRE (WHITE or RIBBED SIDE); connect the HOUSE BLACK (or RED) WIRE to the FIXTURE SUPPLY WIRE (BLACK or SMOOTH SIDE). Wrap each connection with approved electrical tape.
7. Carefully tuck all of the wiring up into the outlet box, and fit the FIXTURE CANOPY over the MOUNTING SCREWS. Secure the FIXTURE CANOPY to the ceiling with the (2) MOUNTING BALLS, making sure that the balls are fully threaded onto the MOUNTING SCREWS before tightening.
8. Install bulbs referring to fixture markings and/or labels for maximum wattage.
9. Restore power to installation point ON. Retain this sheet for future reference.

**IF IN DOUBT ABOUT ELECTRICAL INSTALLATION,
 CONSULT A LICENSED ELECTRICIAN!**