


## ASSEMBLY/INSTALLATION INSTRUCTIONS

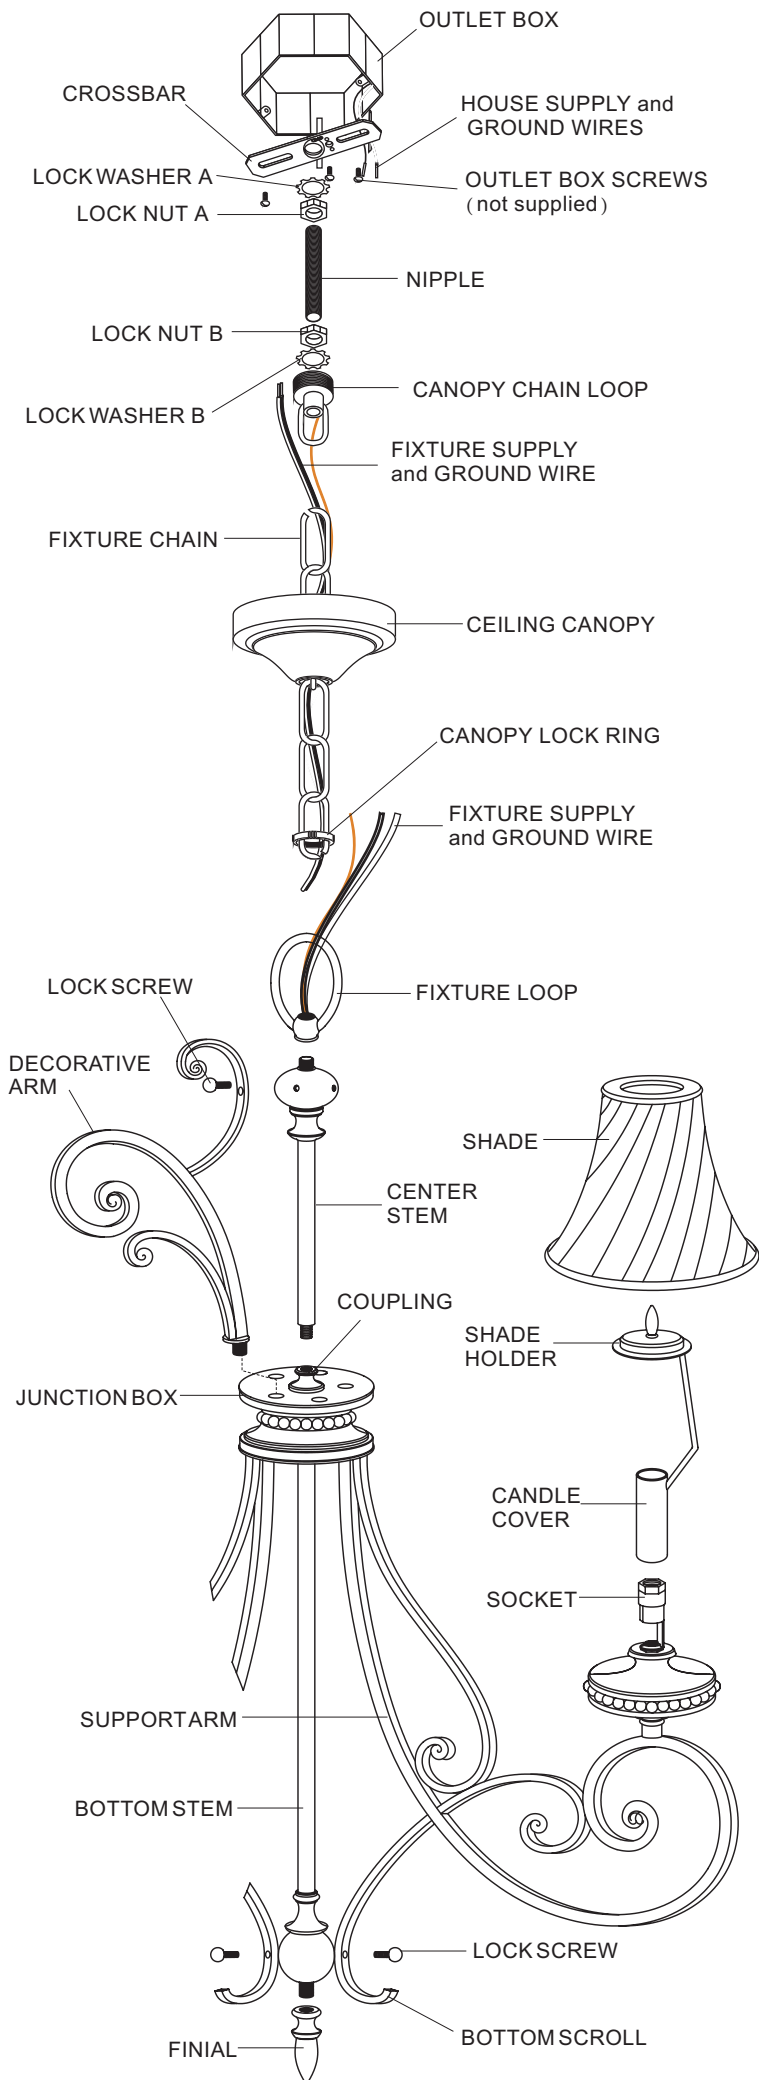

1. Before beginning the installation, carefully unpack and identify all parts, referring to the illustration.
2. Turn power to the installation point OFF at circuit breaker.
3. Unfold SUPPORTARMS to proper locations and match the holes on the BOTTOM SCROLL with mounting holes on the side of BOTTOM STEM. Thread LOCK SCREWS into the mounting holes and tighten until snug to secure them.
4. Thread end of CENTER STEM onto the COUPLING on the top center of JUNCTION BOX. Hand tighten until snug. Make sure the mounting holes on the side of it line up the holes on the top of JUNCTION BOX. Proceed to locate DECORATIONARMS and position the nipples on the end of them into the holes on the top of JUNCTION BOX. Match the holes on the other ends with the mounting holes on the side of CENTER STEM. Thread LOCK SCREWS into the mounting holes on the side of CENTER STEM to secure the arms. Hand tighten until snug.
5. Thread the FINIAL onto the nipple on the end of the BOTTOM STEM and hand tighten until snug. Proceed to thread the FIXTURE LOOP onto the nipple on the top end of the CENTER STEM. Tighten until snug.
6. Fasten the CROSSBAR to the OUTLET BOX with (2)OUTLET BOX SCREWS(not supplied). Proceed to thread LOCK NUT A and LOCK WASHER A onto the top end of NIPPLE. Thread NIPPLE into the center of CROSSBAR. Locate the LOCK NUT B onto the bottom end of the NIPPLE. Tighten LOCK NUT A against CROSSBAR with plier until snug.
7. Locate the FIXTURE CHAIN and determine desired hanging height of fixture. Adjust chain by removing links if needed. Please note that depending on chain material thickness, you might be required to use chain pliers to spread links open. Proceed to attach one end of chain to FIXTURE LOOP, attached to top of fixture. Pass the fixture wires through FIXTURE CHAIN alternating links. Proceed to pass the fixture wires through the following mounting components in this order: 1)CANOPY LOCK RING; 2)CEILING CANOPY; 3) CANOPY CHAIN LOOP; 4) LOCK WASHER B and LOCK NUT B; 5) NIPPLE; 6) LOCK NUT A and LOCK WASHER A.
8. **Making the connections:**  
(2 people recommended for the remaining steps) Position the fixture under the ceiling mounted outlet box. Pass LOCK WASHER B over the NIPPLE. Thread CANOPY CHAIN LOOP onto NIPPLE. Thread LOCK NUT B down the NIPPLE, against the CANOPY CHAIN LOOP and snug with pliers. Pass the wires through the NIPPLE. Take up wire slack and trim wires so that approx. 6" will remain inside outlet box. Proceed to attach the top of the FIXTURE CHAIN to the bottom of the CANOPY CHAIN LOOP.  
Using wire connectors (not supplied) connect the HOUSE GROUND WIRE to the FIXTURE GROUND WIRE; connect the HOUSE WHITE WIRE to the FIXTURE SUPPLY WIRE (WHITE or RIBBED SIDE); connect the HOUSE BLACK (or RED) WIRE to the FIXTURE SUPPLY WIRE (BLACK or SMOOTH SIDE). Wrap each connection with approved electrical tape.
9. With the proper connections made, proceed to push the CEILING CANOPY upward over the OUTLET BOX. Be sure that all wires are carefully tucked into the OUTLET BOX cavity. Secure canopy against ceiling by threading CANOPY LOCK RING onto the CANOPY LOOP. Tighten until snug.
10. Position SOCKET through the CANDLE COVER. Install bulbs referring to fixture markings and/or labels for maximum wattage. Proceed to locate SHADE seating onto the SHADE HOLDER.
11. Restore power to the installation point ON. Retain this sheet for future reference.

**IF IN DOUBT ABOUT ELECTRICAL INSTALLATION,  
CONSULT A LICENSED ELECTRICIAN!**