


**FIGURE1**

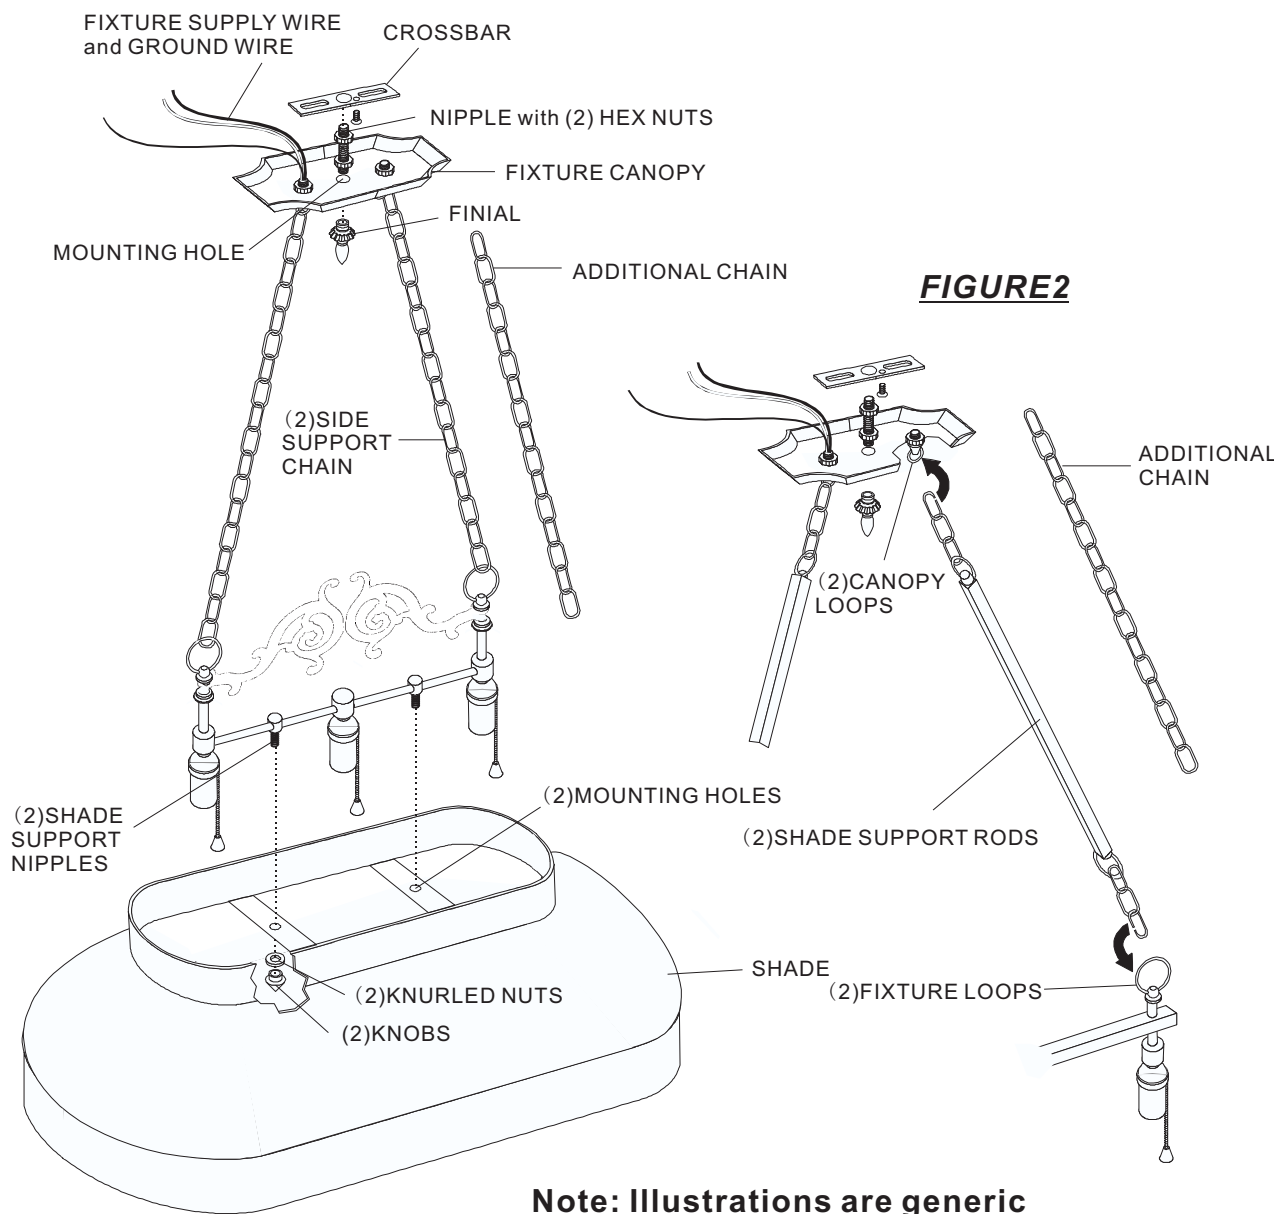

**FIXTURE ASSEMBLY AND INSTALLATION INSTRUCTIONS**

1. Before beginning the installation, carefully unpack and identify all parts referring to the illustrations on the left side of page for parts identification. Please note that FIGURE1 illustrates fixture with SIDE SUPPORT CHAINS and FIGURE2 illustrates fixture with SIDE SUPPORT RODS. Please refer to applicable figure based on style purchased.
2. With power to the installation point OFF. Locate the CROSSBAR and secure to CEILING MOUNTED OUTLET BOX with (2)OUTLET BOX SCREWS(not supplied). Locate the NIPPLE with (2)HEX NUTS and thread top into the center underside of CROSSBAR.

**(FOR FIXTURE WITH SIDE SUPPORT CHAINS, FIGURE1)**

Please note that your fixture has come with an ADDITIONAL CHAIN. This allows for flexibility of placement. Please determine height of fixture above surface and either remove links (from attached support chains), add chain links (from additional length) or leave fixture as shipped. When desired length is achieved, proceed to trim SUPPLY WIRE and GROUND WIRE to a length of approx. 8" from exit point on inside top of FIXTURE CANOPY.

**(FOR FIXTURE WITH SIDE SUPPORT RODS, FIGURE2)**

Please note that your fixture has come with an ADDITIONAL CHAIN. This allows for flexibility of placement. Your fixture was partially dis-assembled for shipping purposes. Please determine height of fixture above surface and either add chain links(from additional length) or leave fixture as shipped. If additional chain is to be used, be sure to add equal links to both ends of SHADE SUPPORT RODS for symmetry. Pass split side of chain link over (2)CANOPY LOOPS and (2)FIXTURE LOOPS. Compress with pliers to secure. If NO additional chain is to be used, pass split side of chain link attached to top of each SHADE SUPPORT ROD over CANOPY LOOPS attached to underside of FIXTURE CANOPY and compress with pliers to secure. When desired length is achieved, proceed to trim SUPPLY WIRE and GROUND WIRE to a length of approx. 8" from exit point on inside top of FIXTURE CANOPY.

3. **Make the connections:** (Quoizel recommends 2 people for the next 3 steps)  
 Position fixture underneath outlet box, use wire connectors (not supplied) connect the HOUSE GROUND WIRE to the FIXTURE GROUND WIRE; connect the HOUSE WHITE WIRE to the FIXTURE SUPPLY WIRE(RIBBED or WHITE SIDE); connect the HOUSE BLACK (or RED) WIRE to the FIXTURE SUPPLY WIRE(SMOOTH or BLACK SIDE). Wrap each connection with approved electrical tape.
4. With the connections properly made, proceed to align the center MOUNTING HOLE on the underside of the FIXTURE CANOPY with the NIPPLE attached to CROSSBAR. Be sure to carefully tuck all wires inside of the outlet box cavity and pass the FIXTURE CANOPY over the NIPPLE. Secure fixture to ceiling by threading the FINIAL onto the end of the NIPPLE.
5. With the fixture secured, locate the SHADE and align the (2)MOUNTING HOLES at top with (2)SHADE SUPPORT NIPPLES located on the bottom underside of fixture. Pass the SHADE over the SHADE SUPPORT NIPPLES and secure by threading (1)KNURLED NUT and (1)KNOB onto end of each SHADE SUPPORT NIPPLE.
6. With SHADE properly secure, install bulbs referring to fixture markings and/or labels for maximum wattage.
7. Restore power to the installation point ON. Retain this sheet for future reference.

**IF IN DOUBT ABOUT ELECTRICAL INSTALLATION,  
 CONSULT A LICENSED ELECTRICIAN!**