


**ASSEMBLY/INSTALLATION INSTRUCTIONS:**

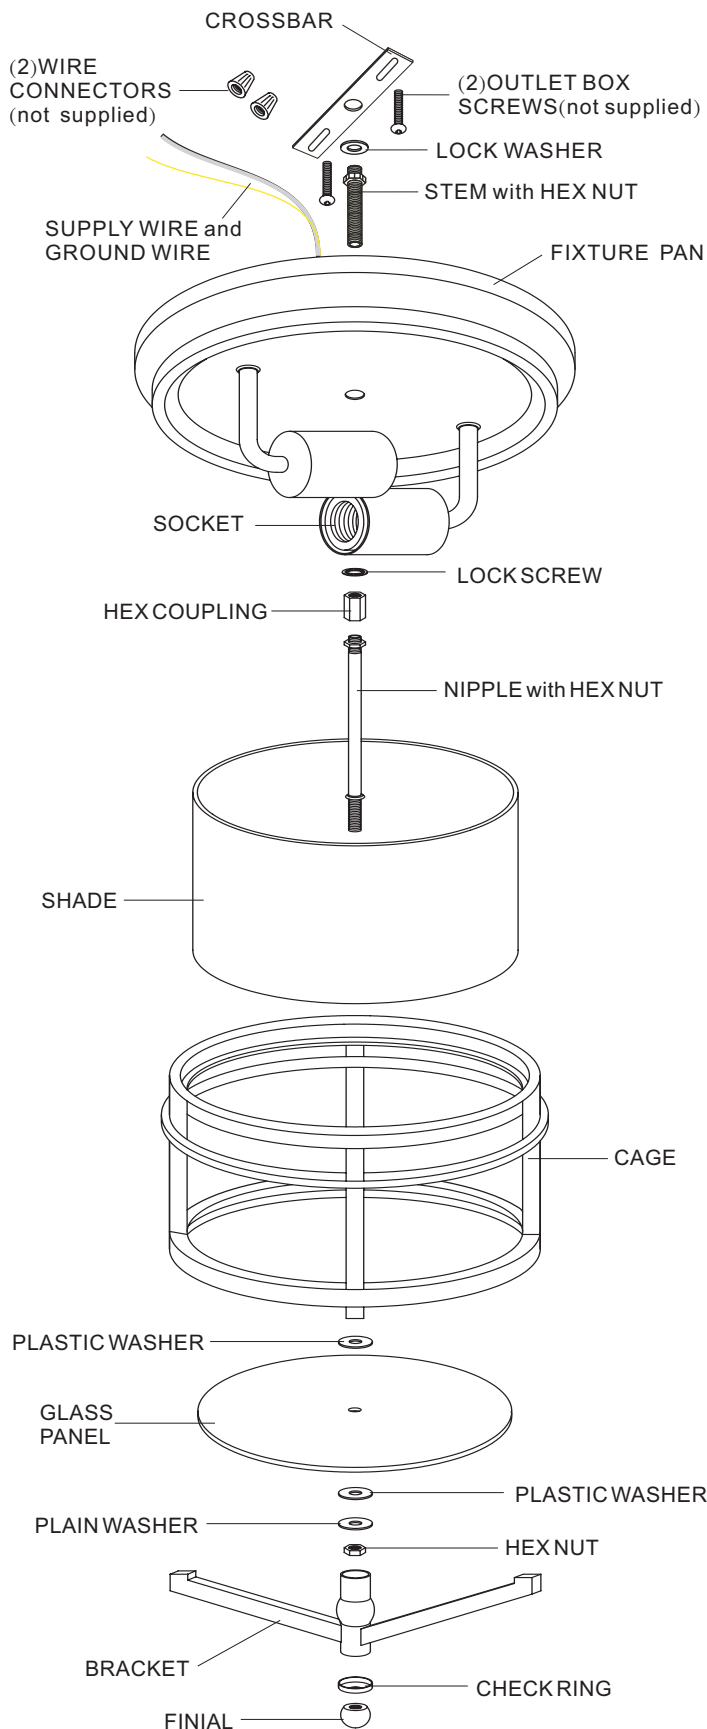

1. Before beginning installation, be sure to carefully unpack all parts referring to illustration for parts identification.
2. Turn power to the installation point OFF at circuit breaker. Locate the CROSSBAR and attach it to the ceiling mounted OUTLET BOX. Do this using (2) OUTLET BOX SCREWS (not supplied). Locate the LOCK WASHER and STEM WITH HEX NUT and thread top end of STEM into the center of the CROSSBAR. Position the FIXTURE PAN over the outlet box. Pass the MOUNTING HOLE on the inside deck of the FIXTURE PAN over the end of STEM WITH HEX NUT. There should be approx. 3/8" of end of STEM WITH HEX NUT protruding from MOUNTING HOLE on inside deck of FIXTURE PAN. If STEM length is excess of 3/8", thread STEM further into center of STEM. Remove FIXTURE PAN and snug HEX NUT against underside of CROSSBAR with pliers to secure STEM.

**3. Making the connections:**

(Quoizel recommends 2 people for this step). Position the FIXTURE PAN over the outlet box. Using wire connectors (not supplied) connect the HOUSE GROUND WIRE to the FIXTURE GROUND WIRE; connect the HOUSE WHITE WIRE to the FIXTURE SUPPLY WIRE (WHITE SIDE); connect the HOUSE BLACK (or RED) WIRE to the FIXTURE SUPPLY WIRE (BLACK SIDE). Wrap each connection with approved electrical tape.

4. Secure FIXTURE PAN to ceiling by aligning and passing MOUNTING HOLE over end of STEM. Locate the LOCK WASHER over the end of the STEM and thread the HEX COUPLING onto the bottom end of STEM. Snug assembly until FIXTURE PAN is flush against ceiling. Be sure that there are no trapped or pinched wires.
5. Install the correct bulb referring to fixture markings and/or labels for maximum wattage.
6. Locate the NIPPLE with HEX NUT. Thread the NIPPLE into the HEX COUPLING and tighten until snug. Use plier, thread the HEX NUT against the HEX COUPLING and hand tighten until snug.
7. Position the SHADE inside of the CAGE. And then locate the following components over the end of the NIPPLE in turn: CAGE with SHADE, PLASTIC WASHER, GLASS PANEL, PLASTIC WASHER and PLAIN WASHER. Secure them with the HEX NUT and hand tighten until snug.
8. Locate the BRACKET and the CHECK RING over the end of the NIPPLE and secure with the FINIAL. Hand tighten until snug.
9. Restore power to the installation point ON. Keep this sheet for future reference.