
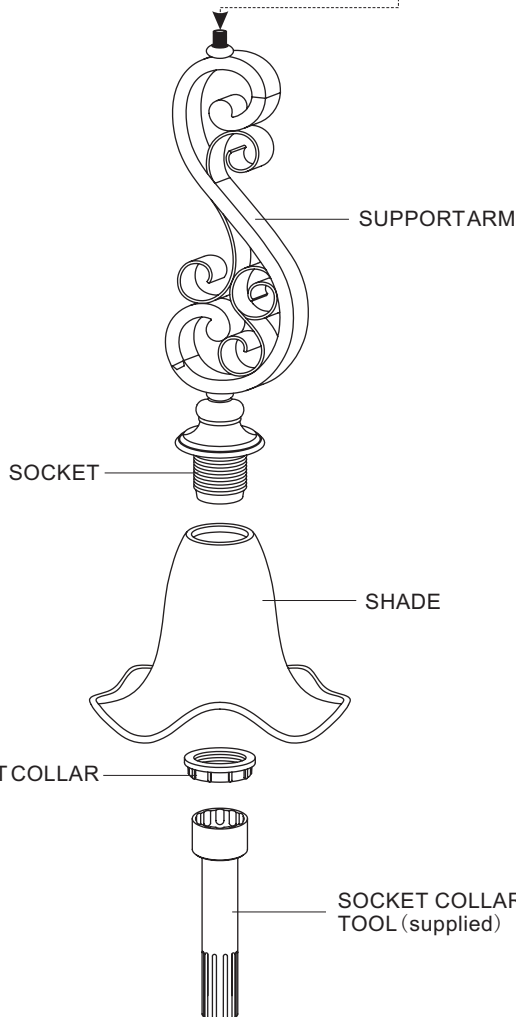


ASSEMBLY/INSTALLATION INSTRUCTIONS

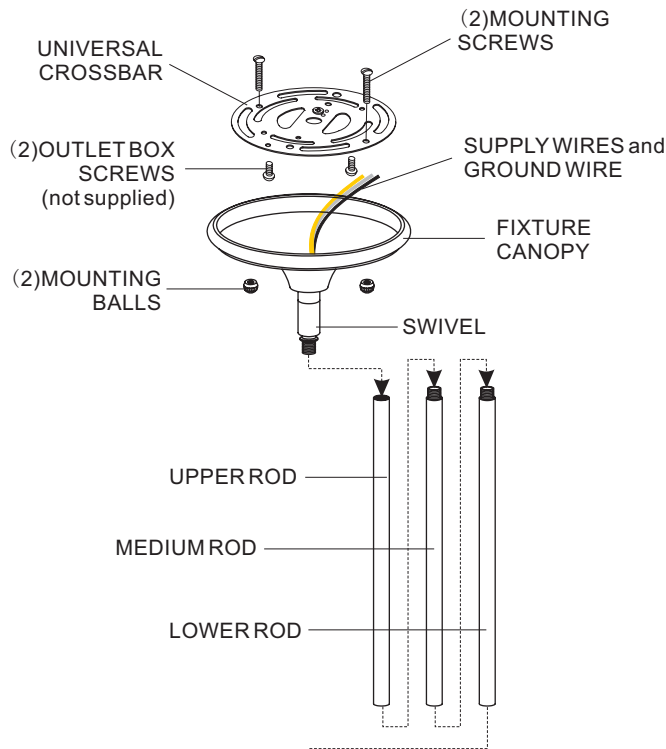

1. Before beginning the installation , carefully unpack and identify all parts , referring to the illustration.
2. Turn the electrical power to installation point OFF at the circuit breaker .
3. Pull wires through the end of the LOWER ROD and then thread the end of the LOWER ROD onto the nipple on the top end of the SUPPORT ARM. Hand tighten until snug. Proceed to pull the wires through the other RODS, then thread the MEDIUM ROD, UPPER ROD and the SWIVEL together. Hand tighten until all are snug.
4. Locate the (2) MOUNTING SCREWS and thread them into the back of the UNIVERSAL CROSSBAR, making sure that they match the holes in the FIXTURE CANOPY. Using (2) OUTLET BOX SCREWS (not supplied) , fasten the UNIVERSAL CROSSBAR to the OUTLET BOX.
5. **MAKING THE CONNECTIONS:**
 Using wire connectors (not supplied) connect the HOUSE GROUND WIRE to the FIXTURE GROUND WIRE ; connect the HOUSE WHITE WIRE to the FIXTURE SUPPLY WIRE (WHITE or RIBBED SIDE) ; connect the HOUSE BLACK (or RED) WIRE to the FIXTURE SUPPLY WIRE (BLACK or SMOOTH SIDE). Wrap each connection with approved electrical tape.
6. Carefully tuck all of the wiring up into the outlet box and fit the FIXTURE CANOPY over the MOUNTING SCREWS. Secure the FIXTURE CANOPY to the ceiling with the (2) MOUNTING BALLS, making sure that the balls are fully threaded onto the MOUNTING SCREWS before tightening.
7. Position the SHADE over the SOCKET as shown. Use the SOCKET COLLAR TOOL (supplied) , thread the SOCKET COLLAR onto the SOCKET to secure the SHADE. Hand tighten until snug.
8. Install the correct bulb referring to fixture markings and/or labels for maximum wattage.
9. Restore power to installation point ON. Retain this sheet for future reference.

**IF IN DOUBT ABOUT ELECTRICAL INSTALLATION,
 CONSULT A LICENSED ELECTRICIAN!**