


QUOIZEL

6 CORPORATE PARKWAY
GOOSE CREEK, SC. 29445
www.quoizel.com

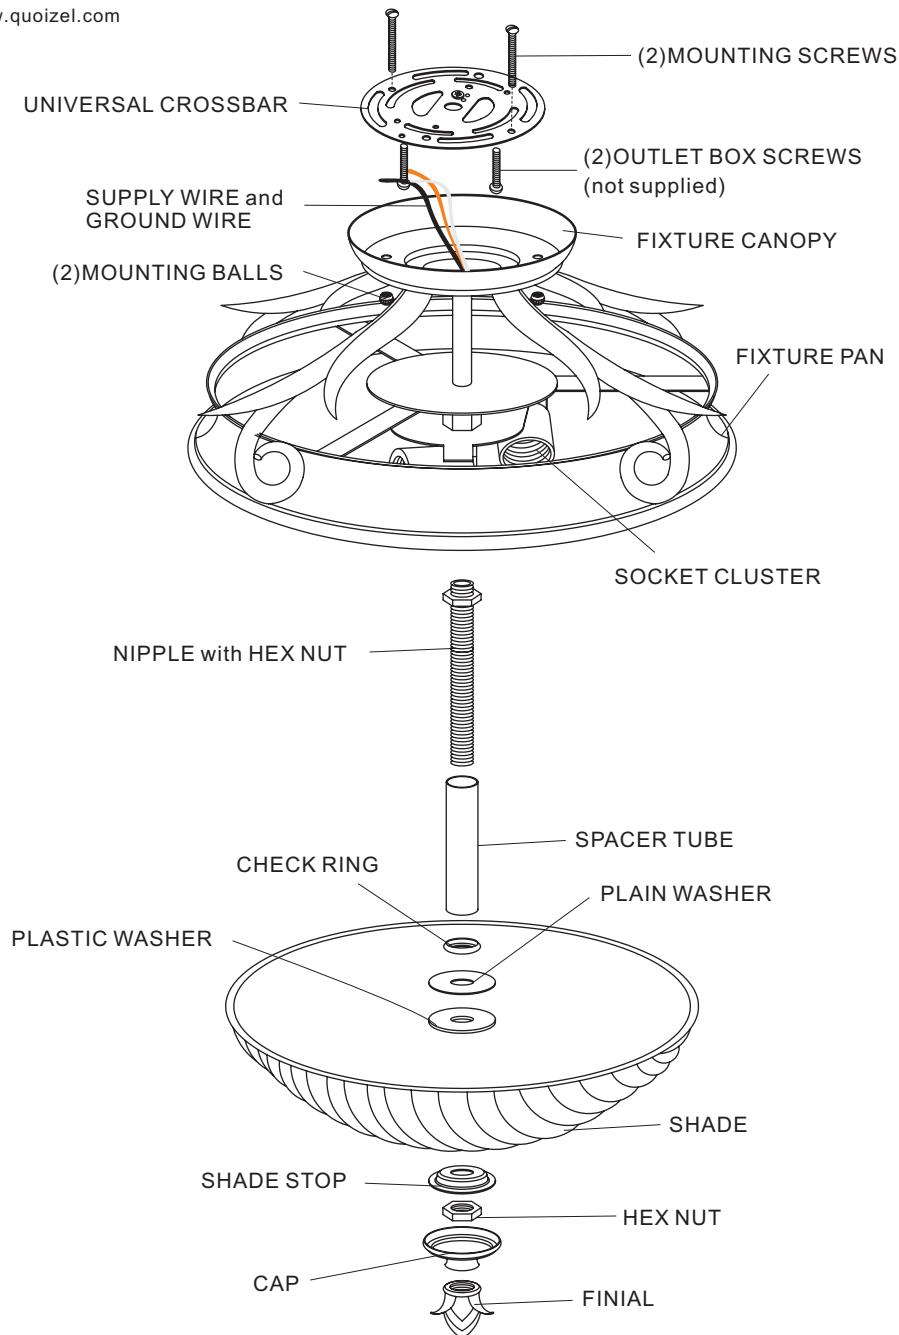

ASSEMBLY / INSTALLATION INSTRUCTIONS

1. Before beginning the installation, carefully unpack and identify all parts, referring to illustration.
2. Turn the electrical power to installation point OFF at circuit breaker.
3. Thread top end of NIPPLE into HEX COUPLING on the underside of SOCKET CLUSTER. Using pliers, thread HEX NUT against HEX COUPLING and hand tighten until snug.
4. Install bulb referring to fixture markings and/or labels for maximum wattage.
5. Locate the following components over NIPPLE in turn: SPACER TUBE, CHECK RING, PLAIN WASHER, PLASTIC WASHER, SHADE and SHADE STOP. Secure them by threading HEX NUT onto end of NIPPLE and hand tighten until snug. Proceed to thread CAP over end of NIPPLE and thread FINIAL onto end of NIPPLE until snug to secure it.
6. Locate the (2) MOUNTING SCREWS and thread them into the back of the UNIVERSAL CROSSBAR, making sure that they match the holes in the FIXTURE CANOPY. Using (2) OUTLET BOX SCREWS (not supplied), fasten the UNIVERSAL CROSSBAR to the OUTLET BOX.
7. **Making the wire connections:** Using wire connectors (not supplied) connect the HOUSE GROUND WIRE to the FIXTURE GROUND WIRE; connect the HOUSE WHITE WIRE to the FIXTURE SUPPLY WIRE (WHITE or RIBBED SIDE); connect the HOUSE BLACK (or RED) WIRE to the FIXTURE SUPPLY WIRE (BLACK or SMOOTH SIDE). Wrap each connection with approved electrical tape.
8. Carefully tuck all of the wiring up into the outlet box, and fit the FIXTURE CANOPY over the MOUNTING SCREWS. Secure the FIXTURE CANOPY to the ceiling with the (2) MOUNTING BALLS, making sure that the balls are fully threaded onto the MOUNTING SCREWS before tightening.
9. Restore power to installation point ON. Retain this sheet for future reference.

***IF IN DOUBT ABOUT ELECTRICAL INSTALLATION,
CONSULT A LICENSED ELECTRICIAN!***