


# ASSEMBLY / INSTALLATION INSTRUCTIONS

**QUOIZEL**

6 CORPORATE PARKWAY  
GOOSE CREEK, SC. 29445  
www.quoizel.com

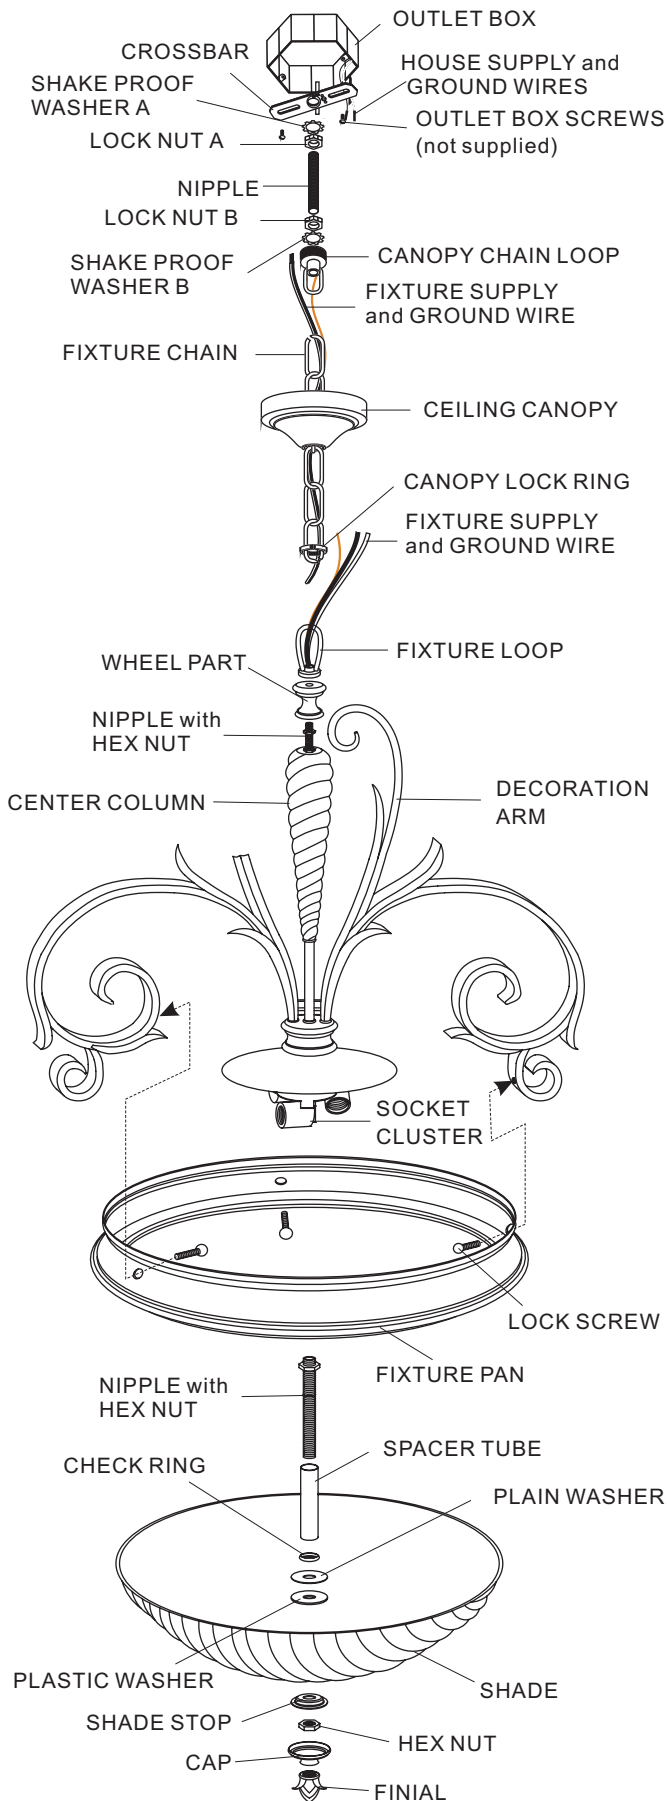

***IF IN DOUBT ABOUT ELECTRICAL  
INSTALLATION, CONSULT A  
LICENSED ELECTRICIAN!***

1. Before beginning the installation, carefully unpack and identify all parts, referring to the illustration.
2. Turn power to the installation point OFF at circuit breaker.
3. Unfold DECORATION ARMS to proper locations. Locate WHEEL PART over top end of NIPPLE on the top center of CENTER COLUMN. Thread FIXTURE LOOP onto top end of NIPPLE to secure the WHEEL PART. Tighten until snug.
4. Lift FIXTURE PAN upward and match the holes on it with MOUNTING HOLES on the DECORATION ARMS. Thread LOCK SCREW into the MOUNTING HOLES and hand tighten until snug to secure FIXTURE PAN and DECORATION ARM together.
5. Locate NIPPLE with HEX NUT. Thread top end of NIPPLE into HEX COUPLING on the underside of the SOCKET CLUSTER. Using pliers, thread the HEX NUT against the HEX COUPLING and hand tighten until snug.
6. Locate the following components in turn: SPACER TUBE, CHECK RING, PLAIN WASHER, PLASTIC WASHER, SHADE and SHADE STOP. Secure them together by threading the HEX NUT onto the end of NIPPLE. Hand tighten until snug. Proceed to locate CAP over end of NIPPLE and thread FINIAL onto the nipple and tighten until snug to secure it.
7. Fasten the CROSSBAR to the OUTLET BOX with (2) OUTLET BOX SCREWS (not supplied). Proceed to thread LOCK NUT A and SHAKE PROOF WASHER A onto the top end of NIPPLE. Thread NIPPLE into the center of CROSSBAR. Locate the LOCK NUT B onto the bottom end of the NIPPLE. Tighten LOCK NUT A against CROSSBAR with plier until snug.
8. Locate the FIXTURE CHAIN and determine desired hanging height of fixture. Adjust chain by removing links if needed. Please note that depending on chain material thickness, you might be required to use chain pliers to spread links open. Proceed to attach one end of chain to FIXTURE LOOP, attached to top of fixture. Pass the fixture wires through FIXTURE CHAIN alternating links. Proceed to pass the fixture wires through the following mounting components in this order: 1)CANOPY LOCK RING; 2)CEILING CANOPY.
9. Making the connections: (2 people recommended for the remaining steps) Position the fixture under the ceiling mounted outlet box. Pass SHAKE PROOF WASHER B over the NIPPLE. Thread CANOPY CHAIN LOOP onto NIPPLE. Thread LOCK NUT B down the NIPPLE, against the CANOPY CHAIN LOOP and snug with pliers. Pass the wires through the NIPPLE. Take up wire slack and trim wires so that approx. 6" will remain inside outlet box. Proceed to attach the top of the FIXTURE CHAIN to the bottom of the CANOPY CHAIN LOOP. Using wire connectors(not supplied) connect the HOUSE GROUND WIRE to the FIXTURE GROUND WIRE; connect the HOUSE WHITE WIRE to the FIXTURE SUPPLY WIRE (WHITE or RIBBED SIDE); connect the HOUSE BLACK (or RED) WIRE to the FIXTURE SUPPLY WIRE (BLACK or SMOOTH SIDE). Wrap each connection with approved electrical tape.
10. With the proper connections made, proceed to push the CEILING CANOPY upward over the OUTLET BOX. Be sure that all wires are carefully tucked into the OUTLET BOX cavity. Secure canopy against ceiling by threading CANOPY LOCK RING onto the CANOPY LOOP. Tighten until snug.
11. Install bulbs referring to fixture markings and/or labels for maximum wattage.
12. Restore power to the installation point ON. Retain this sheet for future reference.