


QUOIZEL

6 CORPORATE PARKWAY
GOOSE CREEK, SC. 29445
www. quozel. com

ASSEMBLY/INSTALLATION INSTRUCTIONS

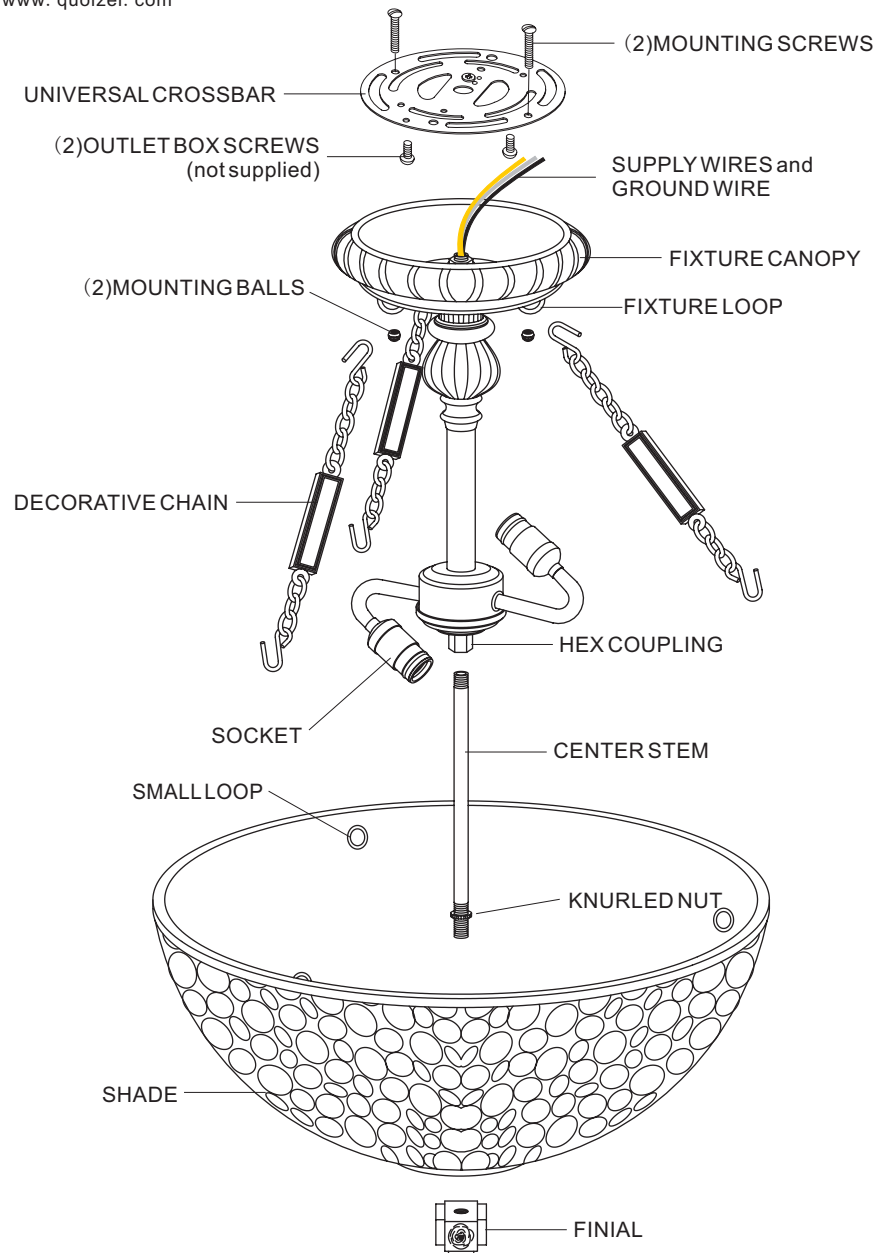

1. Before beginning the installation, carefully unpack and identify all parts, referring to the illustration.
2. Turn the electrical power to installation point OFF at the circuit breaker.
3. Locate the (2) MOUNTING SCREWS and thread them into the back of the UNIVERSAL CROSSBAR, making sure that they match the holes in the FIXTURE CANOPY. Using (2) OUTLET BOX SCREWS (not supplied), fasten the UNIVERSAL CROSSBAR to the OUTLET BOX.
4. **MAKING THE WIRING CONNECTIONS:**
Using wire connectors (not supplied) connect the HOUSE GROUND WIRE to the FIXTURE GROUND WIRE; connect the HOUSE WHITE WIRE to the FIXTURE SUPPLY WIRE (WHITE or RIBBED SIDE); connect the HOUSE BLACK (or RED) WIRE to the FIXTURE SUPPLY WIRE (BLACK or SMOOTH SIDE). Wrap each connection with approved electrical tape.
5. Carefully tuck all of the wiring up into the outlet box, and fit the FIXTURE CANOPY over the MOUNTING SCREWS. Secure the FIXTURE CANOPY to the ceiling with the (2) MOUNTING BALLS, making sure that the balls are fully threaded onto the MOUNTING SCREWS before tightening.
6. Thread one end of the CENTER STEM into the HEX COUPLING on the underside of the SOCKET assembly. Hand tighten until snug. Adjust the KNURLED NUT on the other end to properly locate the SHADE and FINIAL.
7. Locate one end of the DECORATIVE CHAINS onto the FIXTURE LOOPS. Lift the SHADE upward and over the end of the CENTER STEM. Hang the other end of the DECORATIVE CHAINS onto the SMALL LOOPS inside of the SHADE. Then thread the FINIAL onto the end of the CENTER STEM and hand tighten until snug.
8. Install the correct bulbs referring to the maximum wattage label affixed to the fixture.
9. Restore power to installation point ON. Retain this sheet for future reference.

**IF IN DOUBT ABOUT ELECTRICAL INSTALLATION,
CONSULT A LICENSED ELECTRICIAN!**