

READ AND SAVE THESE INSTRUCTIONS



Coffee Grinder



Use and Care Guide Model 1119

WARNING: A risk of fire and electrical shock exists in all electrical appliances and may cause personal injury or death. Please follow all safety instructions.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

 
 
 
- Read all instructions before using appliance.
- Do not immerse motor base, cord or plug in water or other liquid. See instructions for cleaning.
- This appliance is not for use by children.
- Close supervision is necessary when any appliance is used near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Do not contact moving parts.
- Do not operate any damaged appliance. Do not operate with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Return appliance to the nearest authorized service center for examination, repair, electrical or mechanical adjustment.
- Use attachments only if recommended by Toastmaster Inc.
- Do not use outdoors or while standing in a damp area.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- This appliance is intended for processing small quantities of coffee beans only for immediate consumption. This appliance is not intended to prepare large quantities of ground coffee at one time.
- Check bowl for presence of foreign objects before using.
- Blades are sharp. Handle carefully.
- Be certain lid is securely locked in place before operating appliance.
- Do not attempt to defeat the lid interlock mechanism.
- Use appliance only as indicated in these instructions.

SAVE THESE INSTRUCTIONS

CAUTION: A short power supply cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord. Extension cords are available from local hardware stores and may be used if care is exercised in their use. If an extension cord is required, special care and caution is necessary. Also the cord must be: (1) marked with an electrical rating of 125 V and at least 10A., 1250 W., and (2) the cord must be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.

POLARIZED PLUG: This appliance has a polarized plug, (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

This product for household use only.

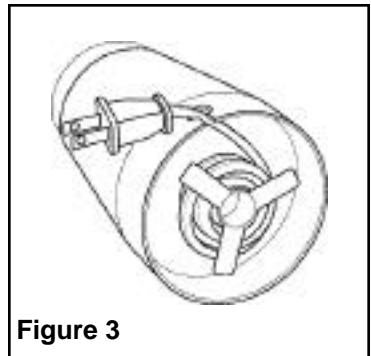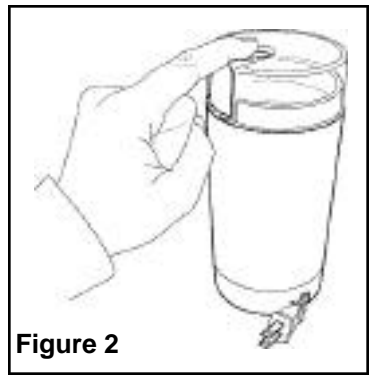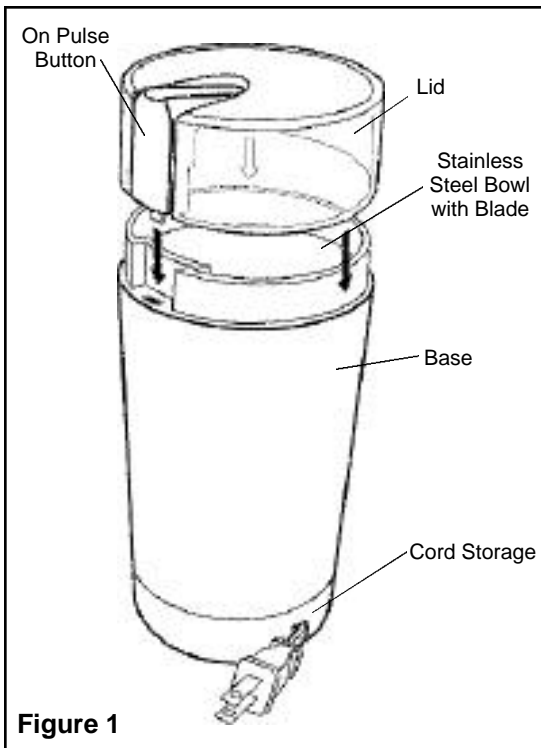

USING YOUR COFFEE GRINDER

1. Remove all packaging materials before using.
2. Before using, wipe blades and stainless steel bowl with a damp lint-free cloth, wash and dry lid (see CARE AND CLEANING).

CAUTION: BLADES ARE SHARP. HANDLE CAREFULLY.

CAUTION: NEVER PLACE BASE OF APPLIANCE IN WATER OR OTHER LIQUIDS.

3. Place up to 3/4 cup of coffee beans at a time into the stainless steel bowl. If a larger quantity is needed, grind in several small batches.
4. Place the lid on top of the base (see Figure 1).

NOTE: The appliance will not operate unless the Lid is correctly placed on the base.

CAUTION: DO NOT ATTEMPT TO OPERATE WITHOUT THE LID PROPERLY IN PLACE.

5. Plug into 120 V ~ 60 Hz outlet.
6. To start grinder, depress the on/pulse button for 10-30 seconds until the beans are finely ground (See Figure 2). Grinding time will vary with capacity and personal preference. Do not operate for more than 60 seconds at a time.
7. When finished grinding, unplug the base.
8. Wait until the blades stop rotating, then remove lid.
9. Remove ground coffee from stainless steel bowl.

HINTS FOR GRINDING COFFEE BEANS

- Most beans require only 10-30 seconds to grind.

- The maximum capacity of approximately 3/4 cup of coffee beans will yield ground coffee for 10-12 cups of brewed coffee.
- Store coffee beans in an airtight container inside the freezer for up to two months—coffee beans can be ground while frozen.

GRINDING HERBS, SPICES, AND NUTS

Use your grinder for grinding most herbs, spices, and nuts. They will have more flavor when freshly ground. Follow directions for grinding coffee beans and grind for 5-10 seconds. For large pieces, pulse the grinder. You may want to consider purchasing a separate grinder for herbs, spices and nuts since the flavor of the coffee may be affected.

HINTS FOR GRINDING HERBS, SPICES AND NUTS

- Do not attempt to grind anything oily or extremely hard such as chocolate, cinnamon, whole cloves or nutmeg.
- Do not use to puree soft foods or attempt to make pastes from seeds, such as sesame or sunflower.
- Do not attempt to grind grains such as corn, wheat, rice, rye, or barley.
- Rinse and pat dry herbs before grinding.

CARE AND CLEANING

Remove all excess grounds from the stainless steel bowl to prevent stale coffee grounds from affecting the flavor of freshly ground beans.

1. Unplug the grinder.
2. Remove Lid, wash in warm sudsy water, rinse and dry thoroughly.

CAUTION: BLADES ARE SHARP. HANDLE CAREFULLY.

CAUTION: NEVER PLACE BASE OF APPLIANCE IN WATER OR OTHER LIQUIDS.

3. Use a stiff brush to remove any remaining coffee grinds or other ground food from inside the stainless steel bowl.
4. Clean exterior of base with a soft damp cloth and dry. Place lid on base for storing.
5. Turn upside down and wrap cord around cord storage on inside of base (see Figure 3).

Any servicing requiring disassembly other than the above cleaning must be performed by an authorized service center.

SERVICE INFORMATION

Please refer to warranty statement to determine if in-warranty service applies. This appliance must be serviced by a Toastmaster authorized service center. Unauthorized service will void warranty. Consult your phone directory under "Appliances-Household-Small-Service and Repair," or call 1-800-947-3744 in the U.S. and Canada, 52-5-397-2848 in Mexico.

If an authorized service center is not available locally, your appliance may be returned postage prepaid to our National Service Center at the address shown on the back of this book.

Products must be adequately protected to avoid shipping damage. Surround your appliance with three inches of protective padding and include a copy of your dated sales receipt and a note explaining the problem you have experienced. We recommend insuring your package. No CODs accepted.

ONE YEAR LIMITED WARRANTY

Toastmaster Inc. warrants this product, to original purchaser, for one year from purchase date to be free of defects in material and workmanship.

This warranty is the only written or express warranty given by Toastmaster Inc. This warranty gives you specific legal rights. You may have other rights which vary from state to state. ANY OTHER RIGHT WHICH YOU MAY HAVE, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Defective product may be brought or sent (freight prepaid) to an authorized service center listed in the phone book, or to Service Department, Toastmaster Inc., 708 South Missouri St., Macon MO 63552, for free repair or replacement at our option.

Your remedy does not include: cost of inconvenience, damage due to product failure, transportation damages, misuse, abuse, accident or the like, or commercial use. IN NO EVENT SHALL TOASTMASTER INC. BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts, or allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

For information, write Consumer Claims Manager, at the Macon address. Send name, address, zip, telephone area code and daytime number, model, serial number, and purchase date.

KEEP DATED SALES RECEIPT FOR WARRANTY SERVICE.

Keep this booklet. Record the following for reference:

Date purchased _____

Model number _____

Date code (stamped on bottom of unit) _____