## Models 7802, 7803

**Back Height Adjustments**

Turn knob counter clockwise to loosen.
Move back up or down.
Turn knob clockwise to tighten when you have correct position.

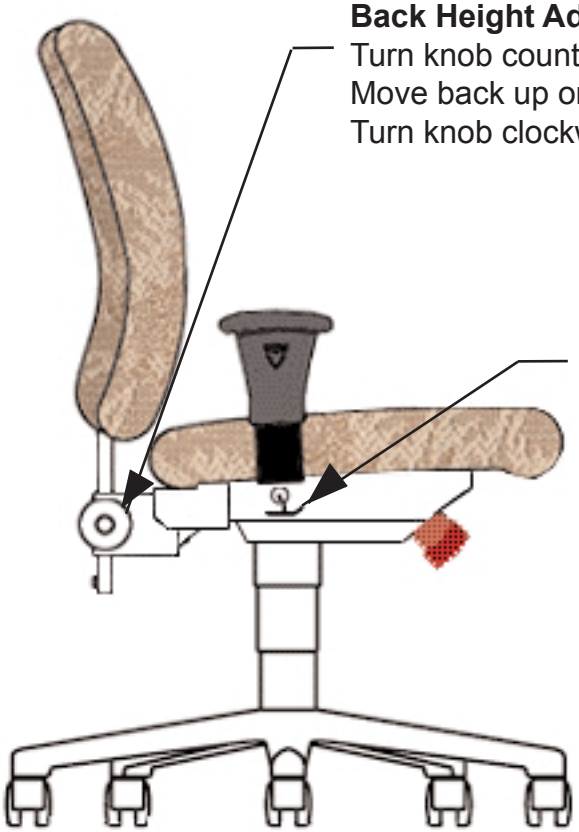

**Pneumatic Seat Height**

Allows users to position seat height so their feet remain flat on the floor.
Twist paddle forward.
The chair will rise as you put less weight on it, and lower as you add weight.

**Tilt and Tilt Lock**

To tilt your seat back
Pull paddle out to unlock tilt.
When in position you want push paddle in to lock.

**Tilt Tension Adjustment**

Controls rate and ease of recline.
To decrease the amount of tension required to tilt the chair back, turn the knob located in front and under your seat (turn counter-clockwise).
To increase amount of tension, tighten the knob (turn clockwise).

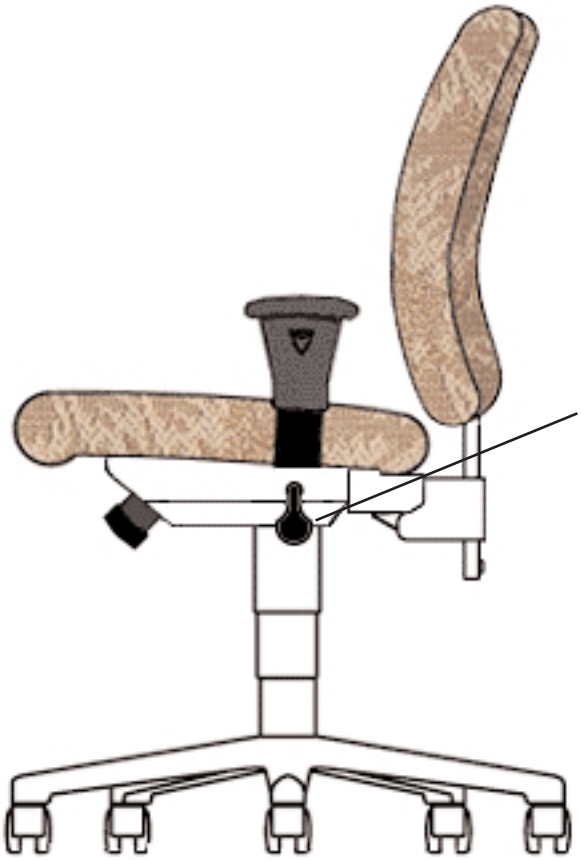

## Model 7803

**Posture Mechanism and Lock**

Back angle adjusts independently of seat and can be locked in an infinite number of positions within a fixed range.

Raise lever on the left side of seat.
Seat back angle is now adjustable.
Find the angle you want.
Lower lever to lock angle in place.