


## PROCEDURES

### TOOLS REQUIRED



Phillips screwdriver

The lock kit may be used on VP1, VP2, and VP3.

1. To install the lock, place the key in the tumbler and remove tumbler from barrel.
2. Insert the 2-1/2" screw through the barrel, through the lower support and into the upper support. Install the offset brackets on the video player if needed. They should be fastened to each side at the bottom or top near center. The bracket should extend beyond the player into the upper or lower support channel.
3. Place the video player in the mount and tighten the adjustment screws. Reinsert the tumbler into the barrel and remove the key.

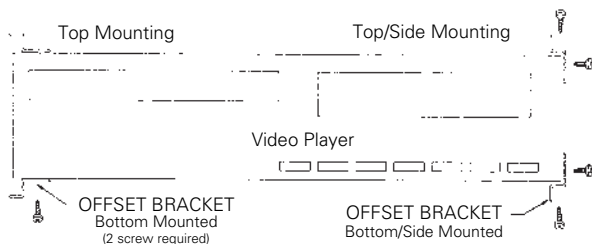

# Assembly Instructions For Advance Video Player Lock Kit VP-LK

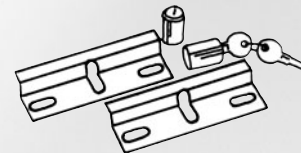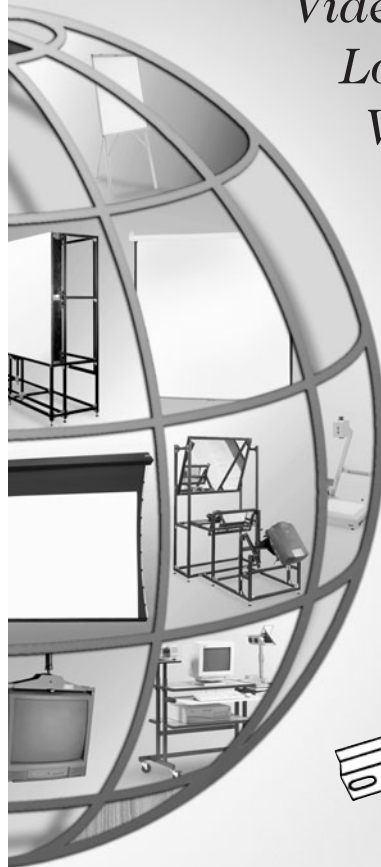

The **POWER** In **PRESENTATION PRODUCTS**



### DA-LITE SCREEN COMPANY, INC.

3100 North Detroit Street  
Post Office Box 137  
Warsaw, Indiana 46581-0137  
Phone: 574/267-8101  
800-622-3737  
Fax: 574/267-7804  
[http:// www.da-lite.com](http://www.da-lite.com)  
e-mail: [info@da-lite.com](mailto:info@da-lite.com)