

REPLACEMENT INSTRUCTIONS

6008 ARM PADS

Illustration 1


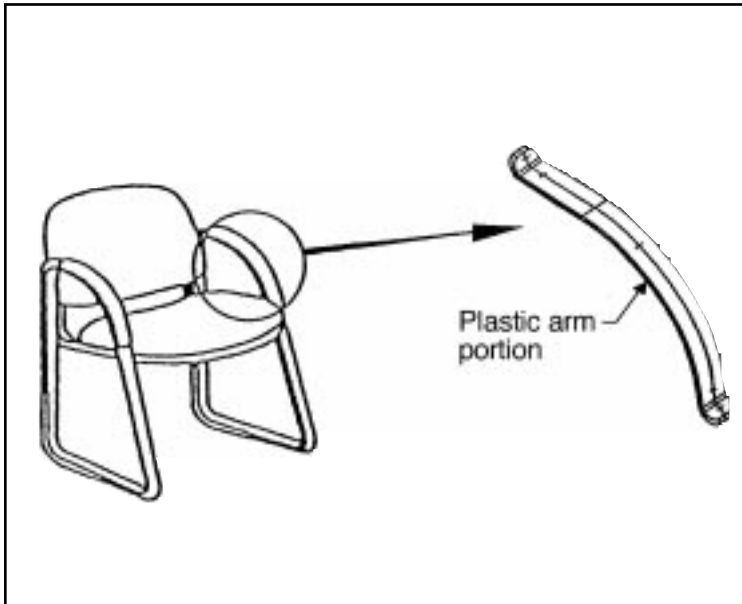


Illustration 2

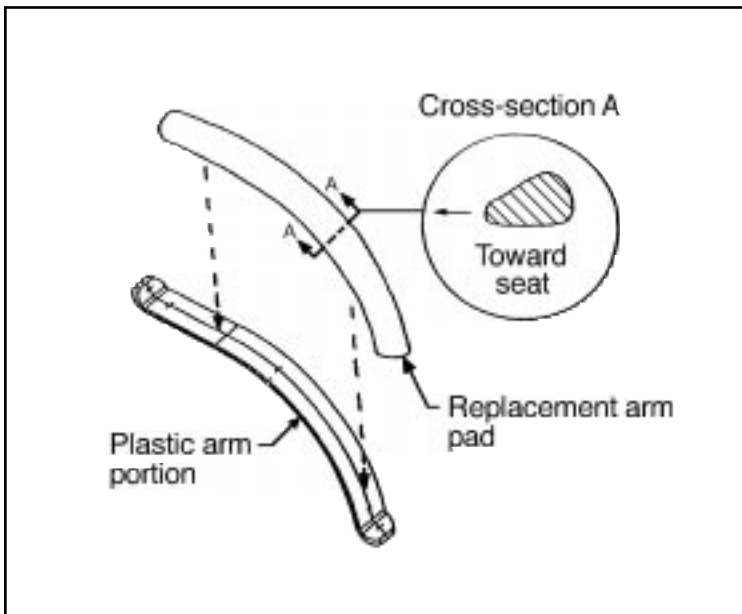

Read all instructions and review the illustration before replacing.

Tools required for parts replacement:
Denatured alcohol

Assembly hardware replacement parts:
Arm pad

Arm Pad Removal (refer to Illustration 1):

1. Remove arm pads that require replacement. Note arm pad orientation prior to removal.
2. Peel off excess remains of adhesive from plastic arm portion of chair.
3. Remove all adhesive and foreign residue by cleaning plastic arm portion thoroughly with denatured alcohol.

IMPORTANT

Mounting tape used to secure arm pad is extremely sensitive and is designed as a permanent installation. Once arm pad makes contact with plastic arm portion of chair it is permanently attached.

Arm pads are right hand and left hand. Slant of replacement arm pad must face toward seat as shown in cross-section A, Illustration 2.

Arm Pad Installation (refer to Illustration 2):

1. Remove brown paper backing from bottom of replacement arm pad.
2. Align replacement arm pad so that it follows the same curvature as the plastic arm portion, is centered on the plastic arm portion from side-to-side, and the top matches the plastic arm portion.
3. Carefully place replacement arm pad onto plastic arm portion.
4. Starting at the top of replacement arm pad, press down firmly on replacement arm pad with the palm of your hand.
5. Repeat Step 4 for entire length of replacement arm pad. Be sure not to miss any portion of replacement arm pad, as this may reduce the strength of bond between the replacement arm pad and the plastic arm portion.
6. Allow eight hours for replacement arm pad to set-up prior to use.

ARM PAD REPLACEMENT KIT

Illustration 1


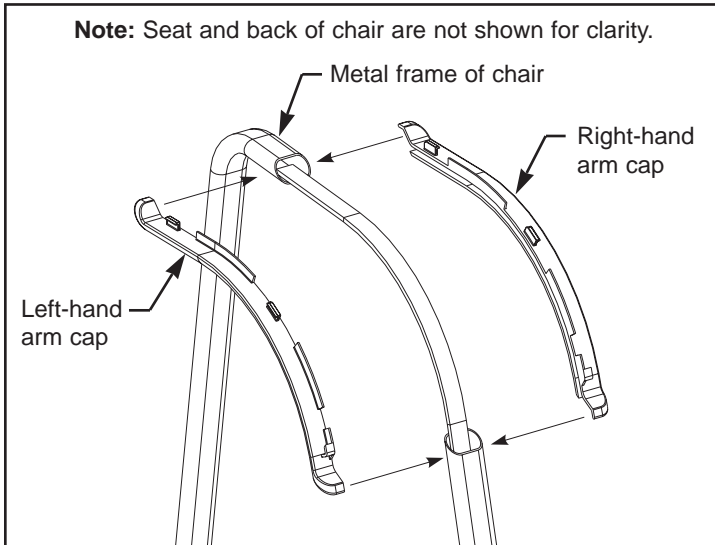


Illustration 2

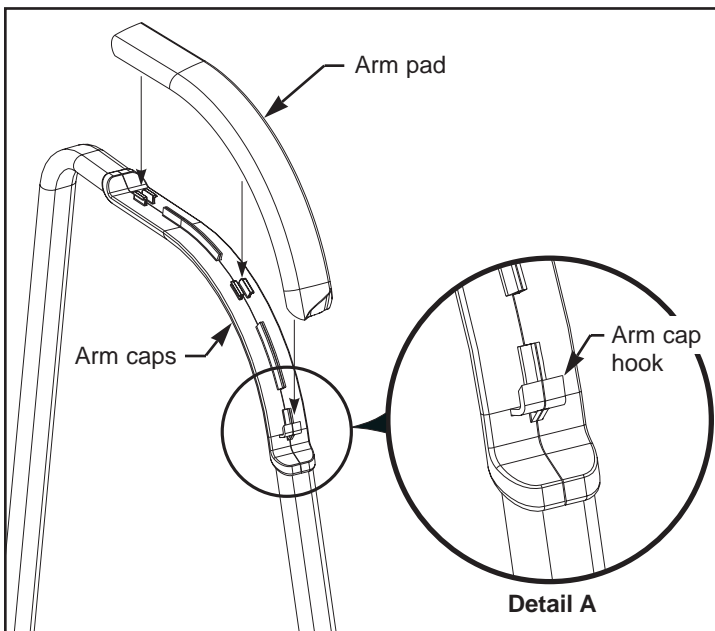

Read all instructions and review illustrations before installing.

Tools required for assembly:
Rubber mallet

This assembly includes:
(2) Right-hand arm cap
(2) Left-hand arm cap
(2) Arm pad

Installation:

1. If necessary, remove old or damaged arm parts from frame of chair, exposing the metal frame of chair arm.
2. Refer to Illustration 1. Install right-hand and left-hand arm caps over metal frame of chair. Ensure top and bottom edges of arm caps are aligned.

IMPORTANT

Ensure arm cap hook (Illustration 2, Detail A) is fully seated into arm pad before locking arm pad into place. Once arm pad is locked onto arm caps it is permanently installed. Attempting to remove arm pad after installation can damage arm caps.

3. Refer to Illustration 2. Place arm pad over right-hand and left-hand arm caps. Insert arm cap hook (Illustration 2, Detail A) into front cavity of arm pad. To lock arm pad into place, use the rubber mallet to firmly strike down on center and top end of arm pad.

INSTALLATION INSTRUCTIONS