

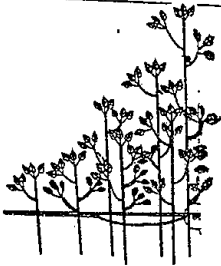

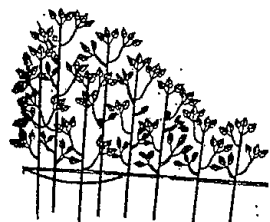





SOUTHERN ENTERPRISES INC.
 RELAX...If you can follow a few easy, step-by-step directions
 in order .YOU CAN ASSEMBLE THIS ITEM.

STYLE NO. GA1136

METAL FOREST WALL ART

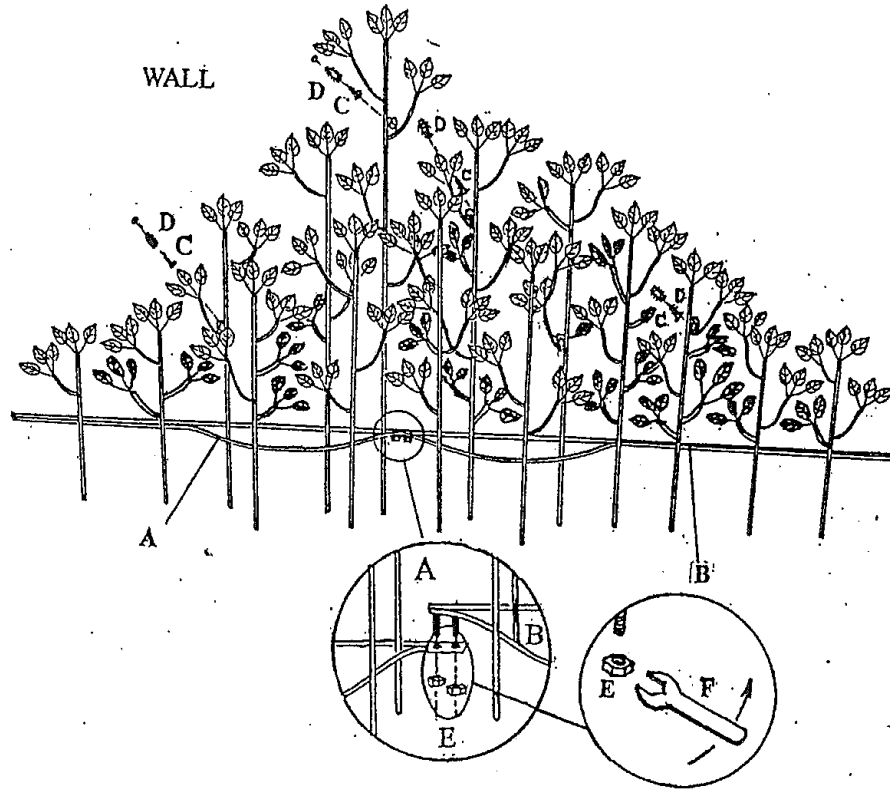
**PLEASE FIND HARDWARE IN RED POLYBAG WITH PART (A) BEFORE DISCARDING
 PACKING MATERIAL.**

		PARTS LIST	
(A) LEFT SIDE 	1PC	(D) PLASTIC ANCHORS 	4PCS
(B) RIGHT SIDE 	1PC	(E) SCREW NUTS 	2PCS
(C) WOOD SCREWS 	4PCS	(F) WRENCH 	1PC

ASSEMBLY INSTRUCTION


1. SELECT A SMOOTH, SOFT SURFACE TO PREVENT SCRATCHING FINISH.
2. YOU MAY NEED A PHILLIP SCREWDRIVER.
3. FIT LEFT SIDE AND RIGHT SIDE (A, B) BY USING SCREW NUTS (E) AND WRENCH (F) AS INSET SHOWN.
4. DRILL FOUR HOLES ON WALL, THE DISTANCE BETWEEN FOUR HOLES SHOULD MATCH THE HANGING HOLES ON BACK OF THE UNIT. FIT PLASTIC ANCHORS (D) INTO THE HOLES ON WALL, USE SCREWDRIVER TO FIT WOOD SCREWS(C) INTO PLASTIC ANCHORS (D). THEN PUT THE UNIT MOUNTED ON WALL WITH HANGING HOLES TO WOOD SCREWS (C).

YOUR NEW METAL FOREST WALL ART IS FINISHED AND READY TO USE.



Please count, identify and compare parts and hardware list to be sure all parts are present. Extra hardware may be included. If any items are missing, please contact our parts/ service department at (800) 633-5096 or in Dallas (972) 869-0111/ 9am-4pm Mon-Fri central time. Missing or damaged hardware and/ or parts will be replaced free of charge. WE DO NOT SELL PARTS.

WE DO NOT RECOMMEND MODIFYING PRODUCT(S) AND WE ARE NOT RESPONSIBLE FOR ANY DAMAGES DUE TO PRODUCT MODIFICATION(S).

PARTS REPLACEMENT FORM			
STYLE NO: GA1136			
Customer Name	PARTS LETTER	PART DESCRIPTION	QUANTITY NEEDED
Street, City, State, Zip			
			
Please indicate where you purchased this item. Store/website/catalog			
Please indicate color/size/style number.			

SOUTHERN ENTERPRISES INC.
P.O. Box 59996 Dallas, Texas 75229