

# SOUTHERN ENTERPRISES, INC.




STYLE# GA5406

**RELAX... If you can follow a few easy step-by-step directions, you can assemble this item.**

## **PART LIST**

A.METAL RAILS	3PCS
B.SIDE TUBE LEFT	1PC
C.BOTTOM APRON	1PC
D.SCREW CAP	4PCS
E.SIDE TUBE RIGHT	1PC
F.ALLEN BOLT	6PCS

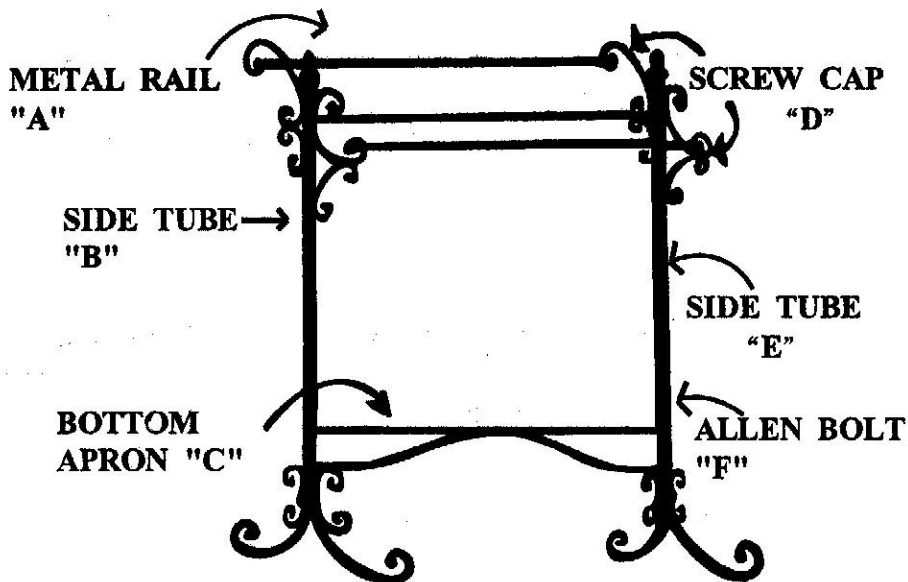

## **STEPS:**

1. UNSCREW SCREW CAPS (D) AND ALLEN BOLTS (F) FROM METAL RAILS(A). ATTACH METAL RAILS "A" AND BOTTOM APRON(C) TO SIDE TUBE RIGHT (E) USING 2 PCS OF SCREW CAP (D) AND 3 PCS ALLEN BOLT (F).
2. AGAIN, USING 2 PCS OF SCREW CAP (D) AND 3 PCS ALLEN BOLT (F) ATTACH THE OTHER END OF METAL RAILS (A) AND BOTTOM APRON (C) TO SIDE TUBE LEFT "B"
3. TIGHTEN ALL SCREWS. YOUR IRON BLANKET IS READY TO USE