


# PETRONILLA


## ROUND SUSPENSION

### Installation Instructions

- Slide canopy center cover, canopy and slug over the stem in the order indicated in diagram 1.
- Mount strap to J-box.
- Pull wires from stem through the center hole of the strap, then screw the stem to the strap.
- Connect wires from stem to wires from J-box and push them back into J-box.
- Position slug at appropriate height on stem and secure by tightening set screws with included allen wrench.
- Slide canopy and canopy center cover up the stem to the slug.
- Screw the canopy center cover into the slug. (Position of slug can be adjusted by loosening the set screws, moving the slug and re-tightening the set screws.)

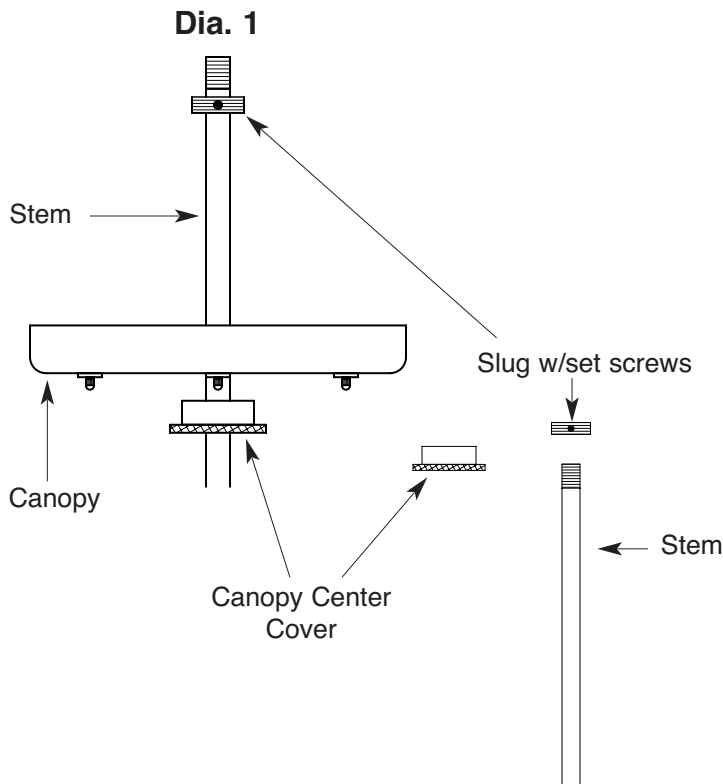


- Hang ring from canopy by inserting the cables attached to the ring into the cable feeders located in the canopy. Loosen nut on cable feeder stem so that you can press the stem towards the canopy. Press feeder stem towards canopy and feed cable into stem. When the feeder stem is released, the cable will be locked. When the feeder stem is pressed toward the canopy, the cable can be adjusted in and out. When the cables are adjusted to the correct height, tighten the nut to secure the cables.

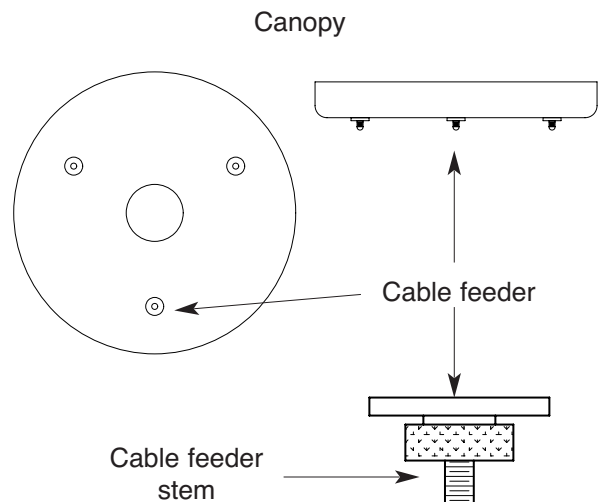


# PETRONILLA

## ROUND SUSPENSION

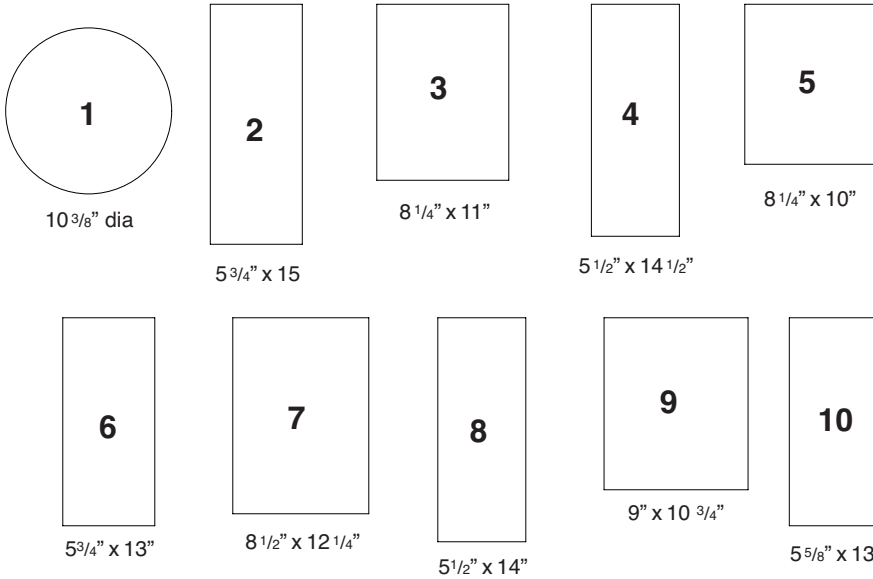

**Standard**  
Inner  
Frosted White Layer

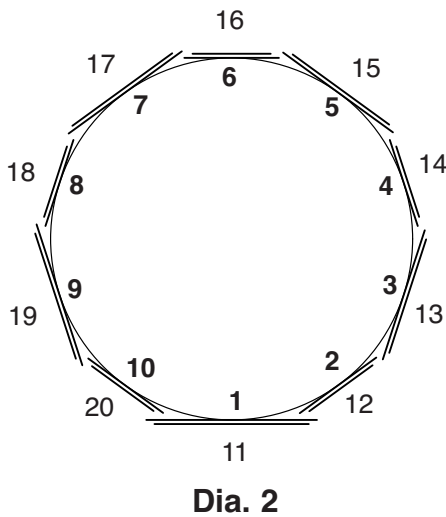

- Install the acrylic panels in the order indicated in Diagram 2.
- Unscrew the nut on the ring.
- Hang acrylic panel/s on bolt and secure with the nut.  
If you purchased the standard fixture you will have a single layer of frosted white panels. If you purchased the color option you will have an additional layer of colored panels.
- Remove any protective covering from the acrylic panels before installation.

**Optional**  
Colored  
Outer Layer

