


# PETRONILLA

## SQUARE SUSPENSION


### Installation Instructions

- Slide canopy center cover, canopy and slug over the stem in the order indicated in diagram 1.
- Mount strap to J-box.
- Pull wires from stem through the center hole of the strap, then screw the stem to the strap.
- Connect wires from stem to wires from J-box and push them back into J-box.
- Position slug at appropriate height on stem and secure by tightening set screws with included allen wrench.
- Slide canopy and canopy center cover up the stem to the slug.
- Screw the canopy center cover into the slug. (Position of slug can be adjusted by loosening the set screws, moving the slug and re-tightening the set screws.)

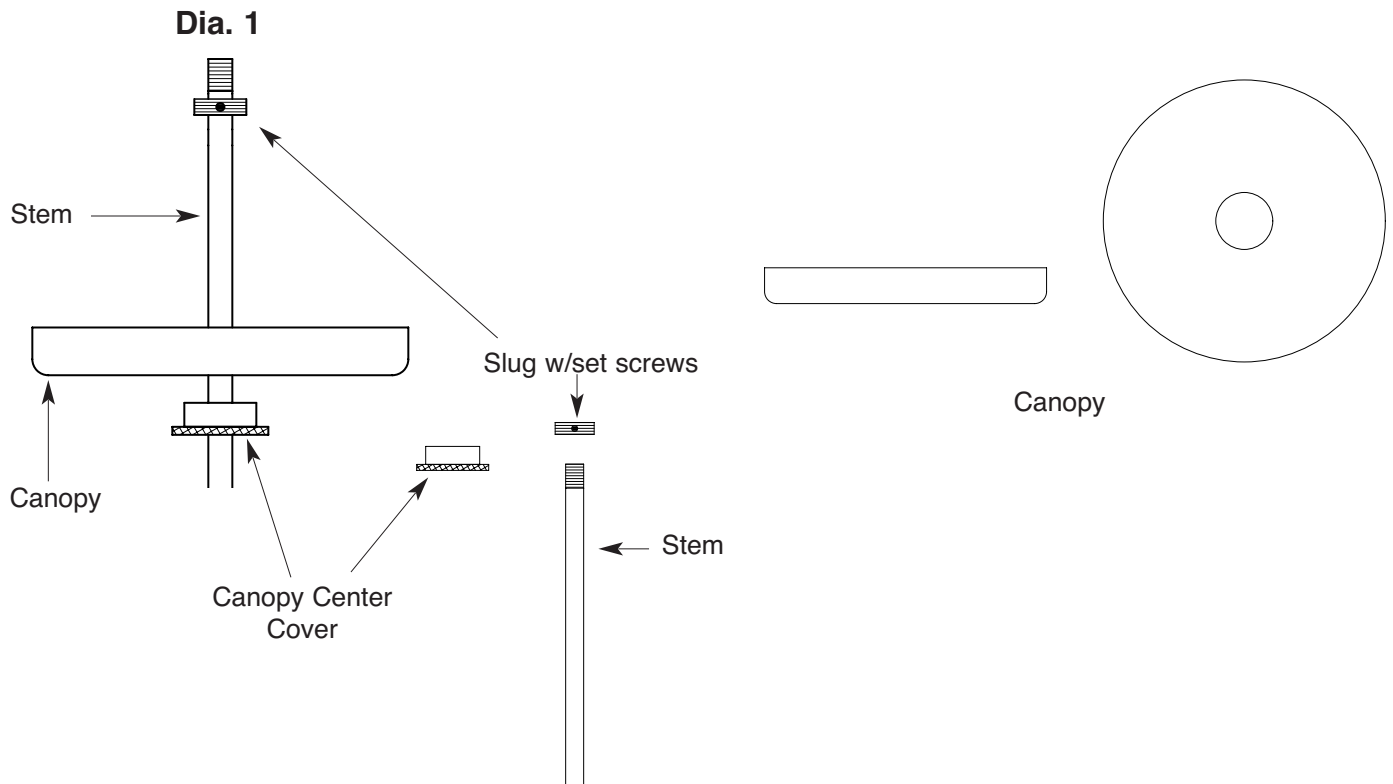


# PETRONILLA

## SQUARE SUSPENSION

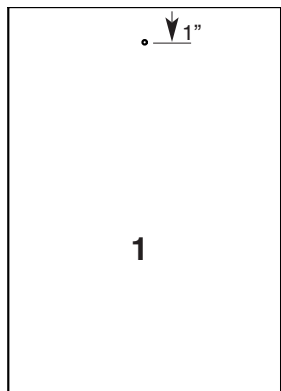


7<sup>3</sup>/<sub>4</sub>" x 11"

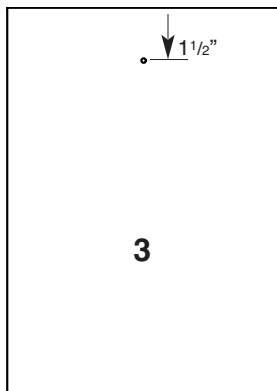


7<sup>3</sup>/<sub>4</sub>" x 11"


- If you have purchased an optional color package, you will have an extra set of panels 1 and 3 in frosted white.
- Install only one set of outer panels.
- Keep the second set in case your color scheme changes at a later date.

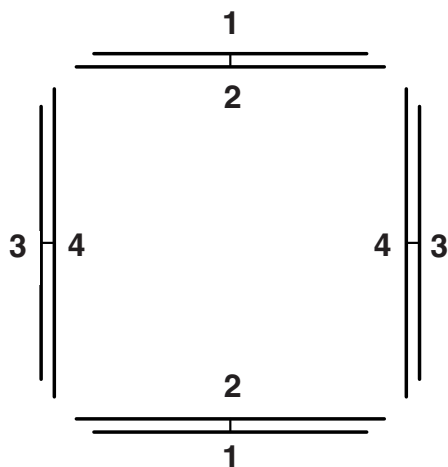

**Dia. 2**

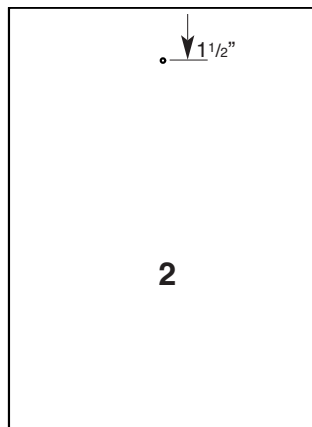

8<sup>3</sup>/<sub>4</sub>" x 12"

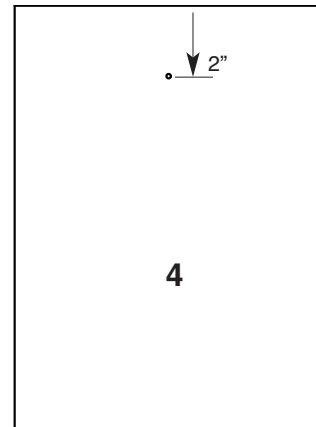

8<sup>3</sup>/<sub>4</sub>" x 12"

- Install the acrylic panels in the order indicated in Diagram 2.
- Each arm has a cap and two spacers. Remove the cap and middle spacer from the arm, leaving the innermost spacer in place.
- Hang panels 2 and 4 on the appropriate arms. (The panels are designed to hang at different heights.)
- Screw middle spacer onto arms to secure panels 2 and 4.
- Hang panels 1 and 3 on the appropriate arms and secure with cap.
- Remove any protective covering from panels before installation