

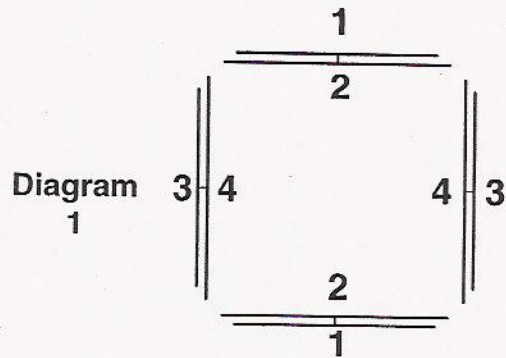
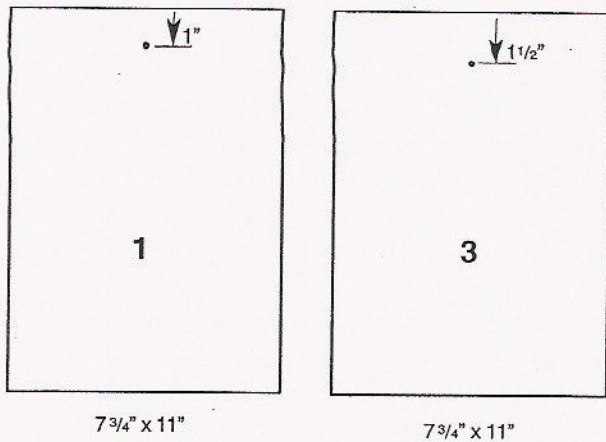


PETRONILLA

Floor

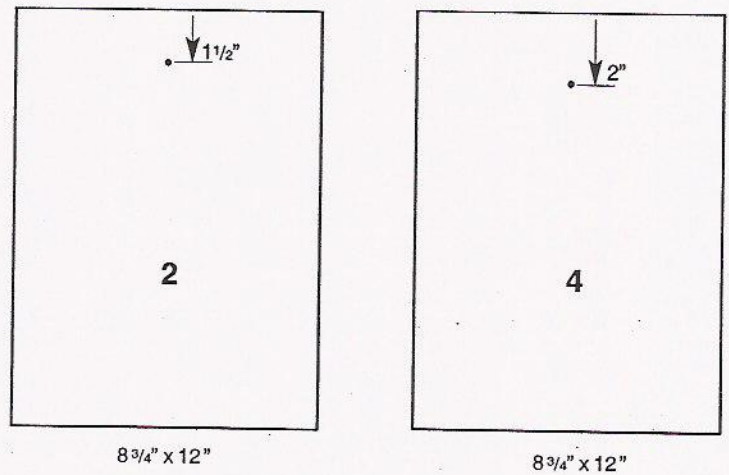

- Install the acrylic panels in the order indicated in Diagram 1.
 - Each arm has a cap and two spacers. Remove the cap and middle spacer from the arm, leaving the innermost spacer in place.
 - Hang panels 2 and 4 on the appropriate arms.
 - Screw middle spacer onto arms to secure panels 2 and 4.
 - Hang panels 1 and 3 on the appropriate arms and secure with cap.
- Remove any protective covering from panels before installation.

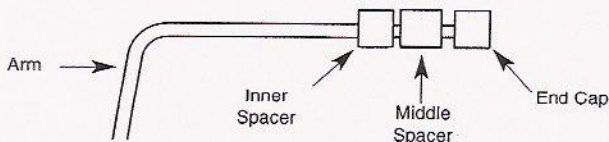

Notes on Panel Installation

- The panels are designed to hang at different heights.
- The edges of the panels should not touch.
- There should be approximately 1/4"-3/8" space between the edges of the panels at the corners.
- The spacing should be even on all four corners.
- The arms should be parallel to the table surface, allowing the panels to hang perpendicular to the table surface.
- Some compression and movement of the arms may have occurred during shipping. **You may have to manipulate the arms and spacers to achieve the correct panel installation.**

