


# INSTALLATION OF MB2000 MAILBOX TO POST USING EXTENSION BRACKETS

(NEW INSTALLATION)

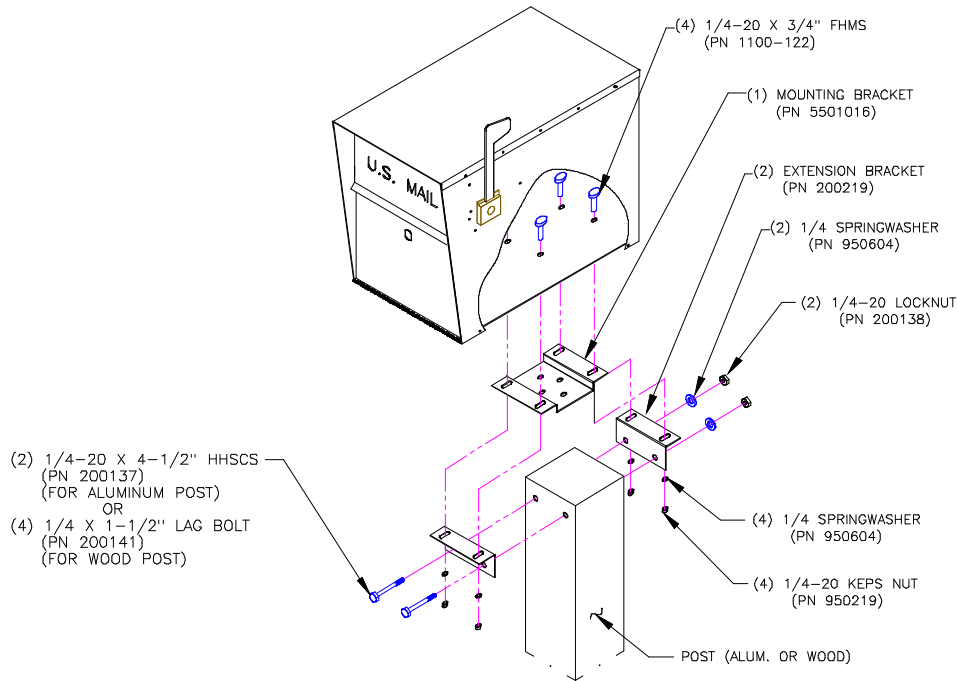

## INSTALLATION NOTES:

1. REMOVE MAILBOX FROM CARTON.
2. REMOVE MOUNTING HARDWARE FROM WITHIN THE MAILBOX.
3. TURN MAILBOX UPSIDE DOWN.  
PLACE MOUNTING BRACKET AGAINST THE BOTTOM OF THE MAILBOX. ALIGN THE (4) SLOTTED HOLES IN THE BRACKET WITH THE (4) 1/4" HOLES IN THE BOTTOM OF THE MAILBOX. (REFER TO ILLUSTRATION)
4. NOW PLACE THE EXTENSION BRACKETS WITH THE SLOTTED HOLE SIDE AGAINST AND MATCHING THE SLOTTED HOLES IN THE MOUNTING BRACKET. (REFER TO ILLUSTRATION)
5. WITH THE BOTTOM DOOR OPEN, PLACE (4) 1/4-20 X 3/4" FHM SCREW FROM INSIDE AND THRU THE BOTTOM OF THE MAILBOX, THRU THE MOUNTING AND EXTENSION BRACKETS SECURE ALL THREE WITH 1/4" SPRINGWASHER AND 1/4" KEPS NUT.
6. NOW, TURNING THE MAILBOX RIGHT SIDE UP AND PLACING IT OVER THE POST SO AS THE (2) HOLES IN EACH EXTENSION BRACKET LINES UP WITH THE (2) HOLES ON OPPOSITE SIDES OF THE POST. (REFER TO ILLUSTRATION)  
NOTE: IF WOOD POST, PLACE MAILBOX ON POST SIMILAR TO ALUM. MAKING SURE EXTENSION BRACKETS ARE CENTERED ON POST.
7. PLACE (2) 4 1/2" BOLTS THRU BRACKETS AND POST, SECURE EXTENSION BRACKETS TO POST WITH (2) 1/4" SPRINGWASHERS AND (2) 1/4-20 LOCKNUTS.  
NOTE: IF WOOD POST IS USED, (2) 1/4 X 1 1/2" LAG BOLTS ON EACH SIDE (TOTAL OF 4 BOLTS) OF POST ARE USED INSTEAD OF THE 4 1/2" BOLTS.

**AUTH AF FLORENCE**  
MANUFACTURING COMPANY  
5935 CORPORATE DRIVE  
MANHATTAN KANSAS 66503

CS5070E

JCP 02/24/04