


PLACE TAPE DIAGONAL HERE

# Instructions for **Mystiq, Sleeq** and **Sierra Style Mirror.**

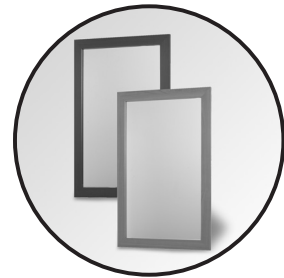

PLACE TAPE DIAGONAL HERE

Please read these instructions carefully before beginning installation. Remove all components from the box to verify that you have all required parts. Please treat the mirror with care to avoid scratching. Do not place mirror directly on the ground while drilling hang holes for mirror. We recommend using a soft material such as cardboard to place between the mirror and the ground.

**⚠ CAUTION: PRODUCT IS FRAGILE. TO AVOID BREAKAGE AND POSSIBLE INJURY HANDLE WITH CARE!**

( PLACE LEVEL ON LINE )

DRILL HOLE



(1/4 Drill Bit)

DRILL HOLE



(1/4 Drill Bit)

Tools Required: Drill, Screwdriver, 1/4" Drill Bit, Level and Tape

1. Find a suitable location where you want to hang your new BATH2O mirror. Place and level this template on wall. After leveling template, tape template to wall.
2. Drill directly into (drill holes) on the template. When finished remove template. **(WARNING! REMOVE TAPE SLOWLY TO AVOID SCUFFS ON WALL.)**
3. Insert the wall anchors (supplied) into the holes. Then put the screws (supplied) into the anchors at a proper depth (1/2 from top of screw). Make sure the screws and anchors are secure.
4. Line up hang holes on back of mirror with newly inserted screws. Hold mirror until mirror is securely in place and enjoy!

### CAUTIONS

1. Don't drop mirror on the ground while installing.
2. Avoid sharp objects that might scratch the surface.
3. Make sure to check if there are wires or water lines behind the wall before drilling.
4. Don't use alkalinescent or acidic cleaning agent. Use a damp cloth to clean the surface.

For immediate assistance on missing or damage parts, please call: 1-800-372-7830 • Customer Service Department BATH2O™ Danco, Inc. 23 Creek Circle, Suite 300 Boothwyn, PA 19061



**BATH<sub>2</sub>O**<sup>TM</sup>

Form. Function. Style.

Made in China  
© 2005 Danco, Inc  
Boothwyn PA 19061.  
BATH2O™ is a registered  
trademark of Danco, Inc  
www.BATH2O.com

R-100506 INSTRUSH-33340 & 33341