

BLU
DOT

1500 JACKSON STREET N.E.
MINNEAPOLIS, MN 55413
WEB: www.bludot.com




231PZ

INSTR

BEGIN NOW


 Choose the appropriate

DESKTOP CD HOLDER

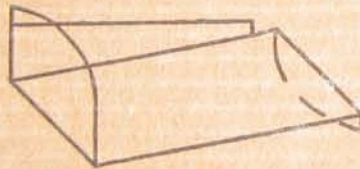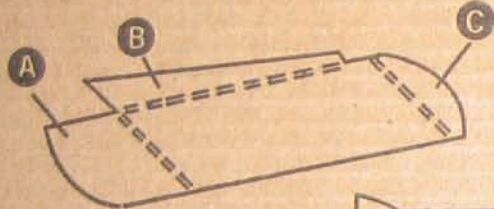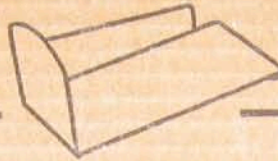


- STEP 1 : Bend panel A up 90 degrees.
- STEP 2 : Bend panel B up 90 degrees.
- STEP 3 : Bend panel C down 90 degrees.

CATCH-ALL STACKING TRAY

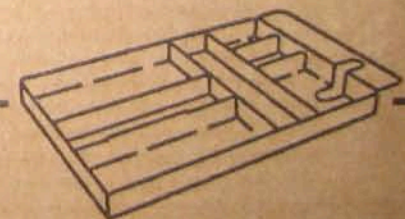

#1

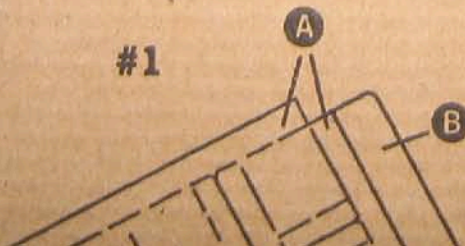

- STEP 1 : Orient the piece so it looks like Drawing #1. Bend all flaps