



1 1/2" - 2" NPT SUPPORT BRACKET KIT CMA-340

Unpack and check contents:


- (2) Support Collar Brackets with Cables Screws
- (4) Turnbuckles
- (4) Wire Rope Clips
- (4) 1/4 - 20 x 3/8" Set Screws
- (4) 5/16 - 18 x 2" Socket Head Cap
- (4) 5/16 - 18 Nylock Nuts
- (1) 1/4" Short-Arm Allen Key
- (1) 1/8" Short-Arm Allen Key

Installation Instructions:

1. Attach Support Collar Brackets to NPT pipe using (4) 5/16-18 x 2.00" SHCS & (4) 5/16-18 Nylock Nuts. Do not tighten.
2. Slide loose Collar Assembly to point in NPT pipe, as low as possible given available cable length, that allows sufficient slack in cables, to attach to upper structure where desired.
3. Tighten screws & install (4) 1/4 - 20 X 3/8" Set Screws to further secure Collar Assembly to NPT pipe.
4. Depending on the ceiling structure involved in a given installation, various fasteners & additional cable may be necessary. Consult your building contractor as to the best method to complete your installation.

NOTE:

Additional Cable & fasteners (supplied by customer) will most likely be needed to complete your particular installation

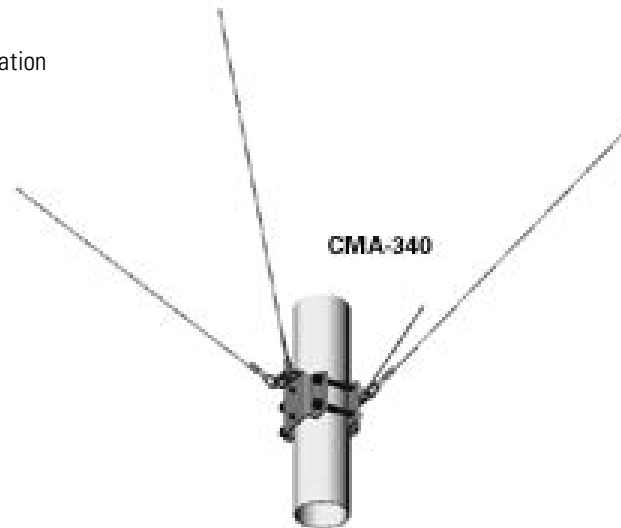

WARNING: IMPROPER INSTALLATION MAY RESULT IN SERIOUS PERSONAL INJURY!

The overhead support **must** be capable of supporting **five times** the weight of the mount **and** equipment combined. If it cannot, it **must** be reinforced.

