

# Asceri Technical Specification


## Robe Hook

# YB8103

### Stock Numbers:

- q **Y8103CH Robe Hook**  
Chrome Finish  
Retail Packaging
- q **YB8103CH Robe Hook**  
Chrome Finish
- q **YB8103CP Robe Hook**  
Chrome & Polished Brass Finish
- q **Y8103CPM Robe Hook**  
Chrome & Platinum Finish  
Retail Packaging
- q **YB8103CPM Robe Hook**  
Chrome & Platinum Finish
- q **YB8103STV Robe Hook**  
Satine & Ivory Finish
- q **YB8103NLBL Robe Hook**  
Nickel & Matte Black Finish
- q **YB8103CGPC Robe Hook**  
Classic Gold & Pebbled Cream Finish

### Dimensions:

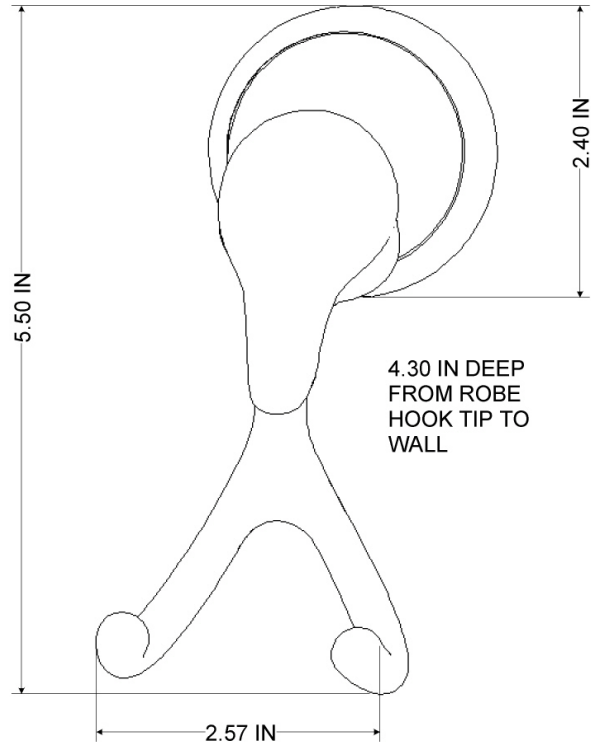

### Materials:

**Robe Hook** is constructed of solid brass and finished in polished chrome (triple plated), combination of chrome and brass, or a variety of designer finishes with a lacquer coat for added protection.

### Installation Instructions:

1. Mounting hardware is included in the package.
2. Position the assembled unit on the wall where desired.
3. Lightly mark the outline of each base.
4. Center a mounting bracket within each base outline.
5. Mark the hole locations of each mounting bracket.
6. Attach each mounting bracket to the wall, using the mounting bracket screws with the optional plastic wall anchors provided. Note: Mounting into wood studs or the use of toggle bolts is recommended whenever possible.
7. Mount each base on the corresponding mounting bracket. Check and make sure that the base set screw hole(s) are facing down. Assemble a setscrew to each base. Use the Allen wrench included in hardware kit to tighten each setscrew and secure the assembly to the mounting bracket(s).

### Cleaning Instructions:

To preserve the fine finish of this product, clean only with a soft damp cloth. Dry well. Do not use commercial or abrasive cleaners.

**Stock Number:** \_\_\_\_\_ **Robe Hook**  
By CSI Bath Furnishings

