

Instruction Sheet / Renaissance Chair



Checklist of Included Items for Assembly:

1. Seat Deck
2. Seat Back
3. Arms (2)
4. Threaded rods (8), Lock Nuts (8) & Washers (8)
5. Wrench (not included)

Step 1

Insert 4 threaded rods into the holes on each arm and hand tighten.

Step 2

Insert the rods on each arm through the four holes on either side of the seat deck, as shown in Illustration A. Now attach the washers and nuts and tighten with a wrench.

Step 3

Align the brackets on either side of the seat back with the clips on the inside of the arms. Push down firmly on the back to lock it into place. See Illustration B. You will hear a click as the back locks. Make sure both brackets are locked in.

You are now ready to dress your chair with a slipcover.

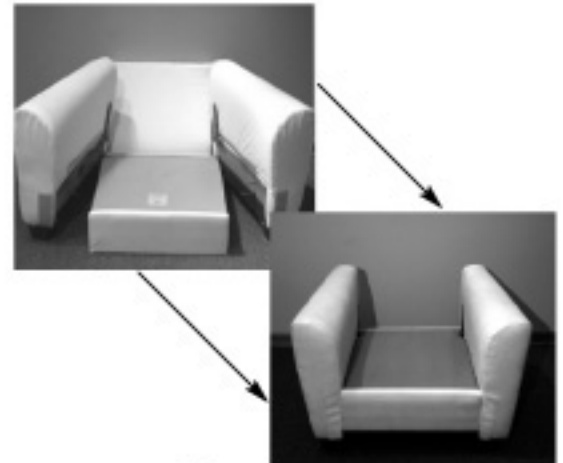


Illustration A



Illustration B

