

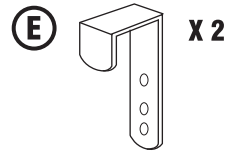



Hardware



Elizabeth Toddler Instructions

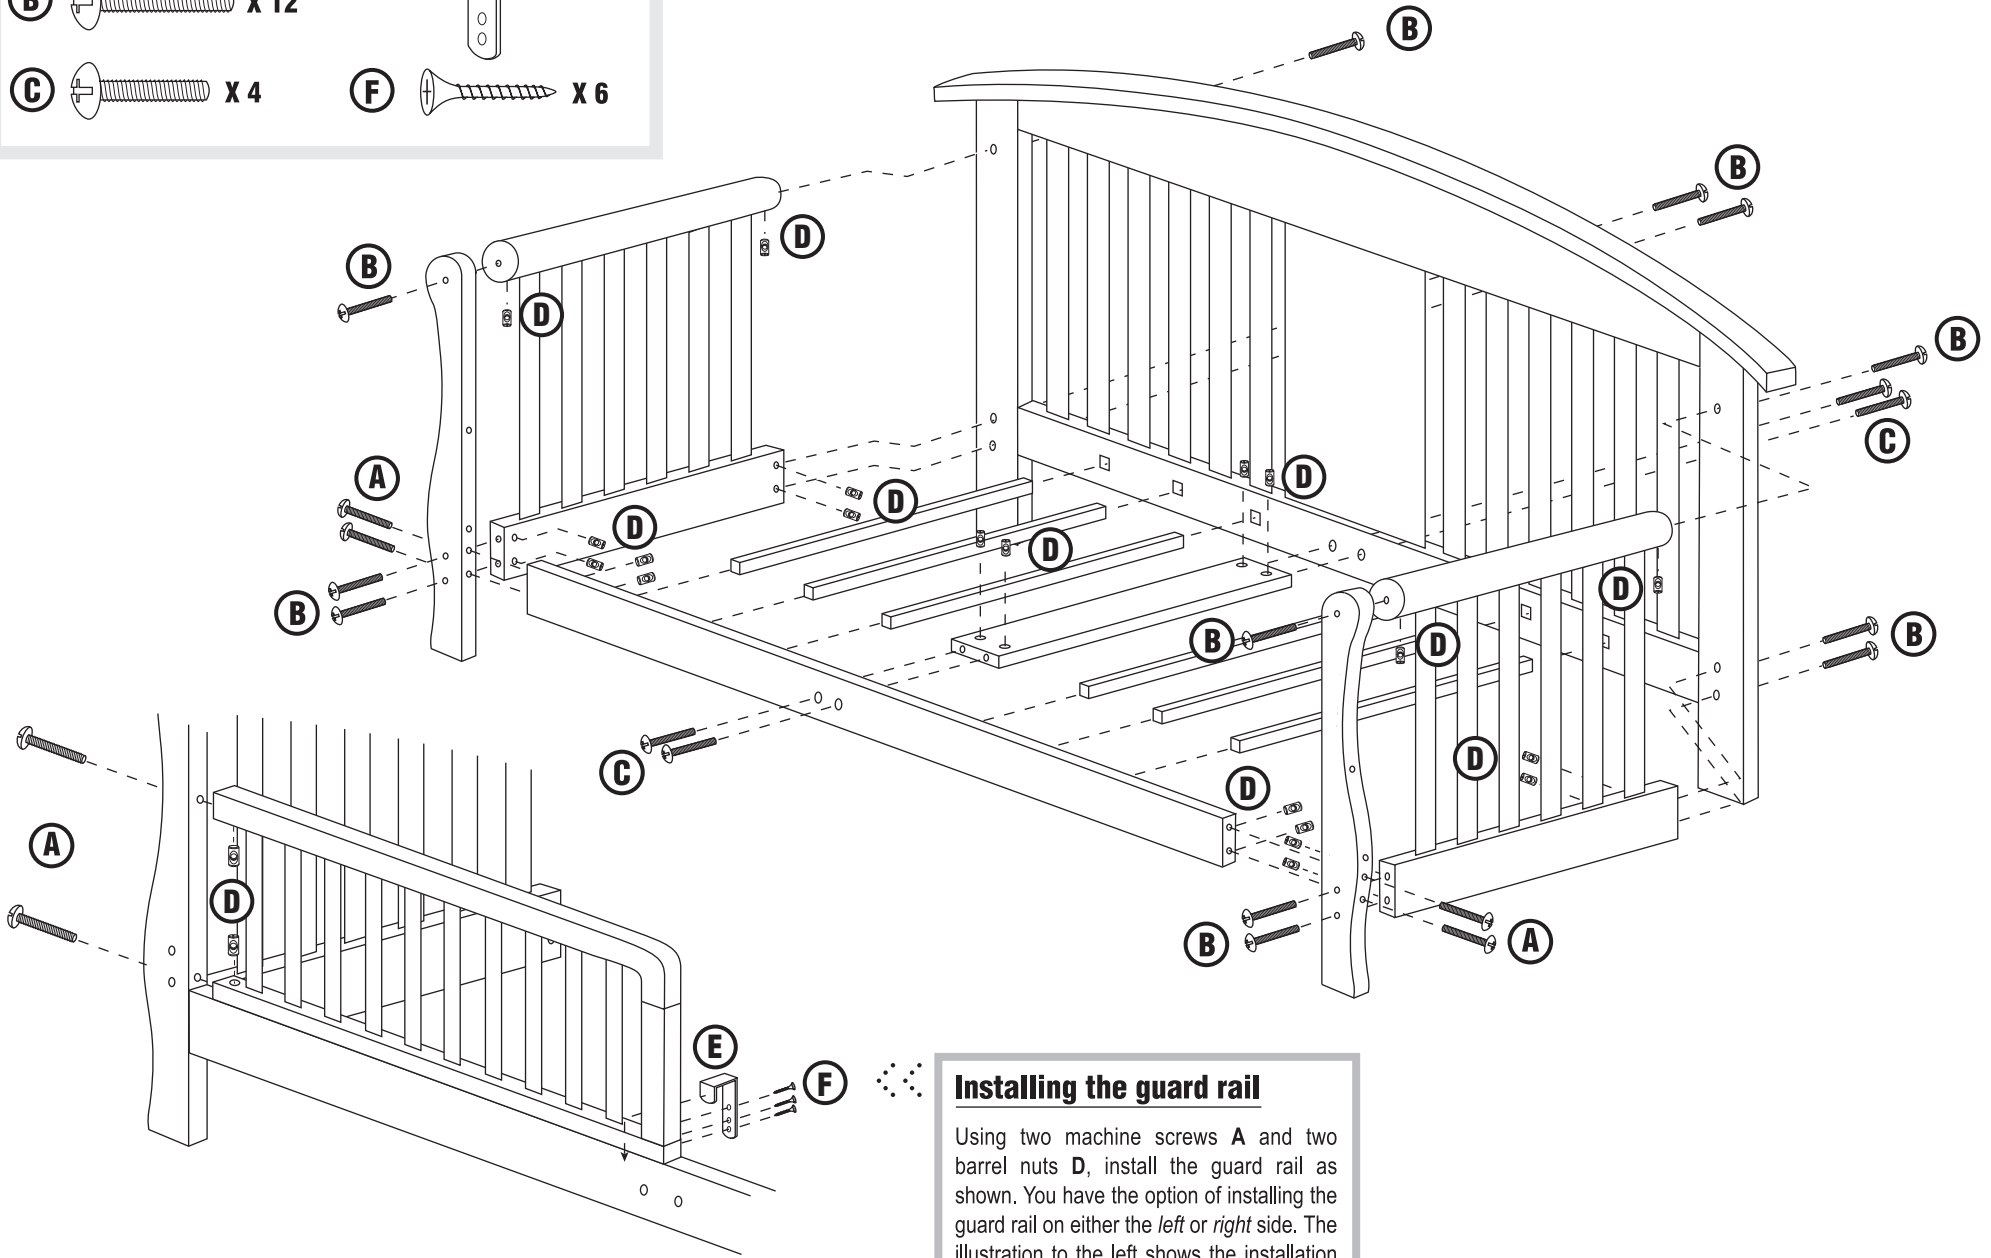


Installing the guard rail

Using two machine screws **A** and two barrel nuts **D**, install the guard rail as shown. You have the option of installing the guard rail on either the *left* or *right* side. The illustration to the left shows the installation for the left side of the toddler bed.


Elizabeth Toddler Bed - Full Size Bed Conversion

1.) Detach the section as shown. This will be your footboard for the full size conversion.


Remove all other parts from the headboard.

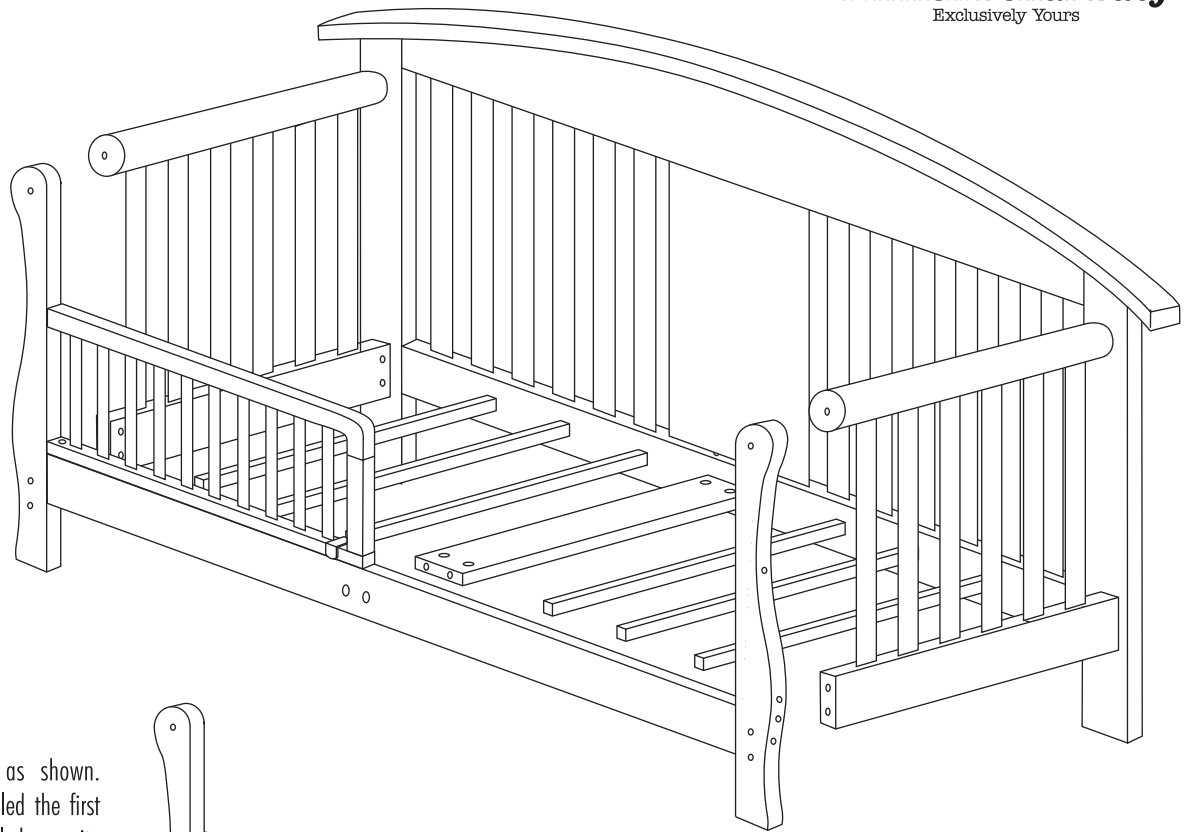

2.) Install the second guard rail as shown. Depending on where you initially installed the first guard rail, the second one will be installed opposite to it. The illustration shows the second rail installed to the right.

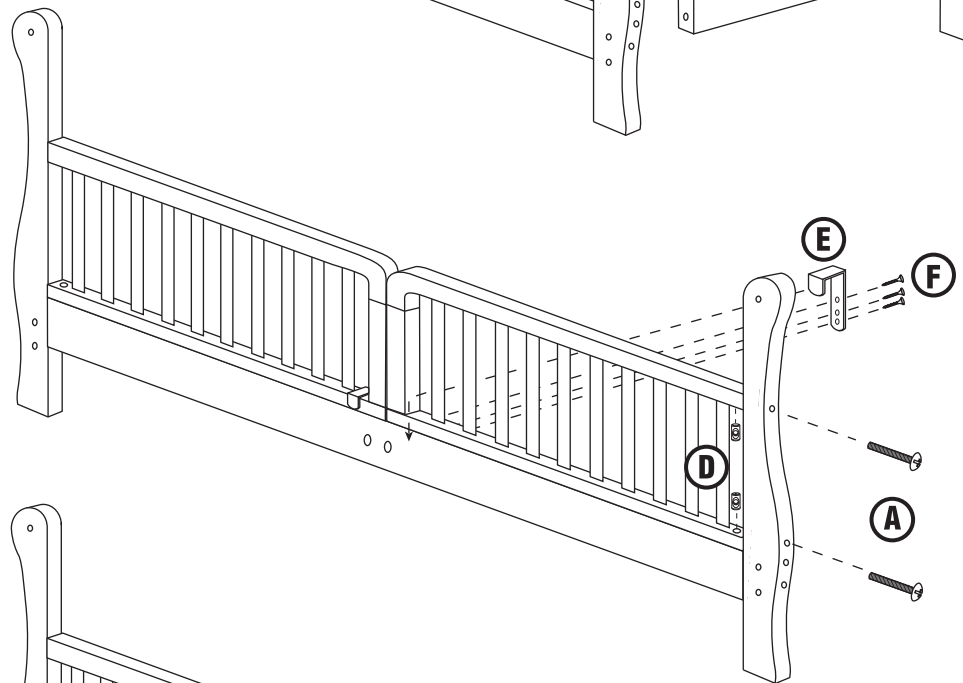

3.) Once installed, you will have your footboard for the full size bed. Go to step 4.

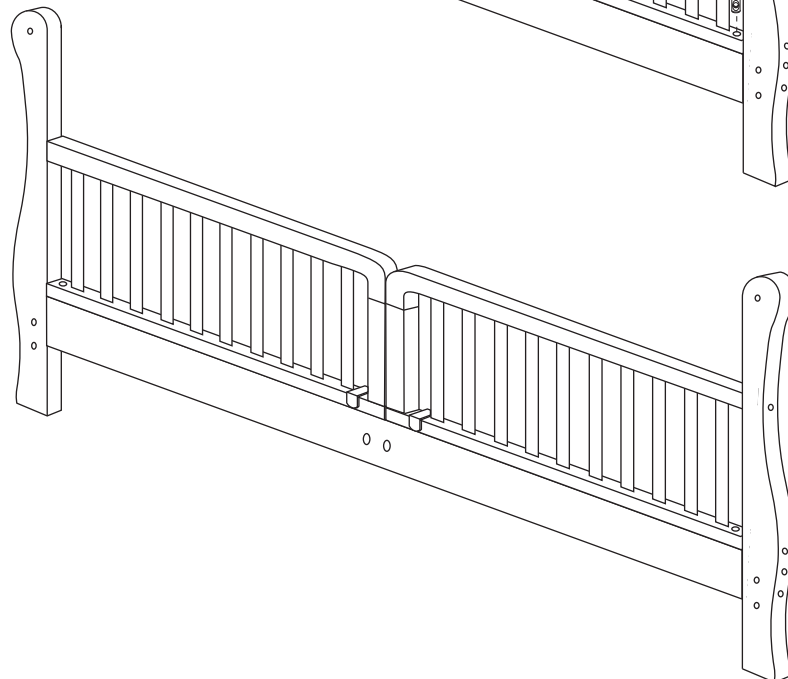

Elizabeth Toddler Bed - Full Size Bed Conversion

4.) With our rail kit (sold separately), assemble the headboard and footboard as shown. Hardware is included in the rail and comes with 8 machine bolts and 8 hex nuts.

