

Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. Online Parts Request: parts.request@hillsdalefurniture.com - Customer Service Phone Number: 502-562-0000

HARDWARE LIST

- A (10) Hex Nuts
- B (10) Spring Washers
- C (10) Metal Washers
- D (10) Plastic Washers
- E (6) Short Allen Bolt
- F (6) Long Allen Bolt
- G (1) Allen Wrench
- H (10) Wood Plugs
- I (1) Open End Wrench
- J (2) Adapter Plates
- N (4) Medium Allen Bolts
- O (4) Small Metal Washers

PARTS LIST

- K (1) Headboard Panel
- L (2) Posts


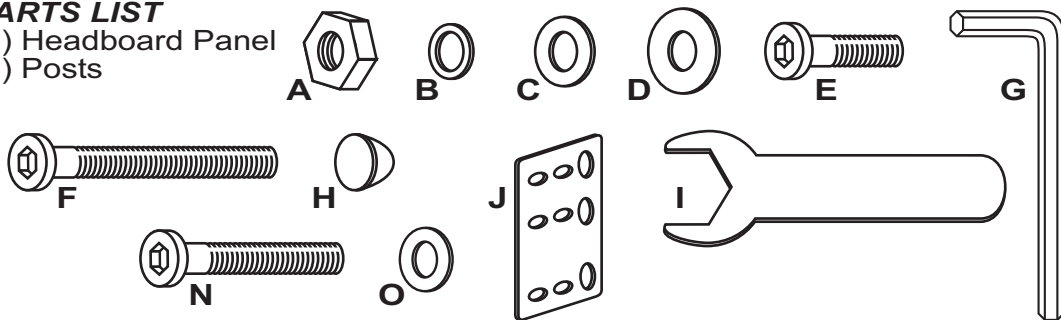


FIGURE 1

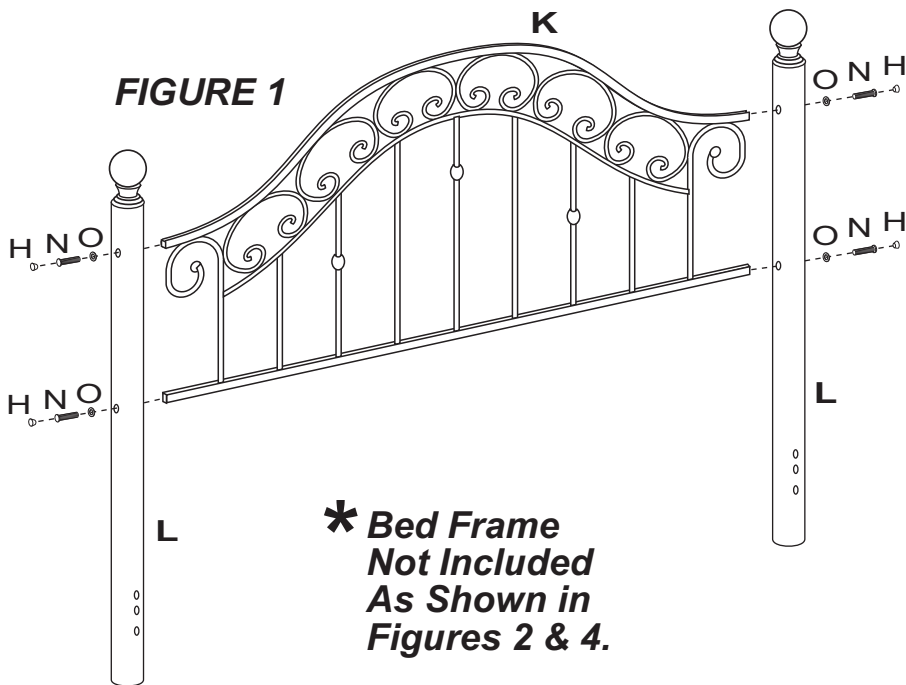

STEP 1

Fasten the Posts (L) to Panel (K) using 2 Medium Allen Bolts (N) & 2 Small Metal Washers (O) as shown in *FIGURE 1*. Tighten All Bolts. Insert Wood Plugs (H) to cover Bolt Heads. See Figure 1.

STEP 2 - ASSEMBLY FOR FULL HEADBOARD ONLY

Attach Bed Frame (Not Included) to Posts (L) using 2 Long Allen Bolts (F), 2 Plastic Washers (D), 2 Metal Washers (C), 2 Spring Washers (B) and 2 Hex Nuts (A) per side. Tighten All Bolts. Insert Wood Plugs (H) to cover Bolt Heads. Discard Adapter Plates. See Figure 2.

STEP 3 - ASSEMBLY FOR QUEEN HEADBOARD ONLY

Fasten Adapter Plates (J) to Posts (L) using 2 Long Allen Bolts (F), 2 Plastic Washers (D), 2 Metal Washers (C), 2 Spring Washers (B) and 2 Hex Nuts (A) per side. Tighten All Bolts. Insert Wood Plugs (H) to cover Bolt Heads. See Figure 3.

STEP 4

Fasten Bed Frame (Not Included) to Adapter Plates (J) using 2 Short Allen Bolts (E), 2 Plastic Washers (D), 2 Metal Washers (C), 2 Spring Washers (B) and 2 Hex Nuts (A) per side. Tighten All Bolts. See Figure 4. The assembly is now complete.

FIGURE 2

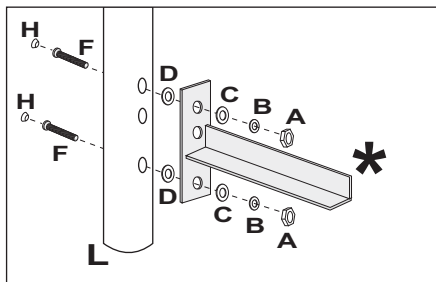


FIGURE 3

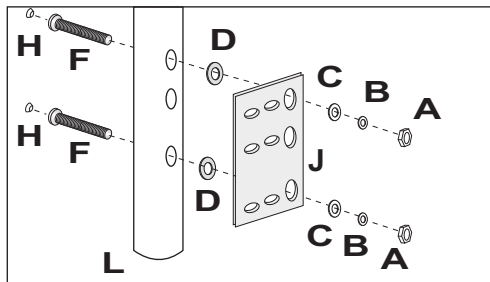


FIGURE 4

