

# SILVERTON SWIVEL STOOLS

Model #4734-826 Swivel Counter Stool

Model #4734-830 Swivel Bar Stool

Date: 02-23-06


Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly required. Online Parts Request: [parts.request@hillsdalefurniture.com](mailto:parts.request@hillsdalefurniture.com) - Customer Service Phone Number: 502-562-0000

## HARDWARE LIST

- A (6) Allen Bolts 1/4" x 1-1/4"
- B (8) Allen Bolts 1/4" x 3/4"
- C (4) Allen Bolts 1/4" x 1/2"
- D (2) Allen Bolts 1/4" x 1"
- E (20) Spring Washers 1/4"
- F (8) Flat Washers 1/4"
- G (4) Camber Washers 1/4" x 13mm
- H (8) Camber Washers 1/4" x 16mm
- J (4) Wood Screws
- K (1) Allen Wrench

## PARTS LIST

- L (1) Stool Back
- M (1) Seat Base
- N (1) Seat Cushion
- P (1) Support Ring
- Q (2) Rear Stool Legs
- R (2) Front Stool Legs
- S (1) Foot Support
- T (1) Cross Brace

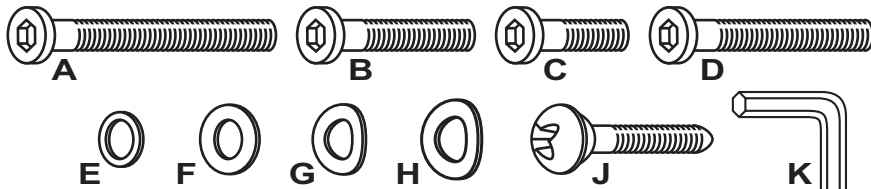

### STEP 1

Begin the assembly by first attaching the Stool Back (L) to the Seat Base (M) by inserting each post into place. Once in place, secure using 1 Allen Bolt (A), 1 Spring Washer (E) & 1 Flat Washer (F) per each end. Tighten all bolts only using the Allen Wrench (K) provided.

### STEP 2

Next, attach each Rear & Front Stool Leg (Q & R) to the bottom of the Support Ring (P) using 2 Allen Bolts (B), 2 Spring Washers (E) & 2 Camber Washers (H) per each leg. Do not fully tighten bolts.

**Note:** The Upright of the back must be consistent with the Front Leg Direction.

### STEP 3

Next attach the Cross Brace (T) to each Rear & Front Stool Leg (Q & R) using 1 Allen Bolt (C), 1 Spring Washer (E) & 1 Camber Washer (G) per each leg. Do not fully tighten bolts.

### STEP 4

Attach the Foot Support (S) to both Front Legs (R) by sliding each end into place and securing using 1 Allen Bolt (D), 1 Spring Washer (E) & 1 Flat Washer (F) from the bottom per each leg. Tighten all bolts from Steps 2 through 4.

### STEP 5

Next attach the Seat Base (M) to the Support Ring (P) using 4 Allen Bolts (A), 4 Spring Washers (E) & 4 Flat Washers (F) through the cross bars and into the swivel metal plate. Tighten all bolts.

### STEP 6

Finally, attach the Seat Cushion (N) to the Seat Base (M) using 4 Wood Screws (J) to secure in place. Only use a phillips head screwdriver (not included) to tighten. The assembly is now complete.

