


TOOLS AND MATERIALS REQUIRED:

- Tape measure
- Screwdrivers
- Level (24" or longer)
- Pencil
- 1/8" hex wrench
- #12 wood screws (minimum)

ROUGHING-IN:

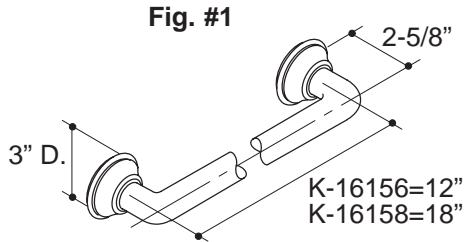

INSTALLATION:



WARNING: Risk of severe personal injury. Minimum 1/2" plywood or 2x4 studding is required to ensure safe mounting support for this grab bar. Refer to ASTM F446 for additional information.

1. Determine the required location for the grab bar installation, and mark the finish wall surface accordingly.

NOTE: Use care to avoid scratching the product finish.

2. Slip an escutcheon onto each end of the grab bar.
3. Handtighten a bracket onto each end of the grab bar.
4. Ensure that the grab bar is plumb or level, as required. Then secure the brackets to the wall with minimum #12 wood screws. **Do not use drywall screws.**
5. Slide the escutcheons flat against the wall, and secure by tightening the setscrews. Do not overtighten.

