















ASSEMBLY INSTRUCTIONS

28036 & 28037 Counter stool & Bar stool

Component parts


#	Description	Sketch	Q'ty
1	Back Frame		1
2	Seat Frame		1
3	Front leg		2
4	Side rail (R/L) Left rail is No.1 , Right rail is No.2 ;		2
5	Front rail		1
6	Seat		1

Hardware Pack

#	Description	Dimension	Sketch	Q'ty
A	Wrench	4MM		1
B	Allen bolt	ϕ 5/16*1-3/4		2
C	Spring washer	ϕ 5/16		10
D	Flat washer	ϕ 5/16* ϕ 3/4		10
E	Allen bolt	ϕ 5/16*2-3/4		4
F	Allen bolt	ϕ 5/16*2-3/4		4
G	Long wood screw	ϕ 4*38		6
H	Short wood screw	ϕ 4*15		4

ASSEMBLY INSTRUCTIONS

28036 & 28037 Counter stool & Bar stool

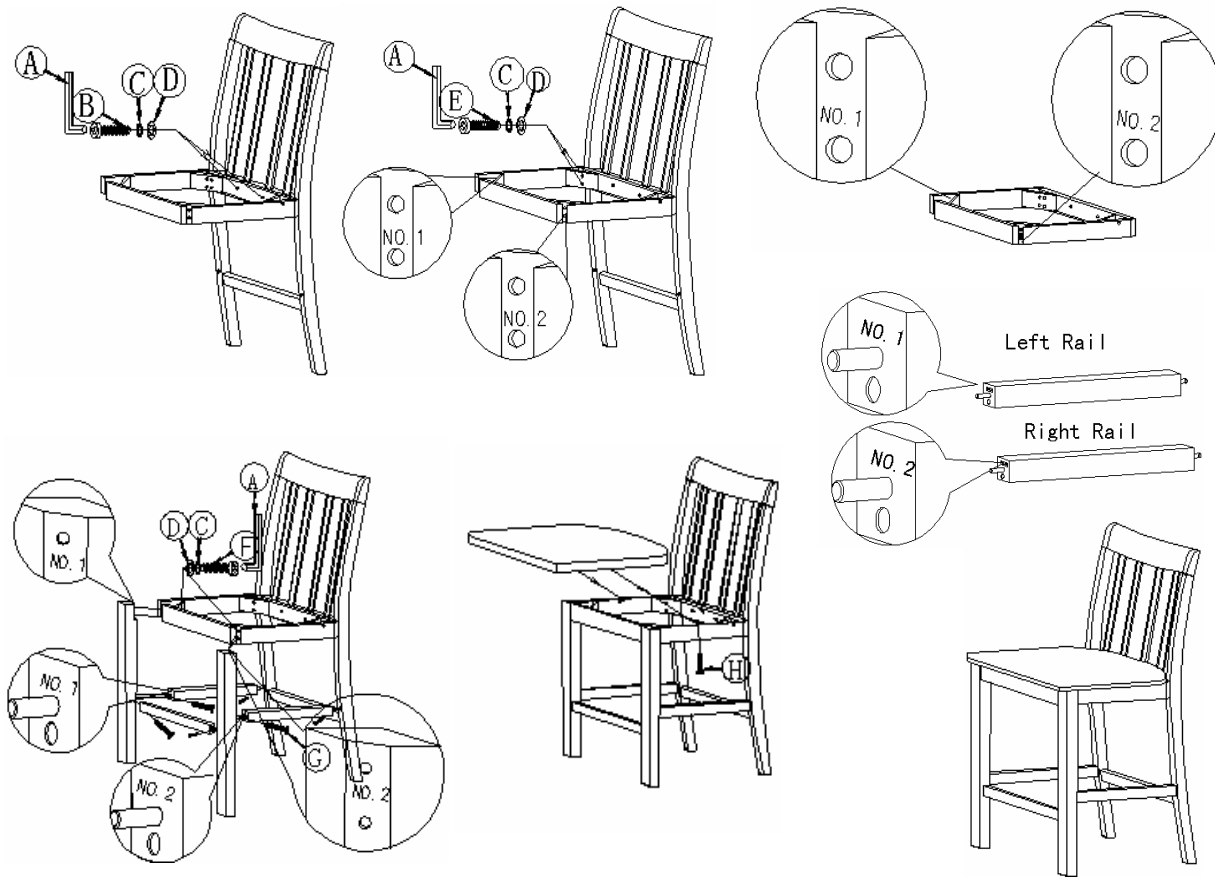

Assembly Steps:

Step 1 Attach the seat frame (#2) to the back frame (#1) using two 1 ¾" long Allen Bolts (B), Spring Washers (C) and Flat Washers (D) into the Back Frame as shown, and use two 2 ¾" long Allen Bolts (E), Spring Washers and Flat Washers into the Back Legs. Tighten all bolts using the Allen Wrench (A).

Step 2 Attach the Left Front Leg, marked with a "1", into the left front corner of the seat frame and the Right Front Leg, marked with a "2" into the right front corner of the seat frame. Attach using two 2 ¾" long Allen Bolts (F), Spring Washers and Flat Washers only partially screwed into each leg. **Do not fully tighten until after Step 4 below.**

Step 3 Install the Front Rail (5) between the front legs, with screw holes positioned towards bottom of chair but do not install screws until Step 6 below.

Step 4 Install the Left Rail (identified with a "1") between the left front leg and back frame, with the screw hole positioned towards the bottom of the chair. Install the Right Rail (identified with a "2") on the right hand side of the chair.

Step 5 Using the Wrench (A) tighten the Allen Bolts attaching both front legs.

Step 6 Install six Long Wood Screws (G) into the bottom of the front and side rails into the front and back legs. Tighten using a phillips-head screwdriver (not provided).

Step 7 Position and align the wood seat on top of the seat frame. Attach using the four Short Wood Screws (H). Tighten using a phillips-head screwdriver.