

Assembly Instructions & Parts Identification

Model Name : 888-820KD

JOFRAN INC.






Prior to assembling, please read through the instructions carefully and verify that you have received all parts listed in key below. Remove all packing materials, including wrapping, staples, and straps. To prevent scratches during assembly, place all wooden pieces on a flat soft surface, such as a carpet or rug. Thank you for purchasing this quality piece of furniture. Please handle with care, as small parts may have come loose during shipment.

CAUTION: DO NOT FULLY TIGHTEN NUTS AND BOLTS UNTIL ALL ARE IN PLACE. DO NOT OVER-TIGHTEN NUTS AND BOLTS, AS IT MAY CAUSE THREAD DAMAGE. KEEP ALL SMALL PIECES OUT OF REACH OF CHILDREN.

PART LIST

NO.	PART NO.	DESCRIPTION	Q'TY
1	888-820KDP40	CHAIR BACK	1 PC
2	888-820KDP41	COMPLETE SEAT	1 PC
3	888-820KDP42	FRONT LEGS	2 PC
4	888-820KDP01F	FLOOR GLIDE	4 PC


HARDWARE LIST

NO.	PART NO.	FIGURE	DESCRIPTION	Q'TY
A	888-820KDP46		ALLEN KEY	1 PC
B			Ø 5/16" * 3 1/4" METAL SCREW	8 PCS
C			Ø 5/16" * 2 1/4" METAL SCREW	8 PCS
D			Ø 5/16" * 2 3/4" METAL SCREW	2 PCS
E			WOOD DOWELS	4 PCS


Step 1

Carefully lay chair back flat on a soft surface and affix complete seat to chair back

(a) Insert E wood dowel into chair back then using Allen key. Insert D screw through seat box into chair back

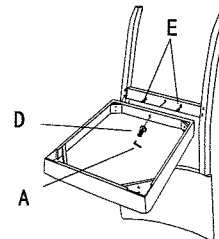


(b) Insert B screws through seat box into chair back.

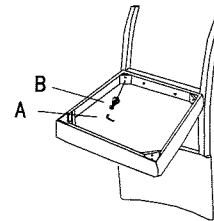

Step 2

Place the front leg in place, attach C screw using A allen key to thread through the corners of the seat rim and into front leg. Again, do not fully tighten.

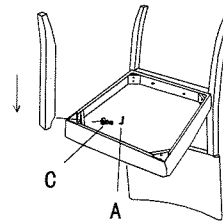

Step 3

Bring chair to upright position, place on the flat floor to balance, then tighten all connections securely. This will level your chair.

