


# Assembly Instructions For

# F2331/6 (E) 1/08

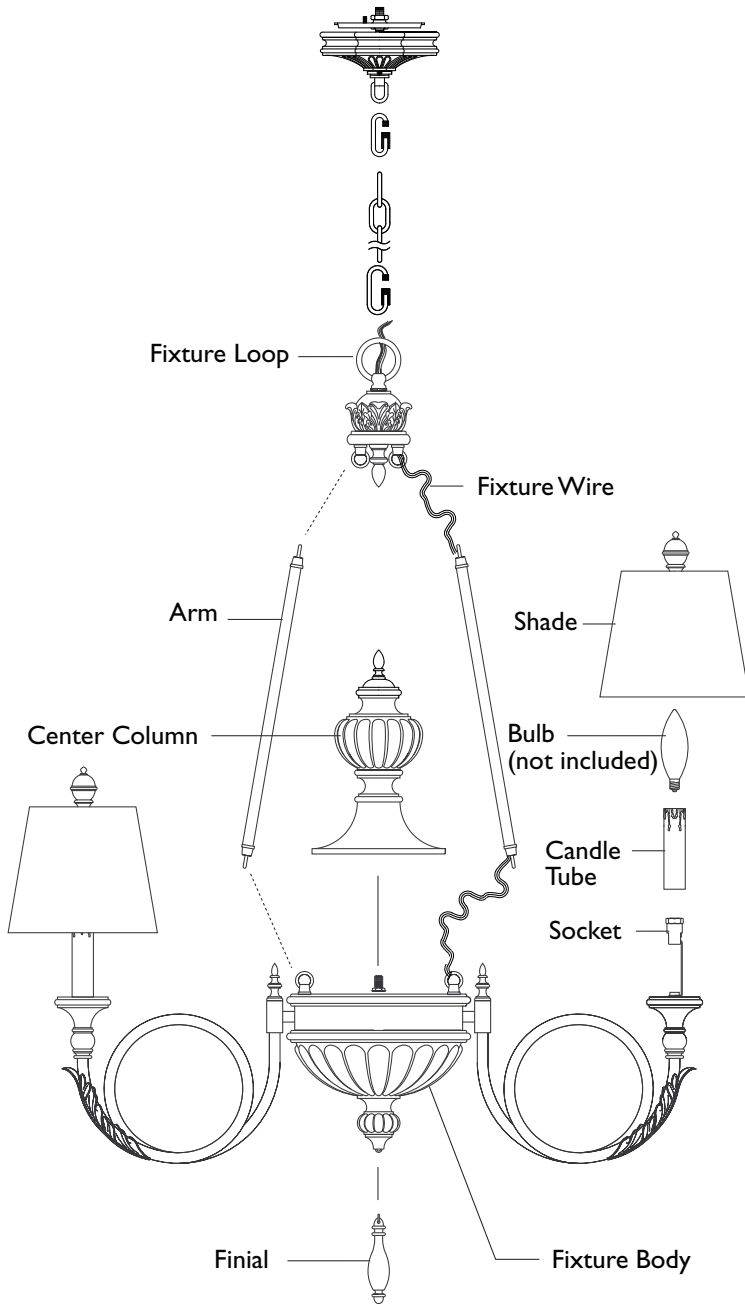


## **IMPORTANT**

### **TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION**

Carefully unpack and identify all parts before assembly.  
Bulbs not included.

1. Carefully thread fixture wire and ground wire through fixture loop. Screw fixture loop onto top threaded pipe until secure.
2. Install central column securely onto top of fixture body.
3. Install arms onto fixture by fastening to hooks.
4. Install finial by screwing onto bottom of fixture.
5. Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture than hire a qualified electrician to create one.
6. Place candle tube onto socket.
7. Install Type B, 60 Watt Max. Candlebra base bulbs (not included) into sockets as noted on relamping label at socket area.
8. Place shade onto bulb.

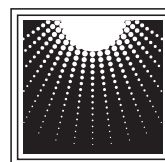

**MURRAY**  
**FEISS**

Generation Brands™