

DETAIL A
SCALE 1 : 1

SHELF

WALL CLEAT

A

SHELF BRACKET

Installation Instructions


Product name WALL MOUNTED SHELVING

Model SW1842

TOOLS NEEDED
- Phillips Screw driver

HARDWARE INCLUDED
- 8 pcs. drywall screws plus insert
- 2 pcs. wall cleat

INSTALLATION STEPS
1. Install wall cleats at desired height with supplied hardware.
2. Install shelving unit in place, by sliding over wall cleat.
3. Attach self bracket into aluminum profile.
4. Install shelves.

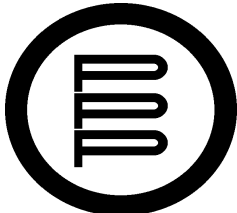

17929 S. Susana Road, Compton, CA 90224
Phone 800.496.0204 Phone 310.639.0390 Fax 310.639.6013
 www.peterpepper.com e-mail: info@peterpepper.com