


# QUOIZEL

6 CORPORATE PARKWAY  
GOOSE CREEK, SC. 29445  
www. quoizel. com

## ASSEMBLY INSTRUCTIONS

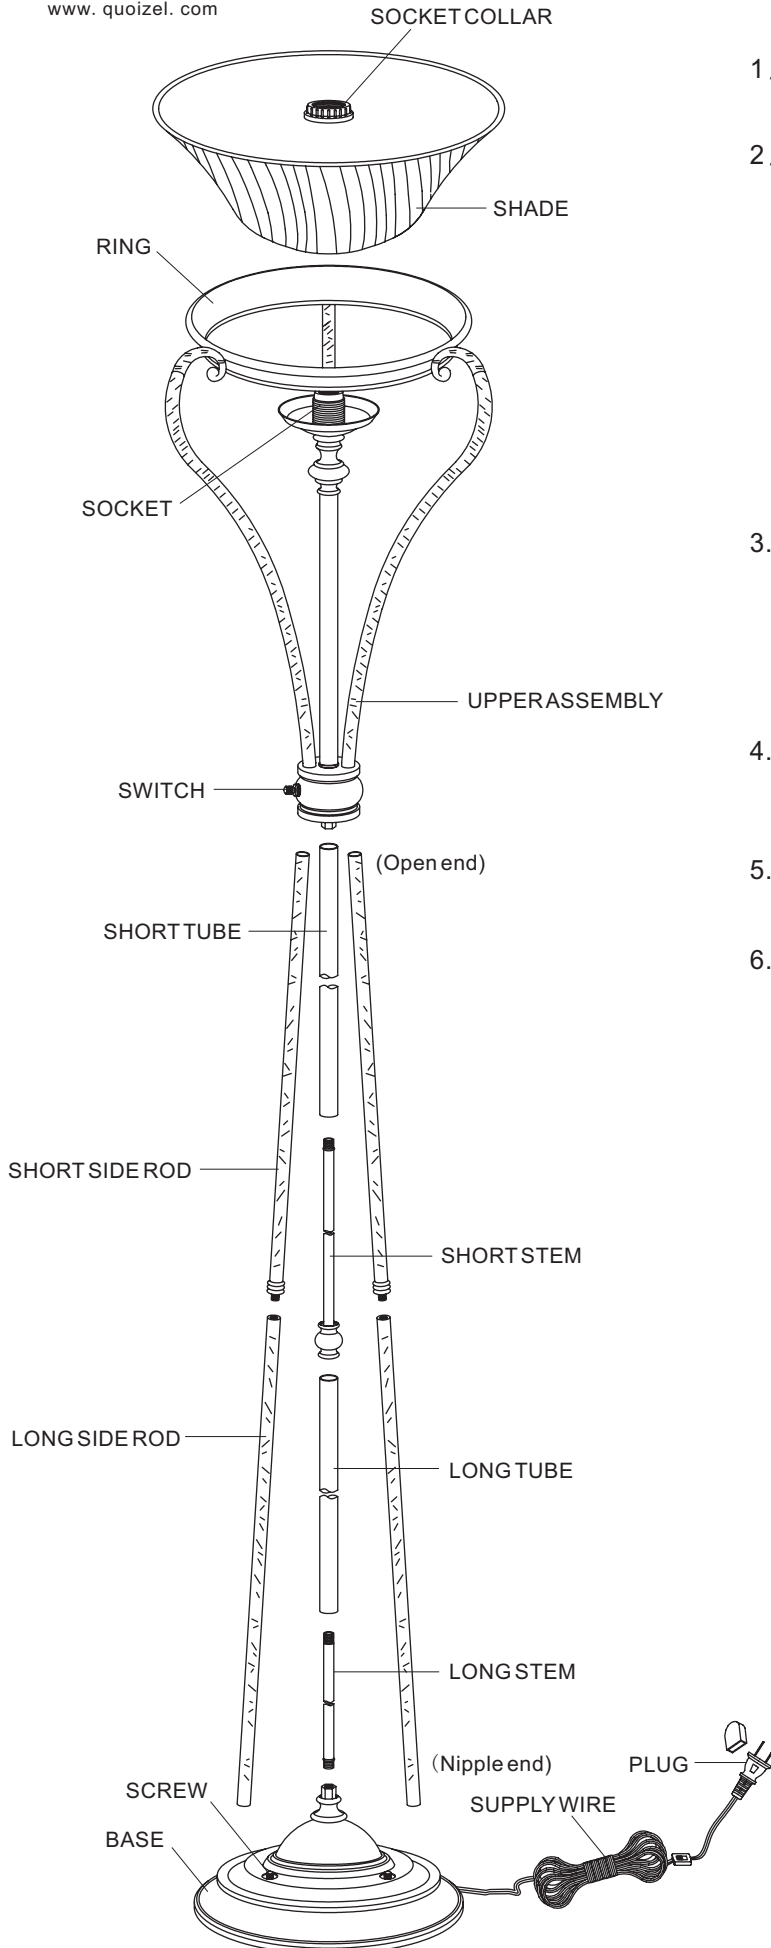

1. Before beginning the assembly, carefully unpack and identify all parts, referring to the illustration.
2. Position the BASE onto a flat floor surface. Thread the beaded end of the LONG STEM into the hex coupling on the top end of the BASE. Hand tighten until snug. Position the LONG TUBE over the LONG STEM and thread the end of the SHORT STEM onto the top end of the LONG STEM to tighten them together. Proceed to position the SHORT TUBE over the top end of the SHORT STEM and thread the UPPERASSEMBLY onto the top end of the SHORT STEM to secure them. Hand tighten until snug. **Please make sure the holes on the bottom of the UPPERASSEMBLY line up the SCREWS on the BASE.**
3. Thread the SHORT SIDE ROD and the LONG SIDE ROD together. Tighten until snug. Position the open end of the SIDE RODS through the hole on the bottom of the UPPERASSEMBLY. And then drop down the SIDE RODS and thread the nipple end onto the SCREWS on the BASE. Hand tighten until snug.
4. Position the SHADE over SOCKET as shown. Secure the SHADE by threading the SOCKET COLLAR onto the SOCKET. Hand tighten until snug.
5. Install bulb referring to the fixture markings and/or labels for maximum wattage.
6. Plug the SUPPLY WIRE into the OUTLET BOX. Retain this sheet for future reference.