


QUOIZEL

6 CORPORATE PARKWAY
GOOSE CREEK, SC. 29445
www.quoizel.com

ASSEMBLY INSTRUCTIONS

Note:

The SOCKET COLLAR TOOL (supplied) can be used for candelabra base and medium base socket rings depending on the style of luminaires.

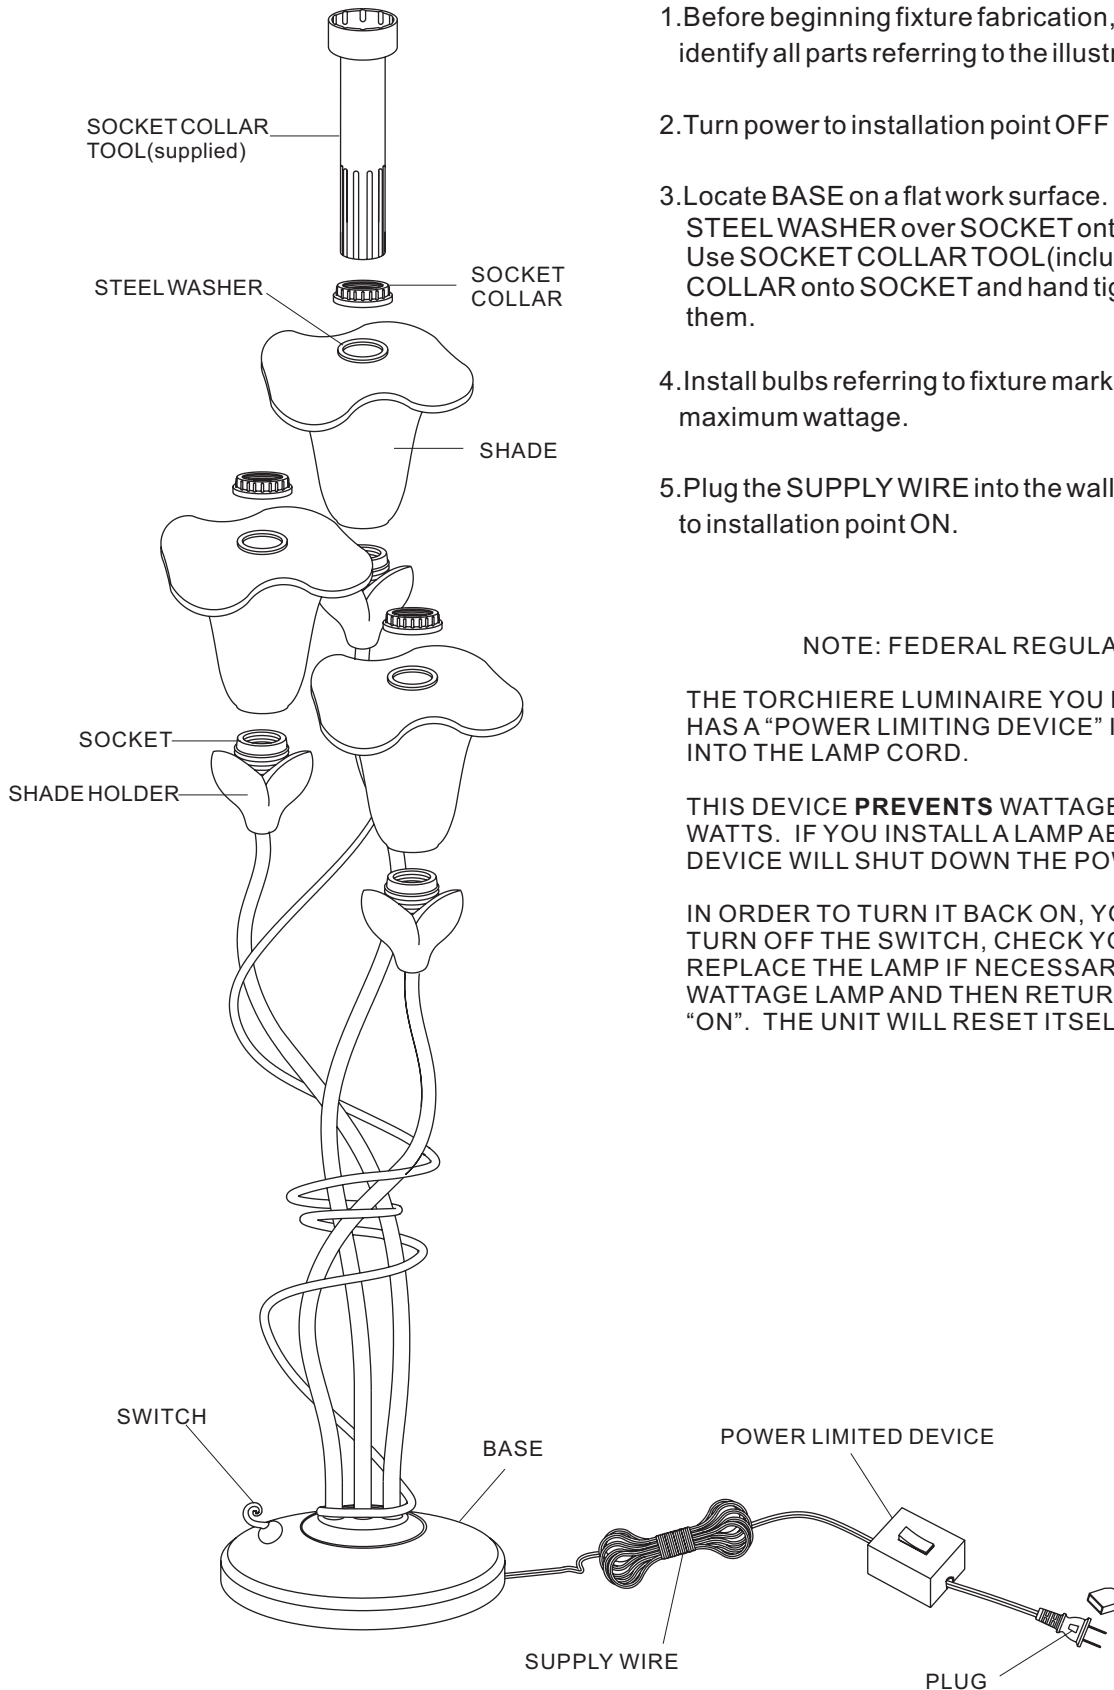

1. Before beginning fixture fabrication, carefully unpack and identify all parts referring to the illustration.
2. Turn power to installation point OFF at circuit breaker.
3. Locate BASE on a flat work surface. Position SHADE and STEEL WASHER over SOCKET onto SHADE HOLDER. Use SOCKET COLLAR TOOL (included), thread SOCKET COLLAR onto SOCKET and hand tighten until snug to secure them.
4. Install bulbs referring to fixture markings and/or labels for maximum wattage.
5. Plug the SUPPLY WIRE into the wall outlet. Turn power to installation point ON.

NOTE: FEDERAL REGULATION

THE TORCHIERE LUMINAIRE YOU HAVE PURCHASED HAS A "POWER LIMITING DEVICE" INCORPORATED INTO THE LAMP CORD.

THIS DEVICE **PREVENTS** WATTAGES HIGHER THAN 180 WATTS. IF YOU INSTALL A LAMP ABOVE 180 WATTS, THE DEVICE WILL SHUT DOWN THE POWER TO THE UNIT.

IN ORDER TO TURN IT BACK ON, YOU WILL HAVE TO TURN OFF THE SWITCH, CHECK YOUR LAMP WATTAGE, REPLACE THE LAMP IF NECESSARY WITH A LOWER WATTAGE LAMP AND THEN RETURN THE SWITCH TO "ON". THE UNIT WILL RESET ITSELF IN A FEW SECONDS.