


QUOIZEL

6 CORPORATE PARKWAY
GOOSE CREEK, SC. 29445
www.quoizel.com

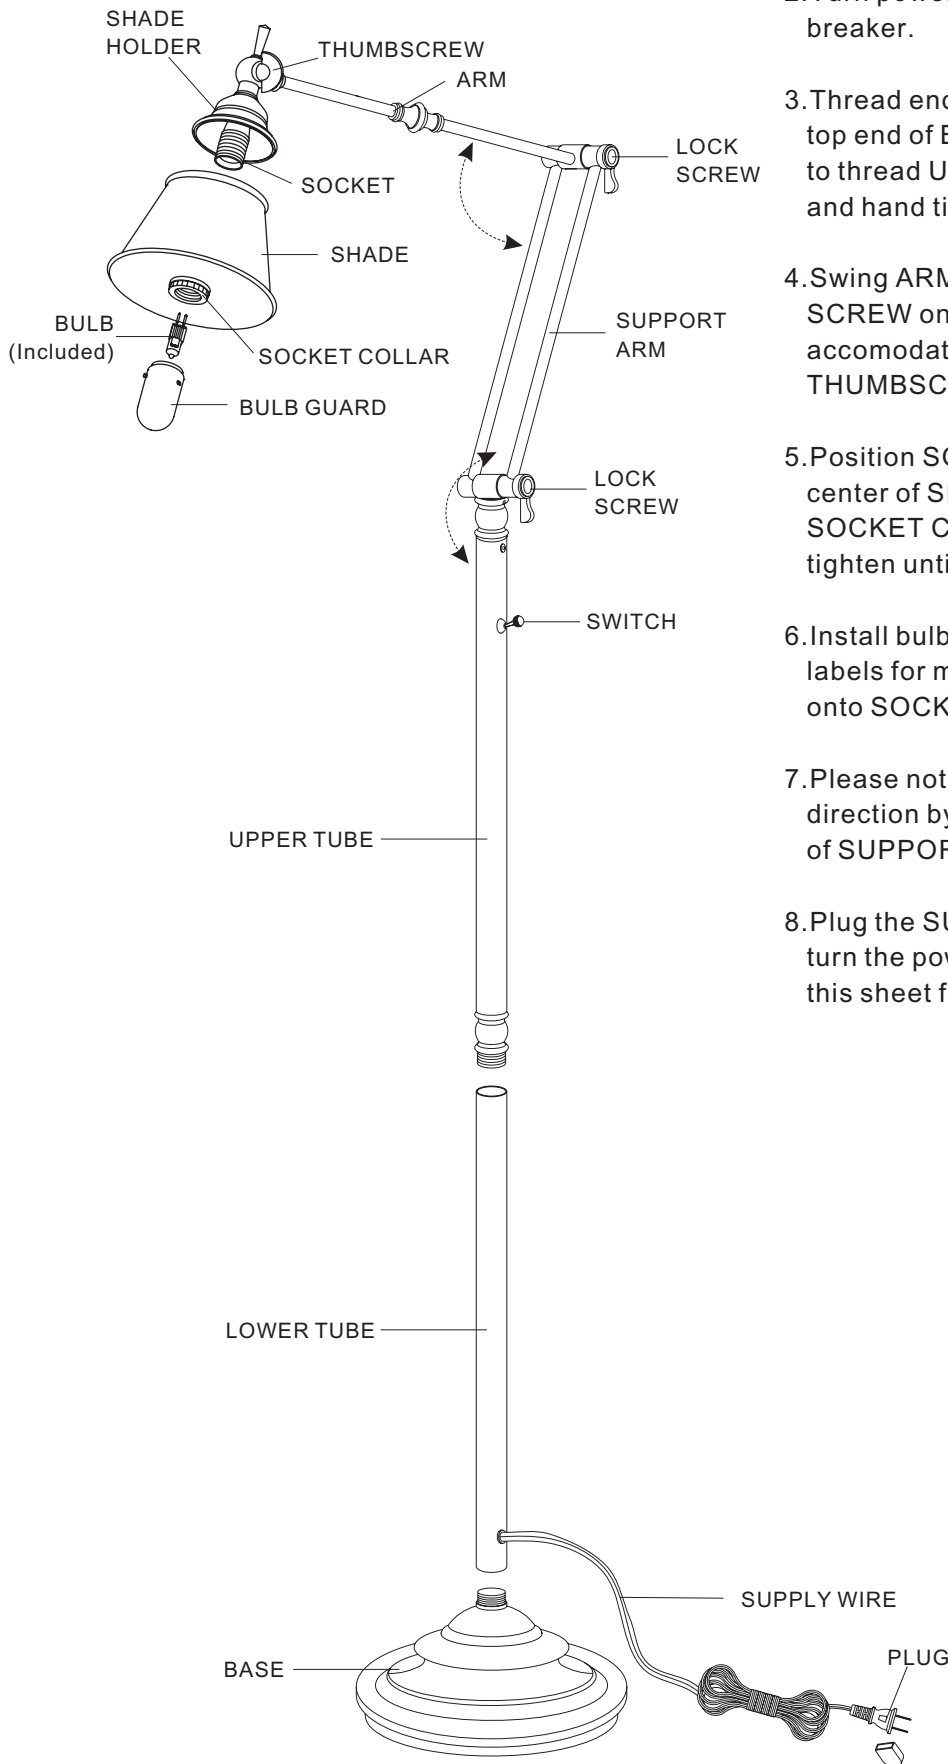

ASSEMBLY INSTRUCTION

1. Before beginning the assembly, carefully unpack and identify all parts referring to the illustration.
2. Turn power to the installation point OFF at circuit breaker.
3. Thread end of LOWER TUBE onto nipple on the top end of BASE. Hand tighten until snug. Proceed to thread UPPER TUBE and LOWER TUBE together and hand tighten until snug.
4. Swing ARM to desired location by adjust LOCK SCREW on the top end of SUPPORT ARM. And accommodate SOCKET direction by adjust THUMBSCREW on the bottom of SHADE HOLDER.
5. Position SOCKET through the hole on the bottom center of SHADE. Secure SHADE by threading SOCKET COLLAR onto SOCKET and hand tighten until snug.
6. Install bulb referring to fixture markings and/or labels for maximum wattage. Thread BULB GUARD onto SOCKET and hand tighten until snug.
7. Please note: You also can accommodate lamp direction by adjusting LOCK SCREW on the end of SUPPORT ARM.
8. Plug the SUPPLY WIRE into the wall outlet and turn the power to the installation point ON. Retain this sheet for future reference.