


INSTALLATION INSTRUCTIONS

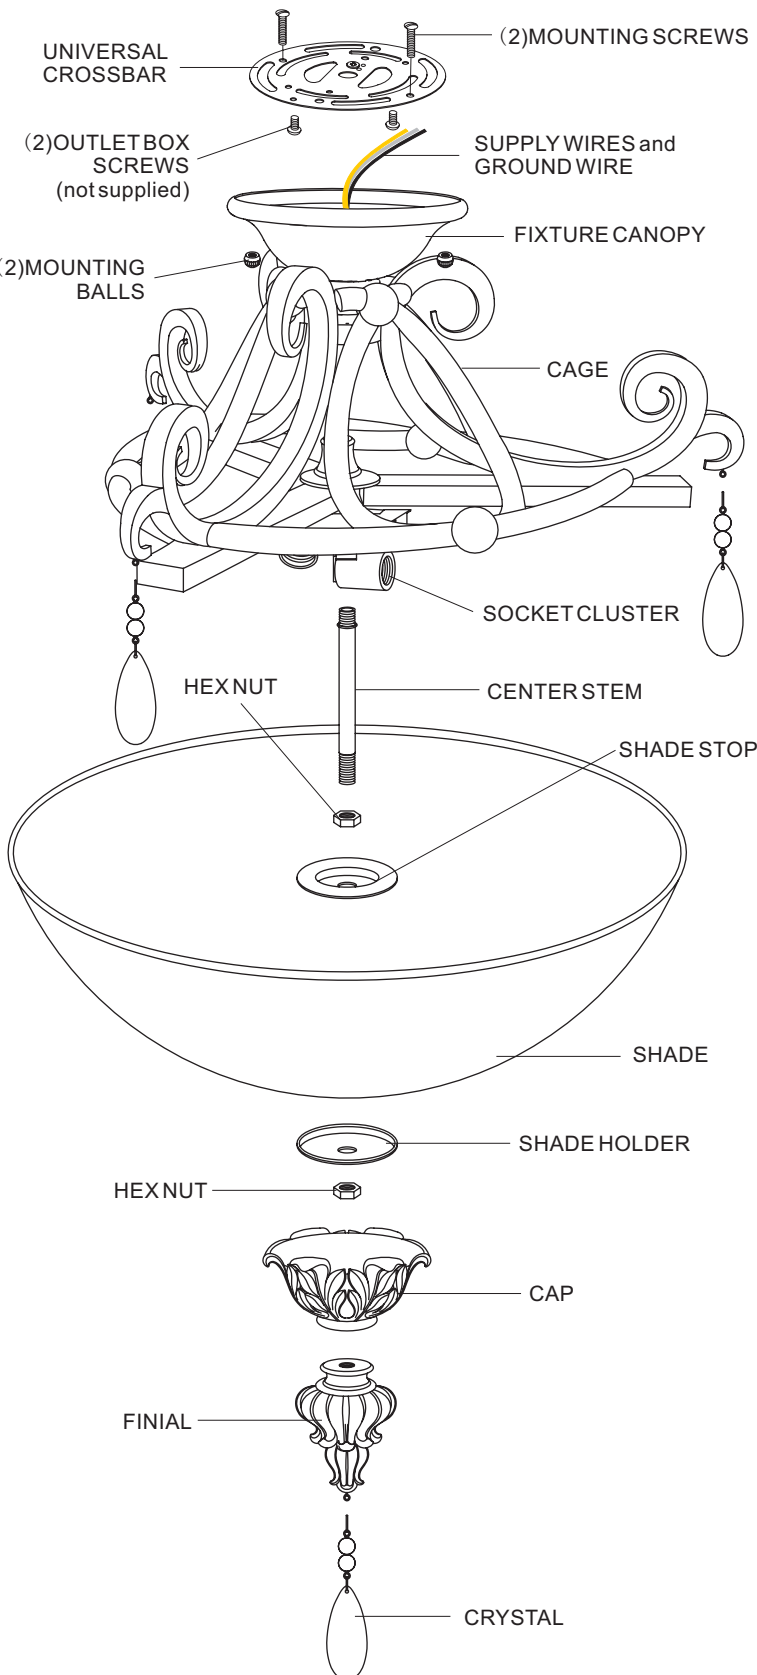

1. Before beginning the installation , carefully unpack and identify all parts , referring to the illustration.

2. Turn the electrical power to installation point OFF at the circuit breaker.

3. Locate the (2) MOUNTING SCREWS and thread them into the back of the UNIVERSAL CROSSBAR , making sure that they match the holes in the FIXTURE CANOPY . Using (2) OUTLET BOX SCREWS (not supplied) , fasten the UNIVERSAL CROSSBAR to the OUTLET BOX .

4. **MAKING THE WIRING CONNECTIONS:** Using wire connectors (not supplied) connect the HOUSE GROUND WIRE to the FIXTURE GROUND WIRE ; connect the HOUSE WHITE WIRE to the FIXTURE SUPPLY WIRE (WHITE or RIBBED SIDE) ; connect the HOUSE BLACK (or RED) WIRE to the FIXTURE SUPPLY WIRE (BLACK or SMOOTH SIDE) . Wrap each connection with approved electrical tape.

5. Carefully tuck all of the wiring up into the outlet box , and fit the FIXTURE CANOPY over the MOUNTING SCREWS . Secure the FIXTURE CANOPY to the ceiling with the (2) MOUNTING BALLS , making sure that the balls are fully threaded onto the MOUNTING SCREWS before tightening .

6. Thread one end of the CENTER STEM into the coupling underside of the SOCKET CLUSTER . Hand tighten until snug . Proceed to thread one HEX NUT onto the end of the CENTER STEM and adjust to proper location for the rest components .

7. Locate the SHADE STOP , SHADE , SHADE HOLDER over the end of the CENTER STEM and secure with the another HEX NUT . Hand tighten until snug . Proceed to thread the FINIAL onto the end of the CENTER STEM . Hand tighten until snug .

8. Position the CRYSTALS onto the FINIAL and CAGE as shown .

9. Install the correct bulbs referring to the fixture markings and/or labels for maximum wattage .

10. Restore power to installation point ON . Retain this sheet for future reference .