

# INSTRUCTIONS:


## Quick Connect Canopies Models: QMP-M4SQ and QMP-G4SQ

### CAUTION:

Always turn off power at fuse box prior to installation to prevent electrical shock.  
For installation by a qualified electrician.  
Line voltage wire must be 12awg BX or Romex wire.  
Install over a standard 4 inch junction box.  
All wires must be contained in the junction box.

**Overview:** Canopies are designed to fit all W.A.C quick connect fixtures. They may also be used on other manufacturers brand of quick connect (consult factory for compatibility). Uses four fixtures or pendants, 50 watts max each.  
Canopies come with self-contained electronic transformers that can generally be used with standard incandescent dimmer switches.

1. Loosen the canopy screws and separate the canopy from the base plate.
2. Remove a knock out from the base plate.
3. Support canopy and guide the black and white wires and from the transformer through the knock out in the base plate and into the Junction box.
4. Connect ground wire from junction box to the green grounding wire from the base plate.
5. Connect corresponding line volt wires from the junction box to transformer wires, with wire nuts (supplied). Tuck excess wire into the junction box.
6. Attach the base plate to the junction box using the slotted holes.
7. Raise the canopy to the base plate, and tighten the three screws loosened earlier.

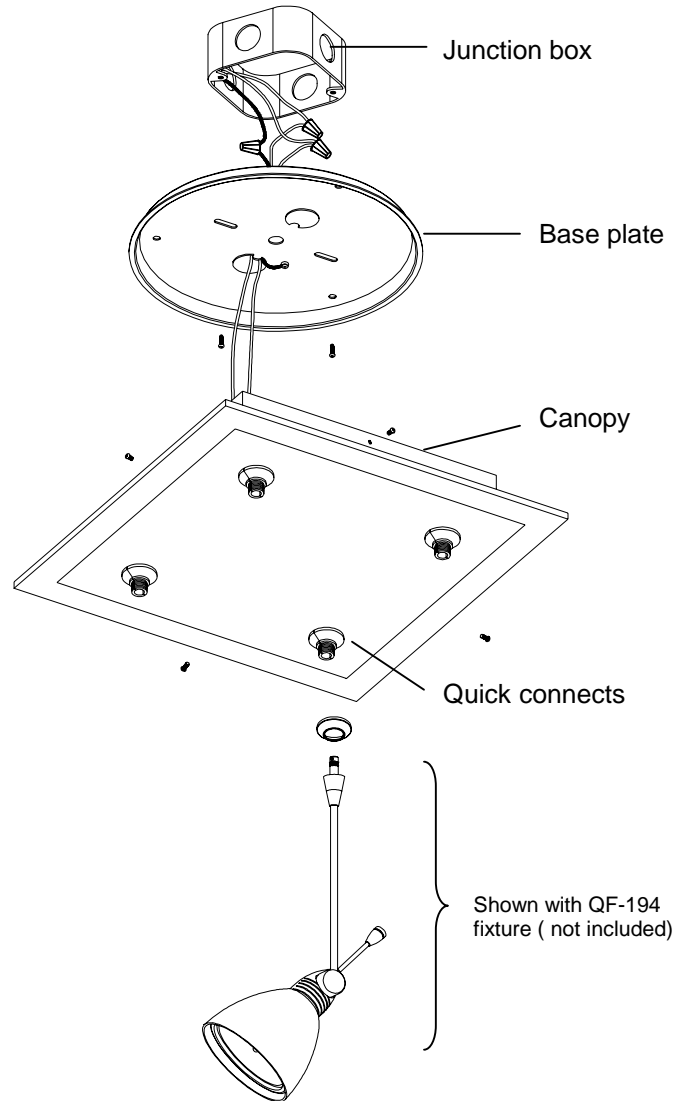

Retain instructions for future reference.



W • A • C | LIGHTING

[www.waclighting.com](http://www.waclighting.com)

615 South Street, Garden City, NY 11530  
Tel: (516) 515-5000 Fax: (516) 516-5050

168 Brea Canyon Road, City of Industry, CA 91789  
Tel: (909) 468-1848 Fax: (909) 468-9958

2/11/03 REV 1