


Parcel Locker

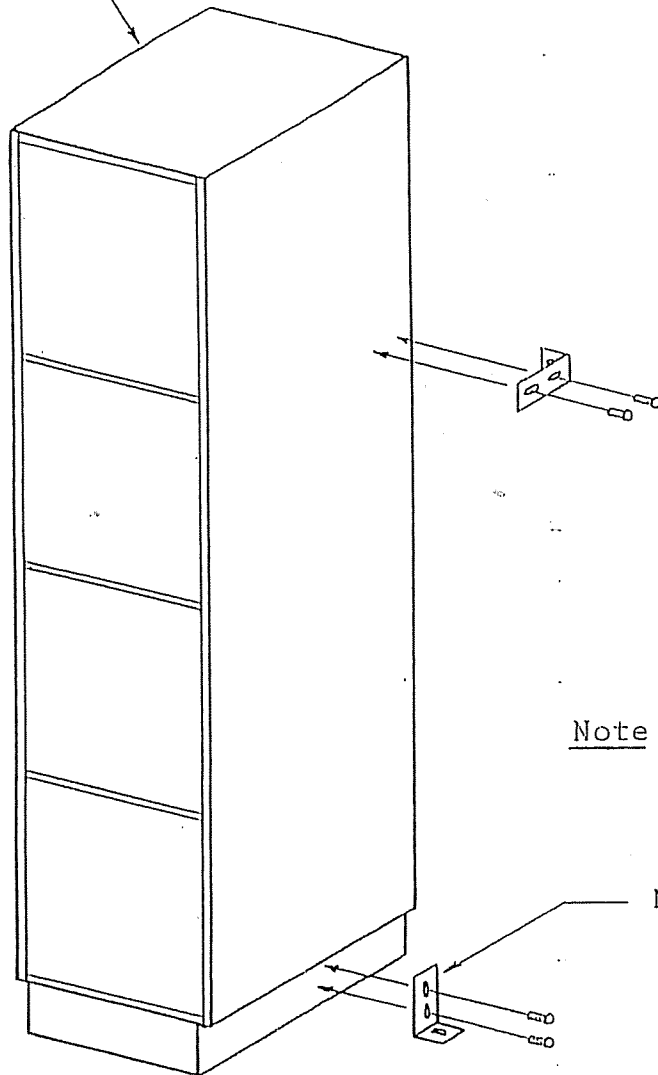

FRONT VIEW

## INSTALLATION INSTRUCTIONS

### FOR FREE STANDING PARCEL LOCKER

To secure locker, determine whether to wall mount or floor mount. Place locker in desired position. Hold both mounting angles up to locker (side or base) and mark all hole locations. Anchor mounting angles to wall (or floor) first, then place locker into position.

Make sure parcel locker is square and plumb or doors will not open and close properly. Secure mounting angles to locker.

Note: No mounting screws are provided by Cutler.

Mounting Angle (TYP.)

AUTH **AF** FLORENCE

5935 CORPORATE DRIVE, MANHATTAN, KANSAS 66503

[www.auth-florence.com](http://www.auth-florence.com)

(800) 275-1747