

SVAN® Chair Infant Kit Assembly Instructions


⚠ WARNING

IMPORTANT! RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE!


- ⚠ Prevent serious injury or death from falls or sliding out.
- ⚠ Always secure children under three (3) years old in the restraint system. The tray is not designed to hold the child in the chair.
- ⚠ Always keep child in view while in high chair. Never leave child unattended in the high chair.
- ⚠ It is recommended that the high chair be used only by children who are capable of sitting upright unassisted.
- ⚠ Read this owner's manual before using this product. Failure to follow all warnings and instructions may result in serious injury or death.
- Do not use the chair if any part appears damaged, broken or missing.
- Do not use the chair unless all components are correctly fitted and adjusted.
- Be aware of the risk of open fire and other sources of strong heat, such as electric heaters, in the vicinity of the chair.
- Do not mount the footrest in its lower groove / outer setting position, because the chair may tip forward. (See Footrest Adjustment Warning in the Chair Instructions for details.)
- Clean the chair with a damp cloth or cleaner that is suitable for wooden furniture.
- Do not remove the tape that secures the Harness to the Main Beam until the chair is fully assembled. When assembled, the harness loop should be attached to the Main Beam between the Backrest and Seat Base.
- When attaching tray for child use, be careful of children's fingers. It is recommended that you attach the tray before seating the child.
- Do not carry the chair with child seated or by the tray.

The Svan Chair provides safe, individualized seating!

The Svan Chair has a Safety Guard that can be easily adjusted to insert and remove a child.

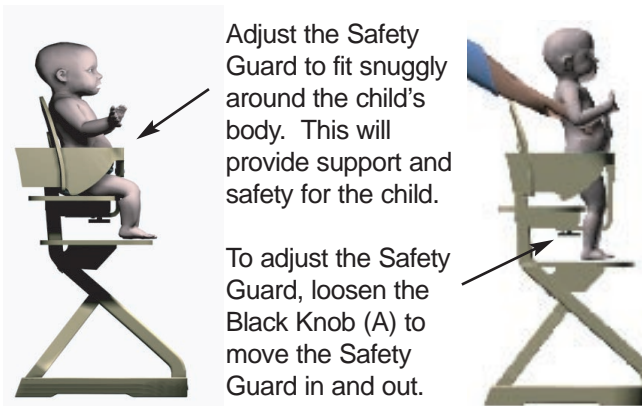


The Svan seat is adjustable for both height and depth.

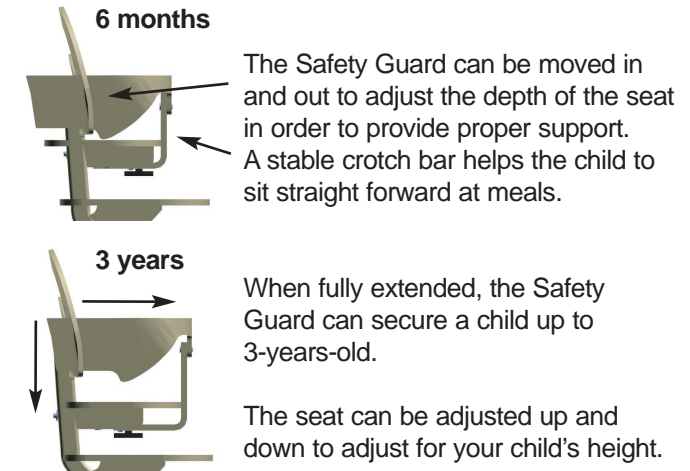

The Svan Chair makes cleaning easy!




The Svan Chair is light and easy to carry.

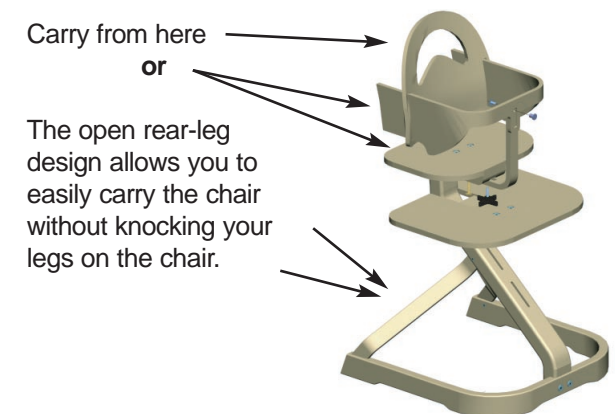

SVAN[®] Chair Infant Kit Assembly Instructions

Safety Guard Assembly and Installation

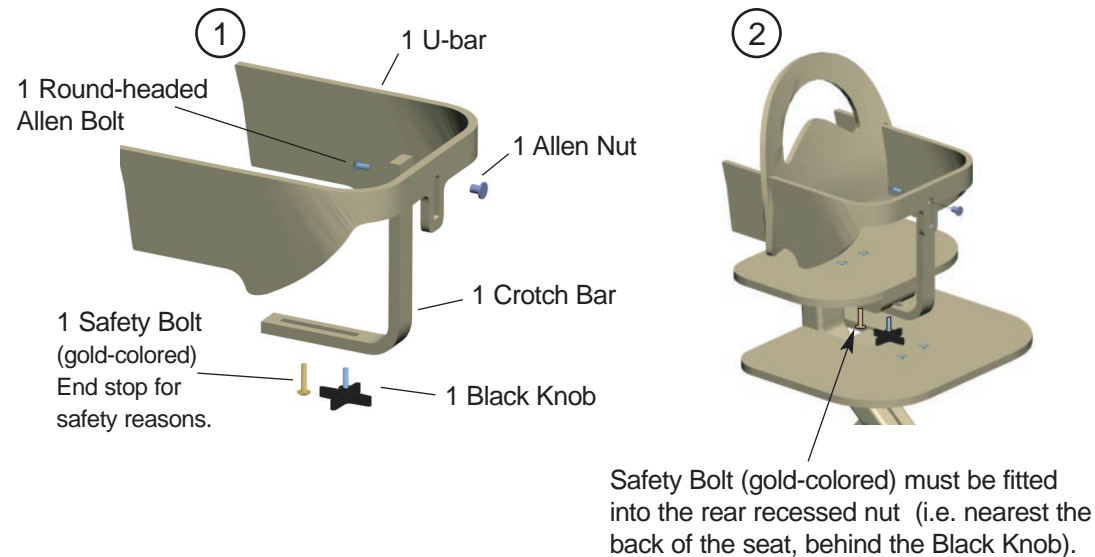


To attach the Safety Guard, start by moving the Seat within 1 inch of the highest position on the Main Beam. Mount and secure the Crotch Bar under the seat by inserting the Safety Bolt through the Crotch Bar into the back recessed nut in the Seat Base (closest to the back of the chair). Do not over-tighten. The safety bolt will not screw completely into the nut. Its purpose is to ensure that the Safety Guard does not become detached when it is adjusted to fit the child (Diagrams 1 and 2).

Insert the Black Knob in the front recessed nut through the Crotch Bar. This knob will allow you to loosen the Safety Guard to insert and remove the child in the seat (Diagrams 2 and 3).


Insert the sides of the U-bar into the openings in the Chair Backrest. Loosely attach the U-bar to the Crotch Bar by inserting the Round-headed Allen Bolt through the back and secure from the front with the Allen Nut (Diagram 2), align the U-Bar so it is straight, then tighten the Allen Nut that secures the Crotch Bar to the U-bar.

Be sure to adjust the Seat and Safety Guard to heights that are compatible (Diagram 3).

Refer to the Svan Chair Instructions for chair adjustment examples.

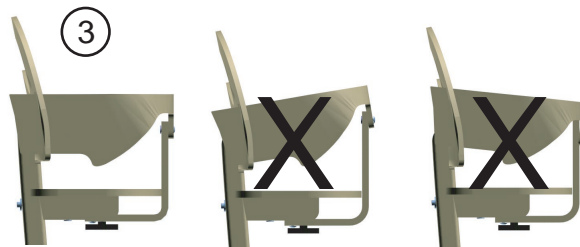

Tray Assembly and Installation

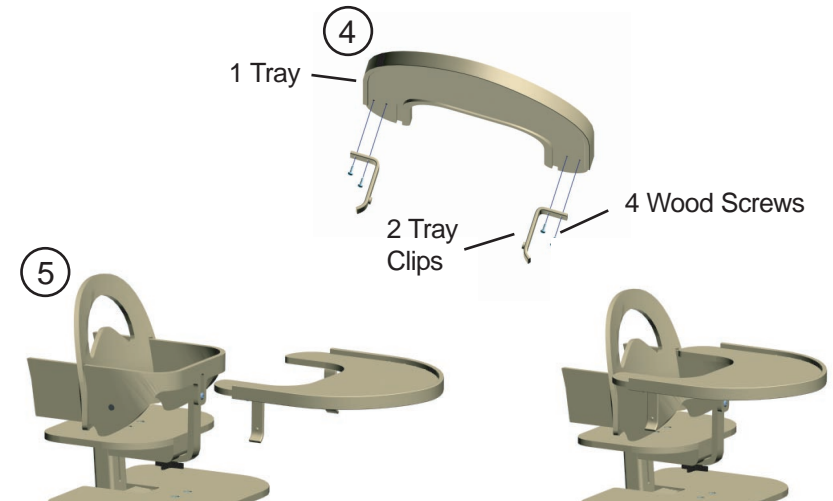

Svan is distributed in North America by:
Scandinavian Child, Inc.
Raleigh, NC
www.ScandinavianChild.com
1-866-Svan-Baby (782-6222)
Model: USI001 and USS001
Designed in Sweden. Manufactured in Latvia.



QUESTIONS? Call 1-866-Svan-Baby (782-6222)