SONNEMAN®
A WAY OF LIGHT

Assembly Instructions for: items 3205/3206/3207/3208
Suspended Glass series - Bath Bars

This light should be installed by a licensed electrician

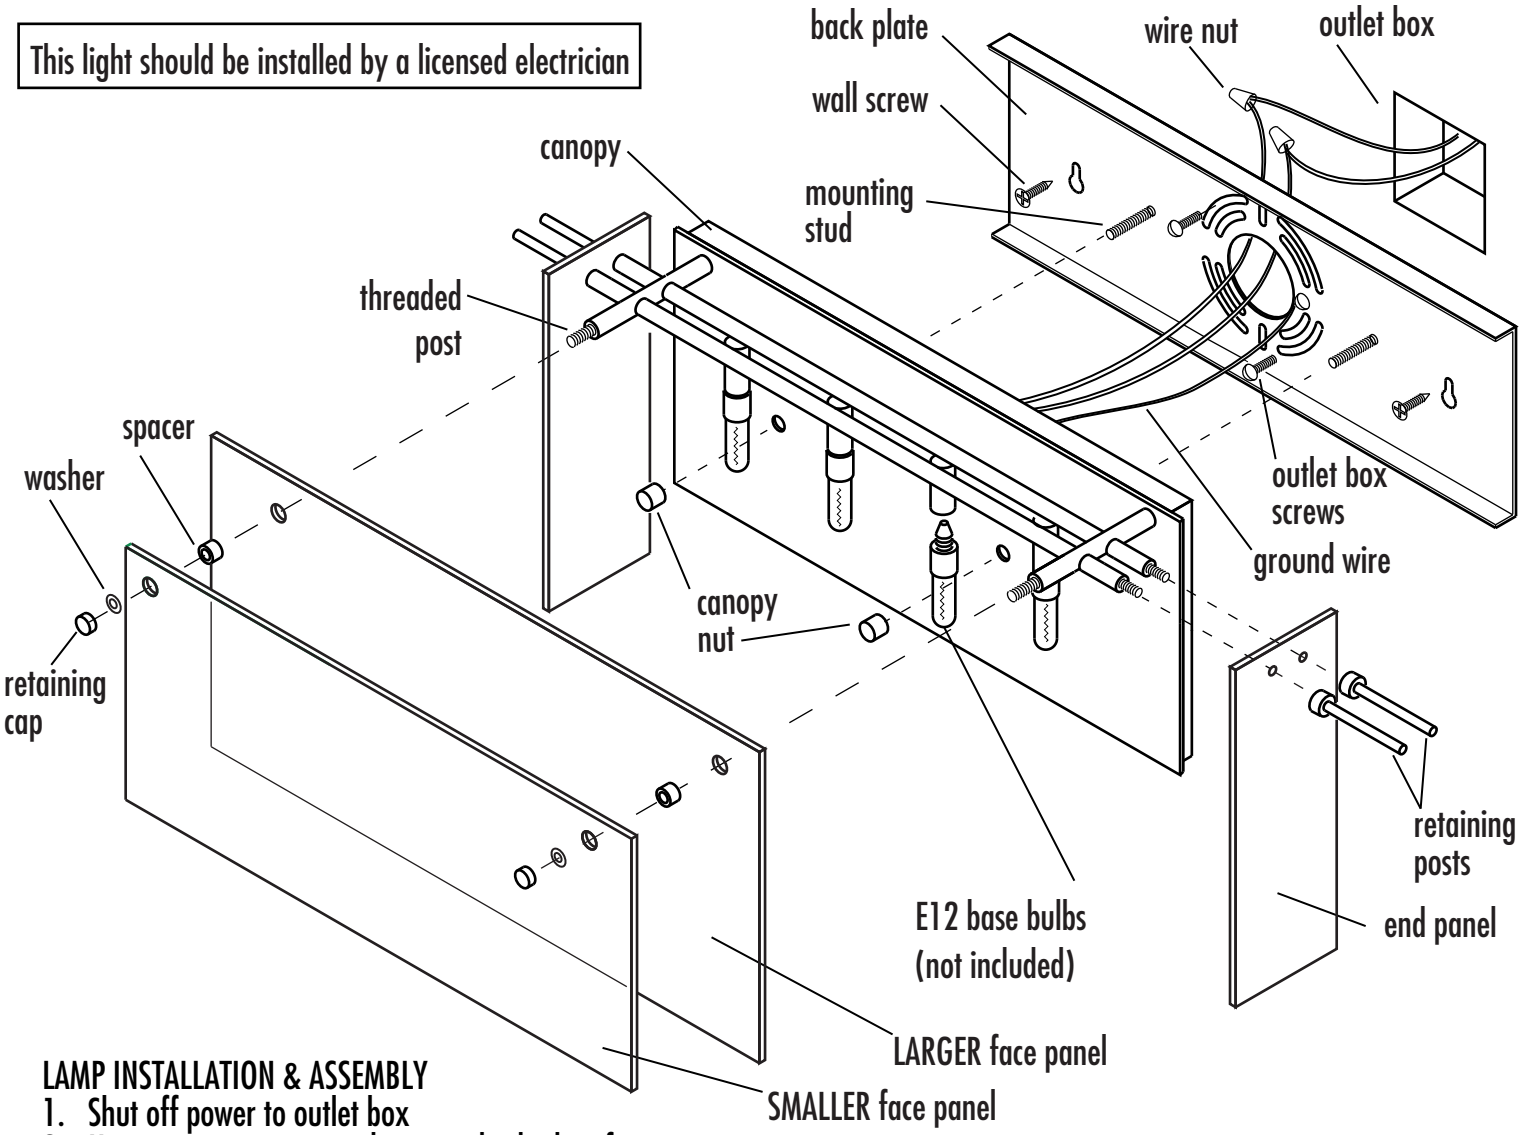

LAMP INSTALLATION & ASSEMBLY

1. Shut off power to outlet box
2. Unscrew canopy nuts and remove back plate from canopy
3. Center back plate over outlet box in desired position and mark location of keyholes.
4. Install appropriate wall anchors at the marked locations.
5. Feed wires from fixture body through the center hole of the back plate.
   Make appropriate electrical connections. The bare wire is the ground wire and must be connected to a grounding terminal or a ground wire in the outlet .It is important that these connections are well insulated to prevent short circuits. Place connections in outlet box.
6. Secure backplate to the outlet box and to the wall with screws.
7. Place Fixture body over the studs of the back plate. Secure with canopy nuts.
8. Install E12 candelabra base bulbs (not included). A frosted bulb is preferred.
9. Carefully place end panels on fixture and secure with retaining posts.
10. Remove the retaining cap and the spacer from each of the threaded posts on the sides of the fixture.
11. Carefully place the two LARGER face panels on the fixture.
12. Place the four spacers on the four posts.
13. Carefully place the two SMALLER face panels on the fixture.
14. Secure the panels with the four retaining caps and washers. DO NOT OVERTIGHTEN - the glass may crack.